Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Wolmund SJ-B-2

Wolmund Toy Learning Play Cell Phone Model SJ-B-2 Instruction Manual

Model: SJ-B-2

Introduction Setup Operation Features Maintenance & Support Troubleshooting Specifications Warranty

1. Introduction

This manual provides instructions for the Wolmund Toy Learning Play Cell Phone, Model SJ-B-2. This device is designed to provide an interactive and educational experience for toddlers and babies aged 0-3 years, featuring various modes, lights, and sounds.



Image: Wolmund Toy Learning Play Cell Phone, front view.

Key Features:

- 8 interactive modes: Mobile, Piano, Color, Fruit, Drum, Game, Maths, and Question modes.
- Soft, colorful LED lights and adjustable volume for sensory engagement.
- Rechargeable design via USB.
- Made from durable ABS material with a frosted surface and rounded edges for safety.
- Compact size (4.9 x 2.3 x 0.3 inches) and lightweight (1.4 oz) for easy handling by small hands.

2. Setup

2.1 Charging the Device

The Wolmund Toy Learning Play Cell Phone features a rechargeable battery. Before first use, or when the battery is low, charge the device using the provided USB cable.

1. Locate the charging port on the side of the device.
2. Connect the USB charging cable to the device's charging port.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, wall adapter).
4. Allow the device to charge fully. A full charge provides approximately 8 hours of play.



Image: Close-up of the toy phone showing the USB charging port and the power switch button.

2.2 Powering On/Off

To turn the device on or off, use the power switch located on the side of the phone, near the charging port.

3. Operating Instructions

The toy phone features a touch-sensitive screen with various icons representing different modes and functions. Press the icons to activate sounds, lights, and interactive features.



Image: A hand interacting with the toy phone, demonstrating the touch screen and illuminated sides.

3.1 Mode Selection

The phone offers 8 distinct modes. To switch between modes, press the gear icon (settings icon) on the screen. Each mode provides unique interactive content.



Image: A visual representation of the 8 modes: Mobile, Piano, Color, Fruit, Drum, Game, Maths, and Question Mode.

3.2 Interactive Functions

Within each mode, the numbered icons (0-9) and the question mark/star icon activate specific sounds or phrases. Refer to the table below for details on each mode's functions.

FUNCTION INTRODUCTION

Each Mode Includes 0-9 and ? Button

Mode Switch	0-9 Button	Question or Music
Mobile Mode	10 Dial Sound Effects	3 Mobile Ringtones
Piano Mode	10 Piano Pieces	Switch Piano Piece
Color Mode	10 Color Words	Question Mode
Fruit Mode	10 Fruit Words	Question Mode
Drum Mode	10 Drum Sound Effects	1 Drum Piece
Game Mode	10 Game Sound Effects	5 Songs
Math Mode	10 Number Words	Question Mode

Image: A table outlining the specific sounds and interactions for the 0-9 buttons and the Question/Music button in each of the 8 modes.

Function Introduction by Mode

Mode	0-9 Button Function	Question or Music Button Function
Mobile Mode	10 Dial Sound Effects	3 Mobile Ringtones
Piano Mode	10 Piano Pieces	Switch Piano Piece
Color Mode	10 Color Words	Question Mode
Fruit Mode	10 Fruit Words	Question Mode
Drum Mode	10 Drum Sound Effects	1 Drum Piece
Game Mode	10 Game Sound Effects	5 Songs
Math Mode	10 Number Words	Question Mode

4. Product Features

4.1 Visual and Auditory Experience

The toy phone incorporates soft, colorful LED lights that illuminate the edges of the device, providing visual stimulation. The adjustable volume ensures a comfortable listening experience for children.

4.2 Durable and Safe Design


Constructed from ABS material, the phone features a frosted surface and rounded edges to prevent injury. Its robust build is designed to withstand typical toddler play.



Image: A close-up view emphasizing the smooth, rounded edges of the toy phone for child safety.

4.3 Compact Size

With dimensions of 4.9 x 2.3 x 0.3 inches and a weight of 1.4 ounces, the phone is sized for easy grasping and manipulation by small hands.

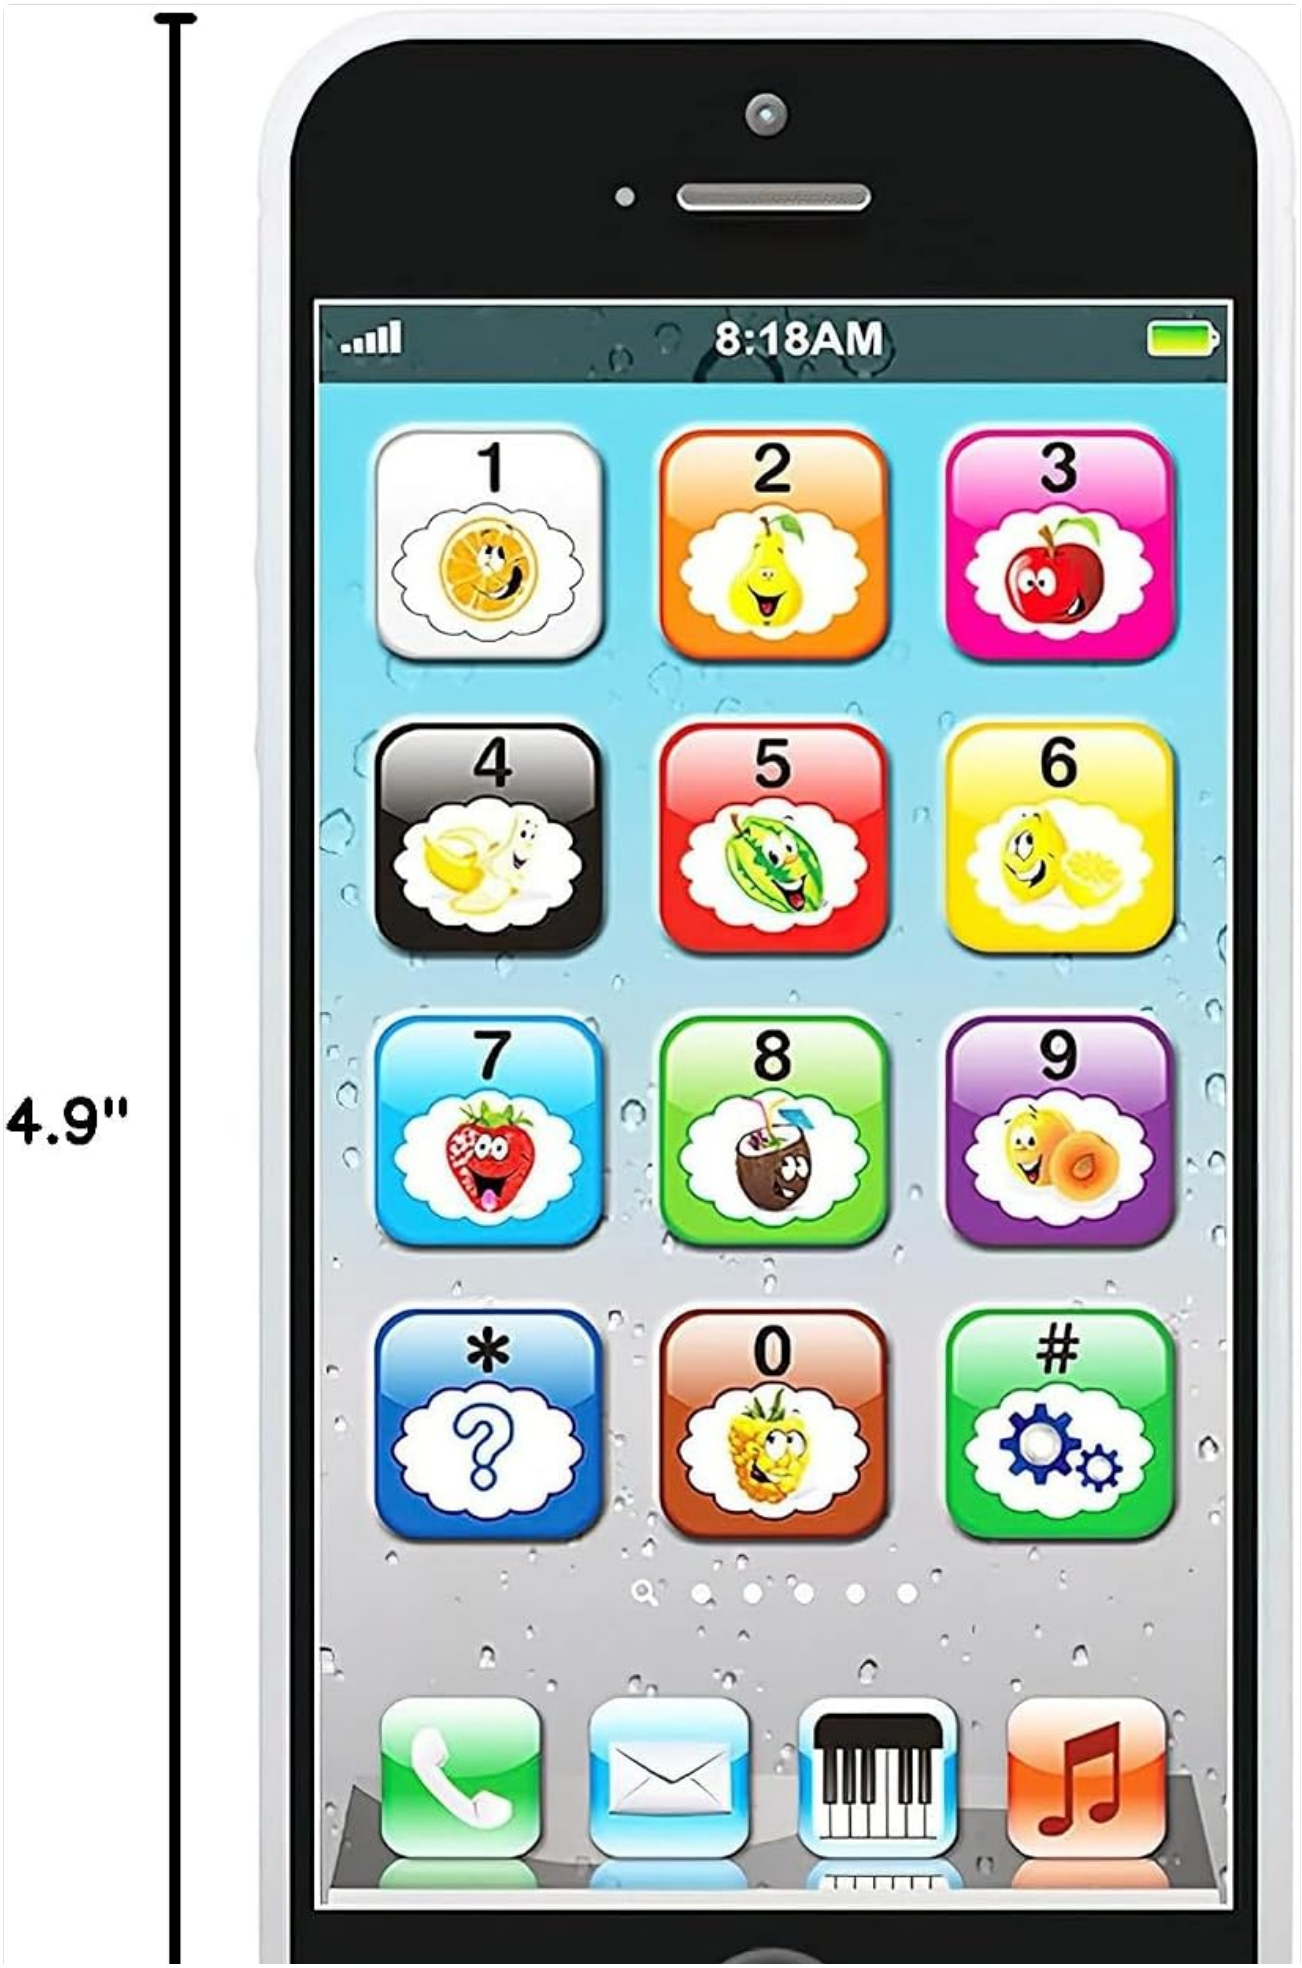

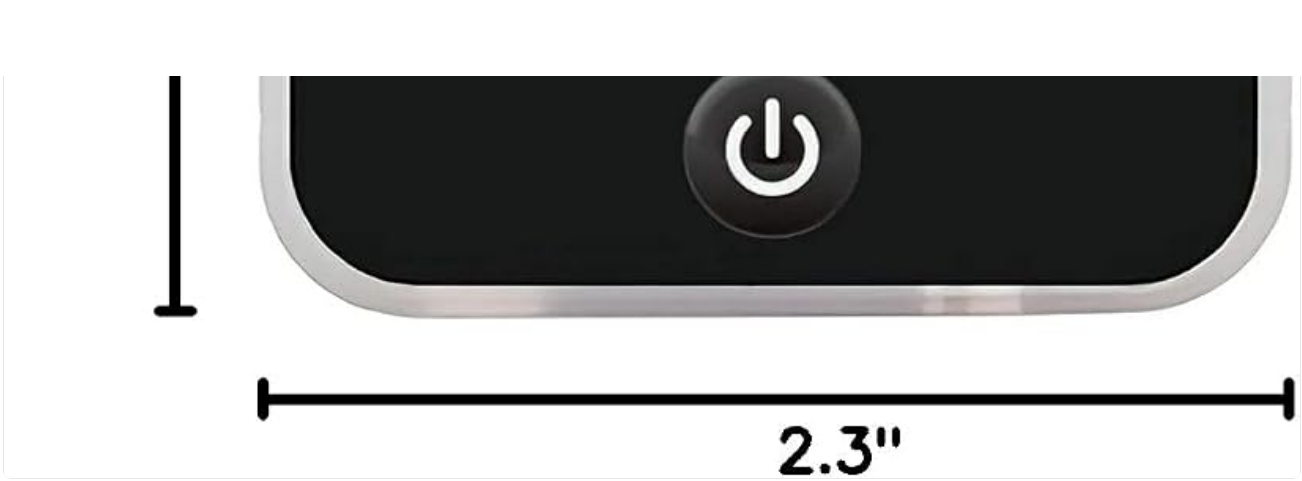


Image: The toy phone displayed with its length (4.9") and width (2.3") clearly marked.

5. Maintenance

To maintain the toy phone, wipe it with a soft, damp cloth. Do not immerse the device in water or use harsh cleaning agents. Ensure the charging port is dry before connecting the USB cable.

6. Troubleshooting

- **Device not turning on:** Ensure the battery is charged. Connect the device to a power source using the USB cable and allow it to charge for at least 30 minutes before attempting to power it on again.
- **No sound or lights:** Check the power switch to ensure the device is on. If the battery is low, charge the device.
- **Buttons unresponsive:** Ensure the device is powered on. If the issue persists, try turning the device off and on again.

7. Specifications

Feature	Detail
Product Dimensions	2.3 x 0.01 x 4.9 inches
Item Weight	1.4 ounces
Model Number	SJ-B-2
Recommended Age	0 - 3 years
Manufacturer	Wolmund

8. Warranty & Support

For warranty information or product support, please refer to the packaging or contact Wolmund customer service directly. Keep your purchase receipt for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BCFF67RM

More documents and user manuals: **https://manuals.plus/**