Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

MAF MT09-JD-AMZ01-14F

MAF 14 Inch Metal Platform Full Size Bed Frame Instruction Manual

Model: MT09-JD-AMZ01-14F

Introduction

This manual provides detailed instructions for the assembly, use, and maintenance of your MAF 14 Inch Metal Platform Full Size Bed Frame. Designed for durability and ease of use, this heavy-duty bed frame offers robust support for your mattress without the need for a box spring, along with ample under-bed storage.

Safety Information

WARNING:

- Do not load more than 2500 lbs (1134 kg) on the bed frame. Exceeding this weight limit may cause damage to the frame and potential injury.
- Ensure all bolts are securely tightened before use. Periodically check and re-tighten all connections.
- Keep small parts away from children during assembly.
- Assemble on a soft, clean surface to prevent scratching the frame or floor.

Parts List

Before beginning assembly, ensure all parts are present and accounted for. Refer to the diagram below for identification.

- Bed Frame Components (various metal sections)
- Steel Slats
- Hardware (Screws, Bolts, Washers, Nuts)
- Assembly Tools (Allen Wrench, Spanner)
- Anti-skid Baffles
- Anti-Slip Rubber Pads for legs



Figure 1: Exploded view of all bed frame components and included hardware.

Setup and Assembly

The MAF bed frame is designed for quick and easy assembly, typically taking around 20 minutes. It is recommended to have two people for assembly.

1. **Unpack and Identify:** Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches. Identify each part using the provided parts list and diagrams.
2. **Assemble Frame Sections:** Connect the main frame sections using the provided bolts and the included tools. Do not fully tighten bolts until all sections are loosely assembled.
3. **Attach Center Supports:** Securely attach any central support legs or beams as indicated in the instructions.
4. **Install Steel Slats:** Place the steel slats onto the designated support rails. Ensure they are evenly spaced and securely seated.
5. **Install Anti-skid Baffles:** Attach the anti-skid baffles to the frame where the mattress will rest to prevent it from sliding.

6. **Attach Anti-Slip Rubber Pads:** Place the rubber pads on the bottom of each leg to protect your floor and prevent the frame from sliding.
7. **Final Tightening:** Once all components are in place and aligned, systematically tighten all bolts using the provided tools. Ensure all connections are firm and secure.
8. **Headboard Attachment (Optional):** If attaching a headboard, use the reserved holes on the front legs. (Headboard not included).



Figure 2: Initial layout of bed frame components before assembly.



Figure 3: Assembled bed frame, ready for mattress placement.

Operating Instructions

Your MAF bed frame is designed for optimal mattress support without a box spring. Follow these guidelines for proper use:

- **Mattress Placement:** Carefully place your mattress directly onto the steel slats. The anti-skid baffles will help keep the mattress in place.
- **Weight Capacity:** Do not exceed the maximum weight capacity of 2500 lbs (1134 kg) to ensure the longevity and safety of the frame.
- **Under-bed Storage:** Utilize the 12.4-inch clearance under the bed for convenient storage of boxes, luggage, or other items.



Figure 4: Bed frame with mattress and ample under-bed storage space.



Figure 5: Detail of anti-skid baffles, reserved headboard holes, and floor protection pads.

Maintenance

Regular maintenance will ensure the continued performance and longevity of your MAF bed frame.

- **Cleaning:** Wipe down the metal frame with a damp cloth and mild detergent as needed. Avoid abrasive cleaners.
- **Check Connections:** Periodically (e.g., every 6 months) inspect all bolts and connections. Re-tighten any loose bolts to maintain stability and prevent squeaking.
- **Inspect Slats:** Ensure all steel slats remain properly seated and are not bent or damaged.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Squeaking noise	Loose bolts or connections.	Check and tighten all bolts on the frame. Ensure all parts are properly aligned.
Mattress sliding	Anti-skid baffles not installed or improperly positioned.	Ensure the anti-skid baffles are correctly installed and positioned to hold the mattress.
Frame unstable/wobbly	Incomplete assembly or loose connections.	Review assembly steps to ensure all parts are correctly connected and all bolts are fully tightened.

Specifications

Feature	Detail
Model Number	MT09-JD-AMZ01-14F
Size	Full
Product Dimensions (L x W x H)	74.5" x 53.4" x 14"
Compatible Mattress Size	75" x 54"
Max Weight Capacity	2500 lbs
Under-bed Clearance	12.4 inches
Material	Heavy Duty Metal (Steel)
Color	Black
Assembly Required	Yes

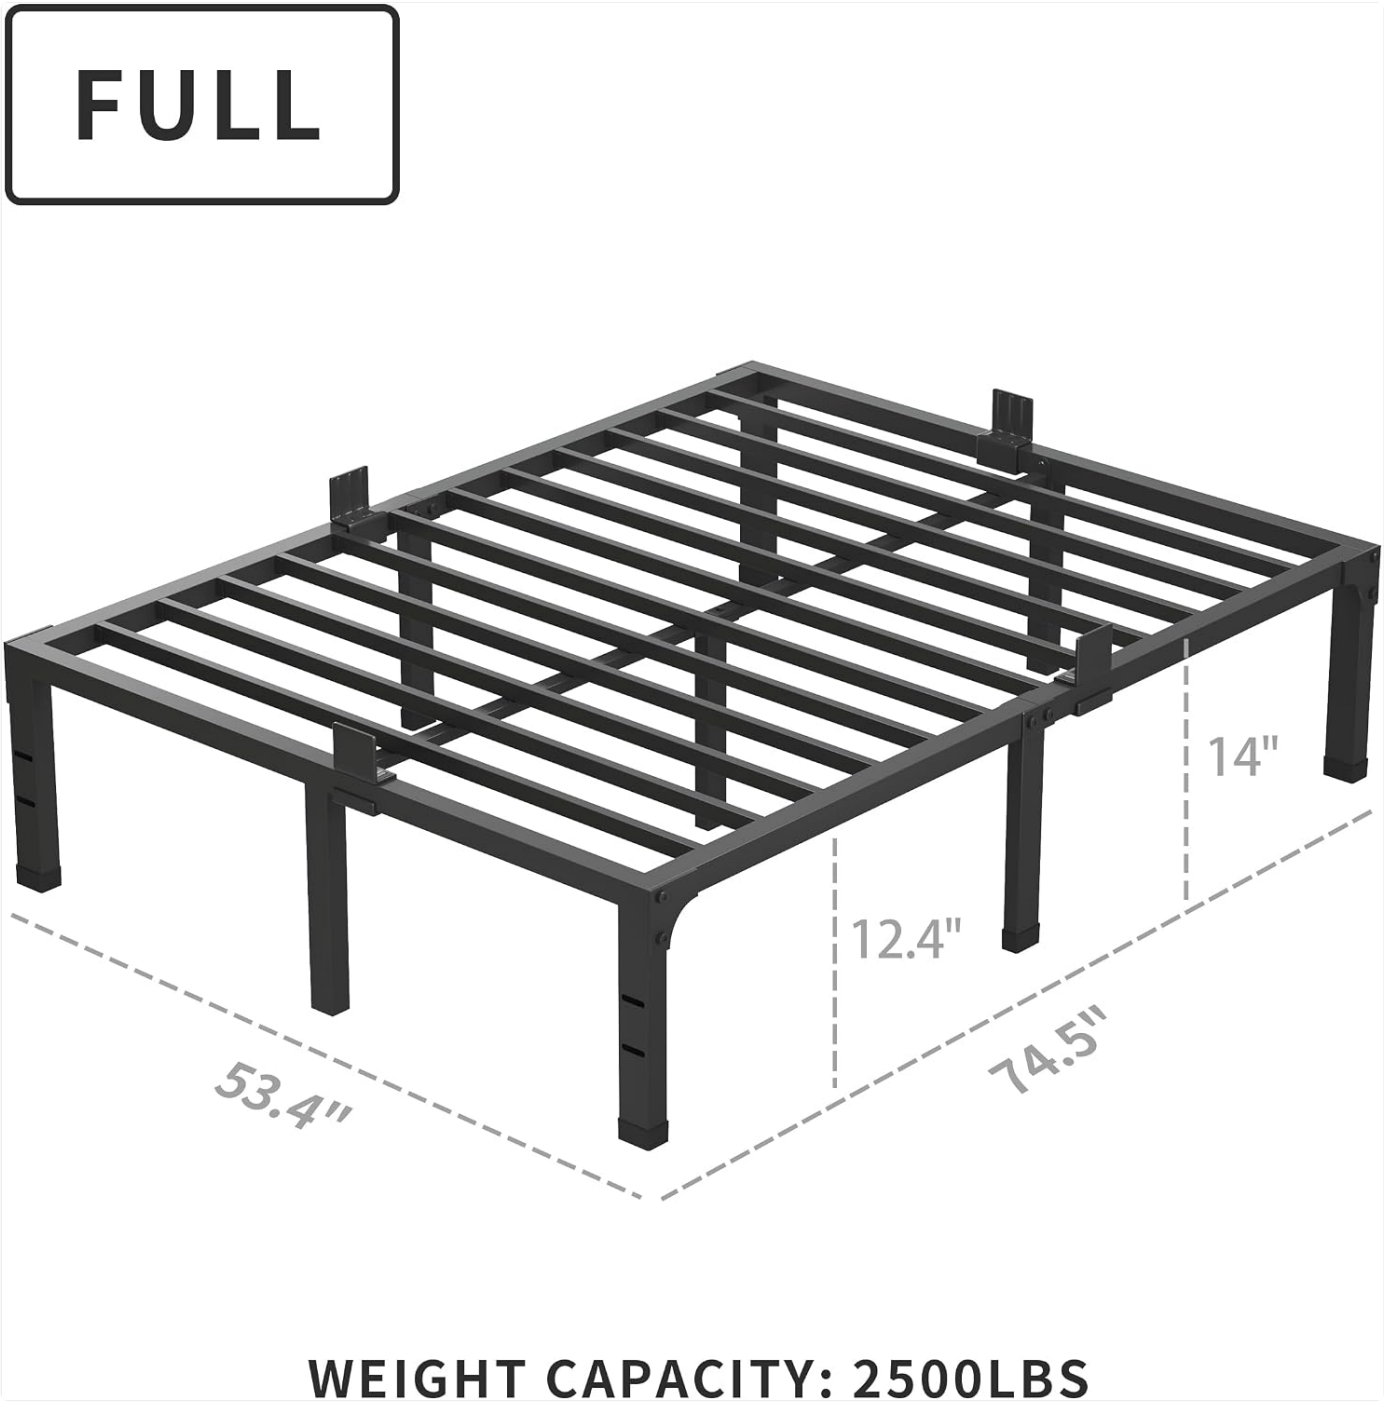


Figure 6: Detailed dimensions of the MAF Full Size Bed Frame.

Warranty and Support

For warranty information, product support, or to purchase replacement parts, please visit the official MAF website or contact MAF customer service directly. Refer to your purchase documentation for specific warranty terms and conditions. You can visit the MAF Store for more information:MAF Store on Amazon

© 2023 MAF. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BCG6N9X9

More documents and user manuals: **https://manuals.plus/**