Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

REWARD RD81064M

REWARD RD81064M Men's Chronograph Watch User Manual

1. Introduction

Thank you for choosing the REWARD RD81064M Men's Chronograph Watch. This manual provides essential information for the proper setup, operation, and maintenance of your new timepiece. Please read these instructions carefully to ensure optimal performance and longevity of your watch.

2. Product Overview

The REWARD RD81064M is a stylish and functional chronograph watch featuring a solid stainless steel band, a precise quartz movement, and a range of useful functions. Its design incorporates a sunray gradient dial, luminous hands for visibility in low light, and a magnified calendar window for easy date reading.

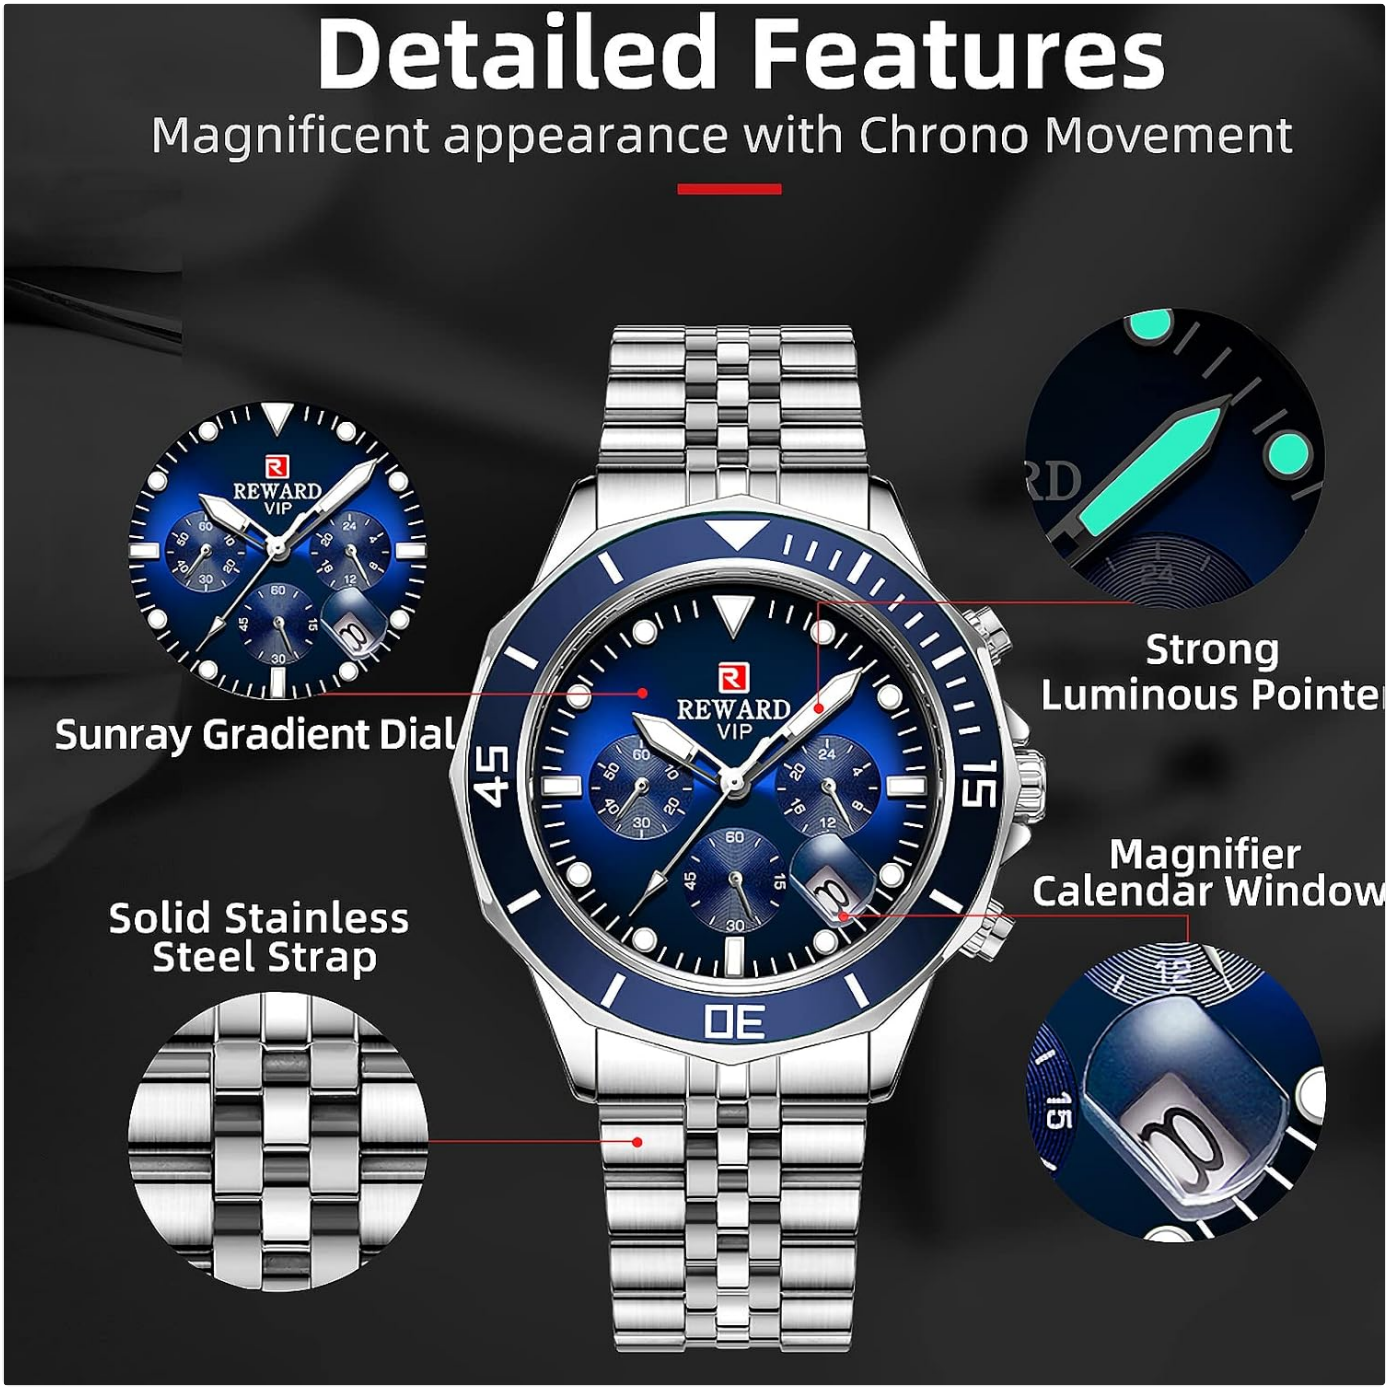


Figure 2.1: Detailed Features of the REWARD RD81064M Watch

Key features include:

- **Chronograph Function:** Multifunctional sub-dials for stopwatch, minute, and 24-hour display.
- **Luminous Hands:** Pointers absorb light and glow in the dark for enhanced readability.
- **Date Display:** An automatic date function with a magnified window.
- **Water Resistance:** Rated for 3ATM (30 meters), suitable for daily splashes, hand washing, and rain.
- **Durable Construction:** Features a stainless steel band and mineral glass crystal.

Your browser does not support the video tag.

Video 2.1: Demonstration of Luminous Hands and Water Resistance

This video demonstrates the luminous hands of the REWARD RD81064M watch in the dark and its water resistance during hand washing.

3. Setup

3.1 Setting the Time

1. Pull the crown (middle button on the right side) out to position 2.
2. Rotate the crown to adjust the hour and minute hands to the correct time.
3. Push the crown back into position 1 to start the watch.

3.2 Setting the Date

1. Pull the crown out to position 1.
2. Rotate the crown clockwise or counter-clockwise (depending on the movement) to set the correct date. Avoid setting the date between 9 PM and 3 AM, as this can interfere with the automatic date change mechanism.
3. Push the crown back into its original position.

3.3 Adjusting the Watch Band

The stainless steel band can be adjusted to fit your wrist. A band adjustment tool is included with your watch for removing or adding links. If you are unsure, it is recommended to have a professional jeweler adjust the band to prevent damage.



Figure 3.1: Watch Box and Band Adjustment Tool

4. Operating the Chronograph

The REWARD RD81064M features a fully functional chronograph (stopwatch) with dedicated pushers.



Figure 4.1: Chronograph and Watch Controls

4.1 Chronograph Functions

- **Top Pusher:** Starts and pauses the chronograph.
- **Bottom Pusher:** Resets the chronograph to zero when it is stopped.

4.2 Luminous Display

The watch hands and hour markers are coated with a luminous material. Exposure to light (natural or artificial) will charge this material, allowing the watch to glow in dark conditions for a period of time.

5. Maintenance

5.1 Water Resistance (3ATM)

Your REWARD RD81064M watch is water-resistant to 30 meters (3ATM). This means it is suitable for daily use and can

withstand splashes, rain, and brief immersion such as hand washing or car washing. It is **not** suitable for swimming, showering, diving, or snorkeling. Avoid operating the crown or pushers when the watch is wet to prevent water ingress.



Figure 5.1: Water Resistance Guidelines

5.2 Cleaning

To maintain the appearance of your watch, wipe it regularly with a soft, dry cloth. For the stainless steel band, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials.

5.3 Battery Replacement

The watch is powered by a quartz movement, which requires a battery. When the watch stops running, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

6. Troubleshooting

6.1 Watch Not Running

- **Check the Crown:** Ensure the crown is fully pushed in to position 0.
- **Battery:** If the watch has stopped completely, the battery may need to be replaced.

6.2 Chronograph Hands Not Resetting to Zero

If the chronograph hands do not return to the 12 o'clock position when reset, they may need calibration. Consult a professional watch repair service for adjustment.

6.3 Watch Stops After Impact

This watch is not designed to be shock-absorbent. Significant impacts can damage the internal movement. If your watch stops after being dropped or hit, it will likely require professional repair.

7. Specifications

Feature	Specification
Model Number	RD81064M
Movement Type	Quartz
Case Material	Stainless Steel
Band Material	Stainless Steel
Crystal Material	Mineral Glass
Case Diameter	44 mm
Case Thickness	13 mm
Band Width	13 mm
Band Length	240 mm
Watch Weight	139 g
Water Resistance	30 Meters (3ATM)
Additional Features	Chronograph, Luminous Hands, Date Display

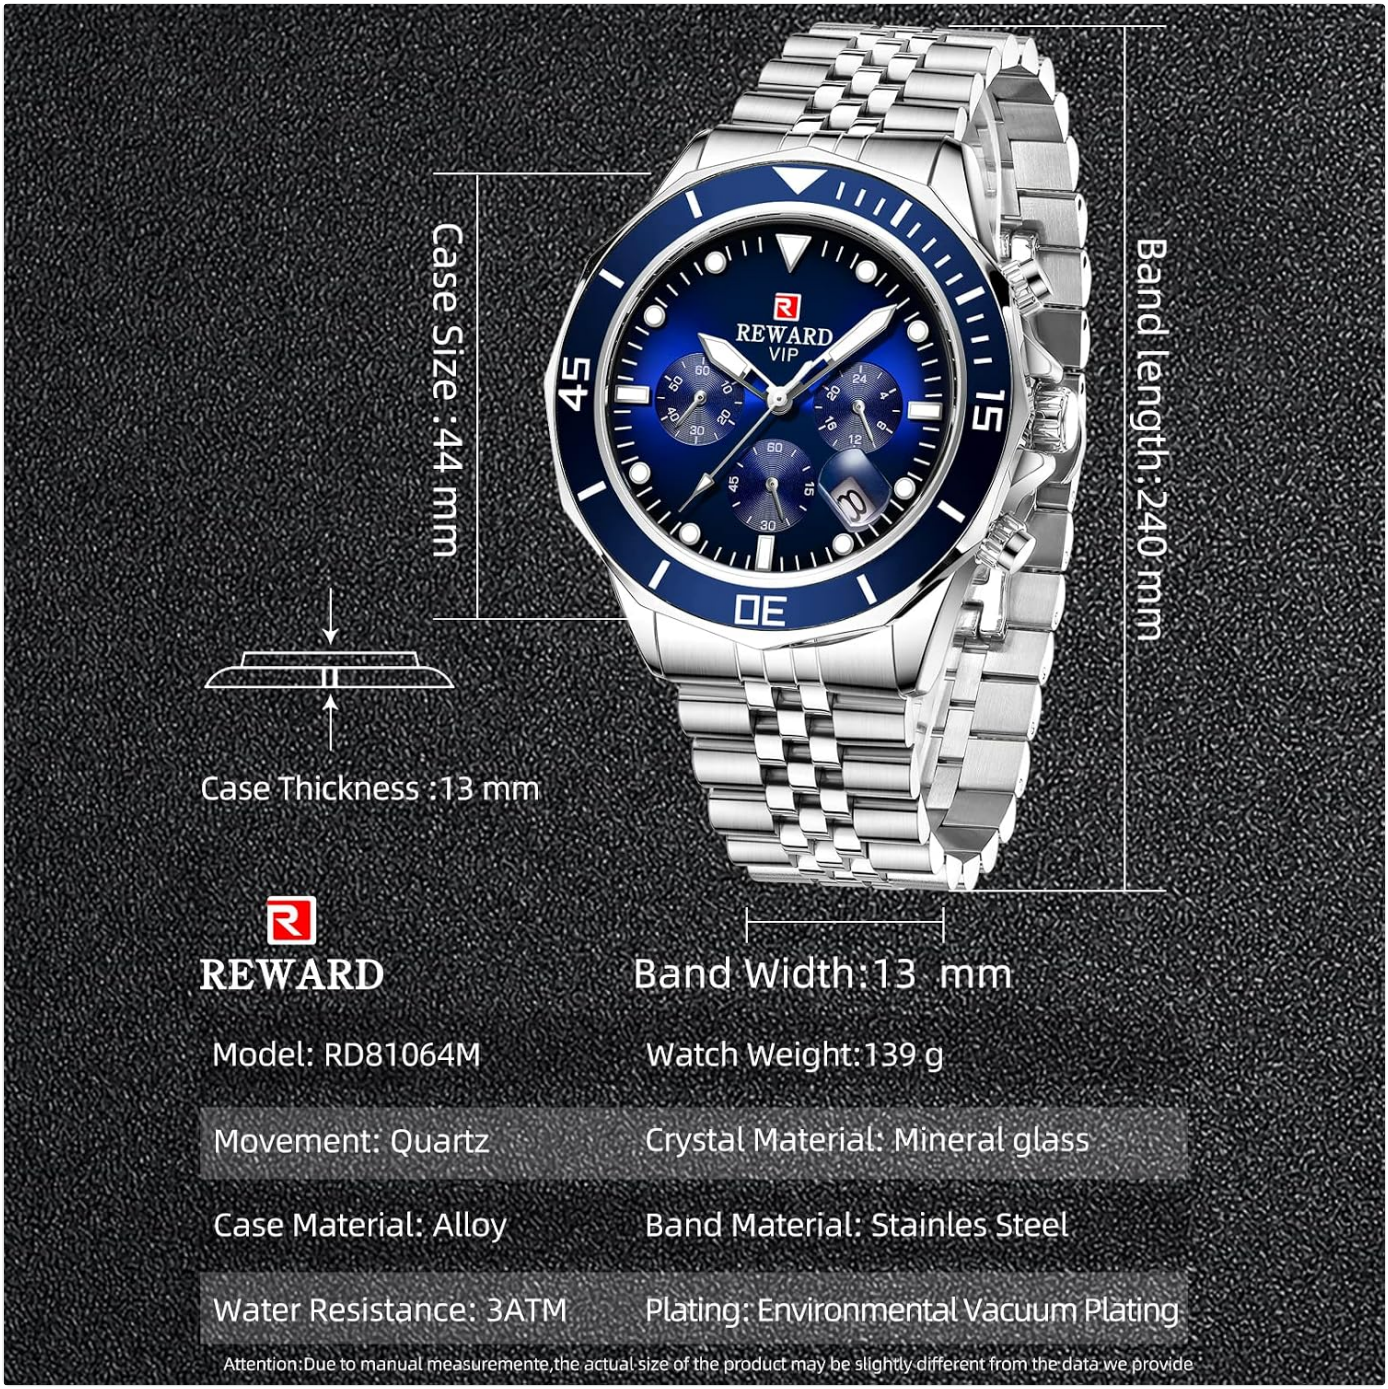


Figure 7.1: Watch Dimensions and Specifications



Figure 7.2: Watch Case Back

8. Warranty

The REWARD RD81064M watch comes with a limited warranty. For specific details regarding coverage and duration, please refer to the warranty information provided at the time of purchase or contact the retailer. Any warranty claims should be directed to the original point of purchase or the manufacturer as specified in the warranty documentation.

9. Support

Should you encounter any issues or require further assistance with your REWARD RD81064M watch that are not covered in this manual, please contact the REWARD Watch Store directly or the retailer from whom you purchased the product. Provide your model number (RD81064M) and a detailed description of the issue for efficient support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BCKKYBZ9

More documents and user manuals: **https://manuals.plus/**