OMAIC BN59-01312A

OMAIC BN59-01312A Replacement Voice Remote Control User Manual

For Samsung Smart, Curved, Frame, QLED, LED, LCD, 8K, and 4K TVs

1. INTRODUCTION

This manual provides comprehensive instructions for the OMAIC BN59-01312A Replacement Voice Remote Control. It covers setup, operation, compatibility, and troubleshooting to ensure optimal performance with your compatible Samsung television.

2. PRODUCT OVERVIEW

The OMAIC BN59-01312A remote control is designed as a direct replacement for various Samsung Smart TV remotes, offering voice control functionality and quick access buttons for popular streaming services. It features a durable design tested for extensive use.

Figure 1: OMAIC Replacement Voice Remote Control with highlighted shortcut buttons.

Figure 2: Compatibility overview of the remote with different Samsung Smart TV types.

3. SETUP AND PAIRING

To use your OMAIC Replacement Voice Remote Control, it must first be paired with your Samsung TV. Follow these steps:

1. Ensure your TV is powered on.

2. Point the new remote control towards your Samsung TV.

3. Press and hold the **Back/Exit** button and the **Play/Pause** button simultaneously for 5-8 seconds.

4. A "Pairing complete" message should appear on your TV screen, indicating successful pairing.

5. If pairing fails, repeat the steps. It may be helpful to turn the TV off and then on again before re-attempting the pairing process.

Easy pairing,Press and hold the **Back / Exit** and **Play / Pause** buttons at the same time for 3-5 seconds and you will see the message "Pairing complete" on your TV screen.

(If pairing fails, please repeat this step)

Figure 3: Visual guide for pairing the remote control with a Samsung Smart TV.

OMAIC Voice Remote Control,for Samsung Smart Curved Frame QLED LED LCD 8K 4K TVs

4. OPERATING INSTRUCTIONS

The remote control offers intuitive navigation and quick access to various functions:

- **Voice Control:** Press the microphone button and speak your commands to interact with your Smart TV.
- **Shortcut Buttons:** Dedicated buttons for Netflix, Prime Video, and Hulu provide instant access to these streaming applications.
- **Volume and Channel:** Use the dedicated volume (VOL) and channel (CH) buttons to adjust audio levels and navigate channels.
- **Navigation Pad:** The circular navigation pad allows for easy menu navigation and selection.
- **Full-Angle Control:** The remote is tested to control your TV from any angle within 40 feet.
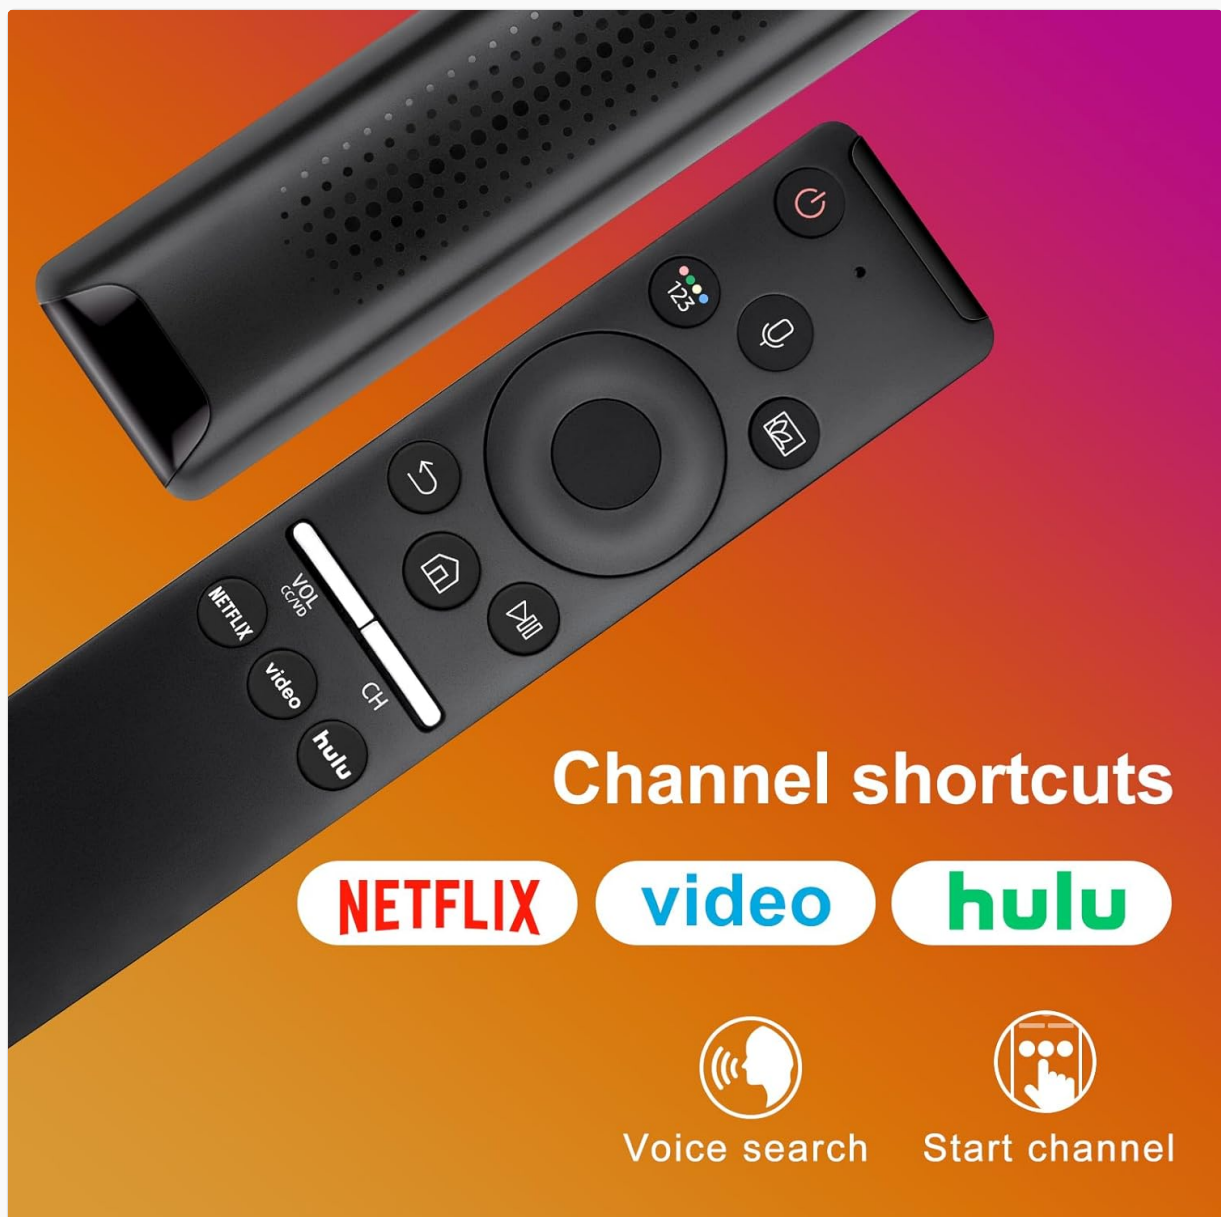

Figure 5: Key features including voice search and streaming service shortcuts.

Figure 6: Demonstrating voice control functionality to open applications.

5. BATTERY INSTALLATION

The remote control requires 2 AA batteries for operation. These batteries are typically included with your purchase.

1. Slide open the battery cover located on the back of the remote control.
2. Insert two AA batteries, ensuring correct polarity (+ and -).
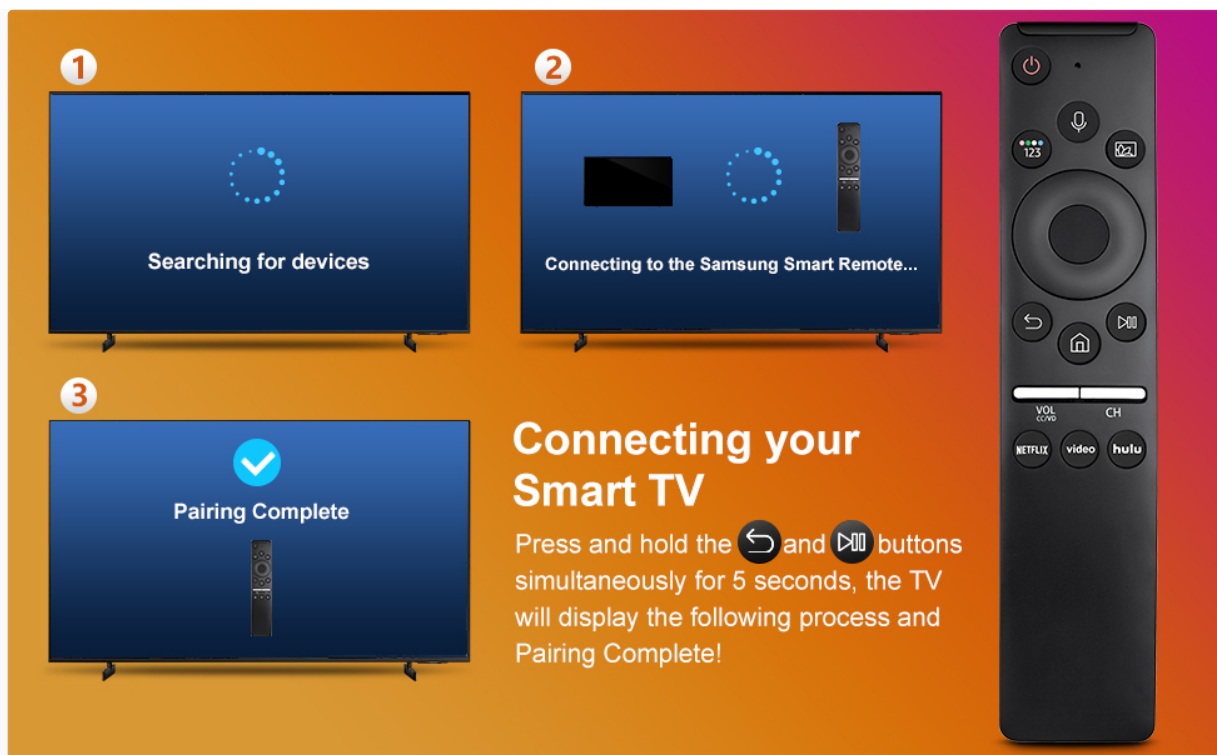3. Slide the battery cover back into place until it clicks securely.

Figure 7: Battery installation and other key features.

6. COMPATIBILITY

This remote control is compatible with a wide range of Samsung TV models and original remote control models. Refer to the lists below for specific compatibility:

Compatible Samsung TV Remote Control Models:

- BN59-01312A, BN59-01312F, BN59-01312D, BN59-01312E, BN59-01312G, BN59-01312K, BN59-01312L, BN59-01312M, BN59-01312X, BN59-01312U, BN59-01312T
- BN59-01329A, BN59-01329C, BN59-01329F
- BN59-01330A, BN59-01330C, BN59-01330H, BN59-01330N, BN59-01330Q, BN59-01330M, BN59-01330H, BN59-01312Q

Compatible Samsung TV Models:

- QN75Q60RAFX, QN43Q60RAFX, QN49Q60RAFX, QN49Q70RAFX, QN55Q60RAFX, QN55Q70RAFX, QN55Q80RAFX, QN65Q60RAFX, QN65Q70RAFX, QN65Q80RAFX, QN65Q90RAFX, QN75Q70RAFX, QN75Q80RAFX, QN75Q90RAFX, QN82Q60RAFX, QN82Q70RAFX, QN82Q80RAFX, QN82Q90RAFX
- QN55Q900RBFX, QN65Q900RBFX, QN75Q900RBFX, QN82Q900RBFX, QN85Q900RBFX, QN98Q900RBFX

7. TROUBLESHOOTING

- **Remote Not Responding:** Check if the batteries are correctly installed and have sufficient charge. Replace batteries if necessary.
- **Pairing Issues:** If the remote does not pair, ensure no other remotes are actively paired with the TV. Turn the TV off and on, then re-attempt the pairing process as described in Section 3.
- **Voice Control Not Working:** Ensure the remote is properly paired. Some TV models may require specific settings to enable voice control. Consult your TV's user manual for details.

- **Limited Range:** Ensure there are no obstructions between the remote and the TV. The remote is designed for optimal performance within 40 feet.

8. SPECIFICATIONS

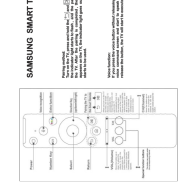| Feature	Detail
Product Dimensions	6.35 x 1.42 x 0.66 inches
Item Weight	1.76 ounces
Item Model Number	BN59-01312A
Batteries	2 AA batteries required (included)
Special Feature	Voice Search
Max Number of Supported Devices	18
Compatible Devices	Television

Figure 8: Physical dimensions of the OMAIC Replacement Voice Remote Control.

9. WARRANTY AND SUPPORT

OMAIC provides 100 days of after-sales support for this product. If you have any questions or encounter issues, please contact us. We aim to reply within 12 hours and are committed to assisting you.

Related Documents - BN59-01312A

	Samsung Remote Control User Guide and Compatibility Comprehensive guide to Samsung remote control functions, installation steps, and compatibility with various Samsung TV models. Includes model numbers for easy reference.
	Samsung BN59-00516A Replacement Remote Control Guide This guide provides button mapping details for the Samsung BN59-00516A replacement remote control, covering TV, DVD, STB, and CABLE-VCR functions. Compare original remote buttons to their replacements.
	Samsung Universal Remote Control BN59-01315A User Guide Comprehensive user guide for the Samsung BN59-01315A universal remote control. Learn about its features, compatibility with Samsung smart TVs, setup, and programming instructions for seamless TV and cable/satellite box operation.
	Samsung Smart TV Remote Control Guide A comprehensive guide to using the Samsung Smart TV Remote Control, including pairing instructions, button functions, and voice command usage.
	Samsung Smart Remote: Connecting and Troubleshooting Guide A guide on how to connect the Samsung Smart Remote to your TV, control external devices, and troubleshoot common remote control issues. Includes FCC compliance information.
	Samsung Smart-TV Remote Control Function Guide: TM1850A BN59-01259B & Replacement Models Detailed comparison of original and replacement remote control buttons for Samsung Smart TVs, including models TM1850A BN59-01259B, BN59-01301A, and BN59-01350B. Find button function mapping from Mandis shop.