UPBRIGHT Skylight Frame 916496 SKY002 SKYV3 Power

UpBright 5V AC/DC Adapter Instruction Manual

Brand: UPBRIGHT

Introduction

This manual provides essential information for the safe and effective use of your UpBright 5V AC/DC Adapter. Please read this manual thoroughly before using the product and retain it for future reference.



Figure 1: UpBright 5V AC/DC Adapter. This image shows the black AC/DC adapter with its two-prong plug and the attached DC barrel connector cable, coiled neatly.

Safety Information

To ensure safe operation and prevent damage, observe the following precautions:

- **Voltage Compatibility:** Ensure the input voltage of the adapter (100-240VAC, 50/60Hz) matches the local power supply.
- **Protection Features:** The adapter includes OVP (Over Voltage output Protection), OCP (Over Current output Protection), and SCP (Short Circuit output Protection). Do not attempt to bypass these features.
- **Indoor Use Only:** This adapter is designed for indoor use. Do not expose it to water, moisture, or extreme temperatures.
- **Proper Connection:** Always connect the adapter to the device before plugging it into a wall outlet. Disconnect from

the wall outlet before disconnecting from the device.

- **Avoid Overloading:** Do not connect devices that exceed the adapter's specified output (5V 2A).
- **Cable Care:** Do not bend, twist, or pull the power cord excessively. Avoid placing heavy objects on the cord.
- **Maintenance:** Do not attempt to open or repair the adapter. Refer all servicing to qualified personnel.

Package Contents

Verify that all items are present in the package:

- 1 x UpBright 5V AC/DC Adapter
- (Optional: Region-specific outlet adapter, if applicable for international orders)

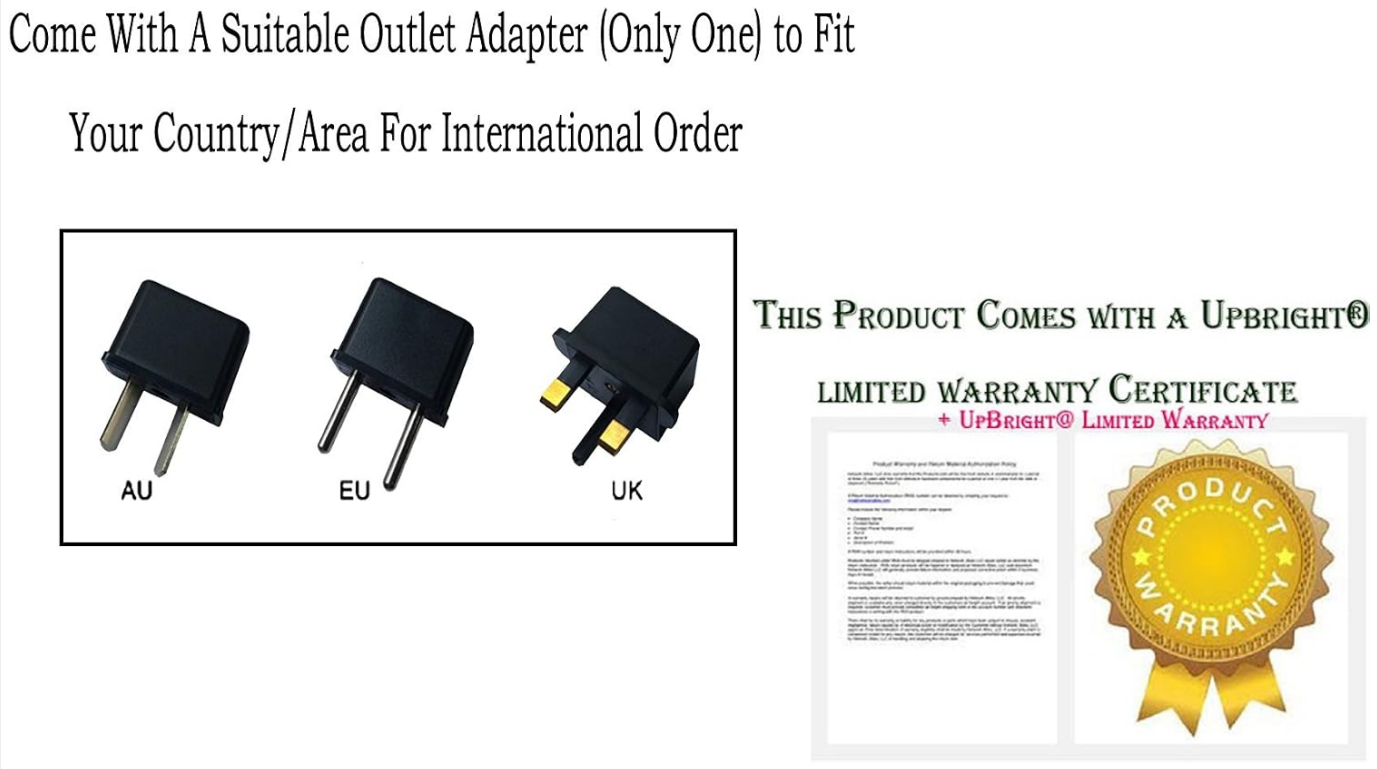


Figure 2: Example of international outlet adapters that may be included with the product, showing AU, EU, and UK plug types. This image also shows a sample warranty certificate.

Setup

Follow these steps to set up your UpBright AC/DC Adapter:

1. **Unpack:** Carefully remove the adapter from its packaging.
2. **Inspect:** Check the adapter and cable for any visible damage. Do not use if damaged.
3. **Connect to Device:** Locate the power input port on your compatible device (e.g., Skylight Frame 916496 SKY002 SKY-V3). Insert the barrel connector of the UpBright adapter firmly into this port.
4. **Connect to Power Outlet:** Plug the two-prong end of the adapter into a standard wall power outlet (100-240VAC).
5. **Verify Power:** Once connected, your device should receive power. Refer to your device's manual for specific power indicators.



Figure 3: The UpBright AC/DC Adapter shown in proximity to a digital picture frame, illustrating its intended use for powering compatible devices.

Operating Instructions

The UpBright AC/DC Adapter functions as a power supply for compatible electronic devices. It does not require specific operational steps beyond proper connection.

- **Continuous Power:** The adapter provides continuous power to your device as long as it is connected to a live power outlet.
- **Disconnection:** To power off your device using the adapter, simply unplug the adapter from the wall outlet. For prolonged periods of non-use, it is recommended to disconnect the adapter from both the device and the power outlet.

Maintenance

Proper maintenance ensures the longevity and safe operation of your adapter:

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable.
- **Inspection:** Periodically inspect the adapter and cable for any signs of wear, fraying, or damage. If damage is observed, discontinue use immediately.

Troubleshooting

If you encounter issues with your UpBright AC/DC Adapter, refer to the following common solutions:

Problem	Possible Cause	Solution
Device not receiving power.	Adapter not fully plugged into outlet. Adapter not fully connected to device. Outlet is not live. Device is incompatible or faulty. Adapter is faulty.	Ensure adapter is securely plugged into a working wall outlet. Verify the barrel connector is fully inserted into the device's power port. Test the outlet with another known working appliance. Confirm your device is compatible with 5V 2A power. Test the device with its original adapter if available. If all else fails, the adapter may be faulty. Contact support.
Adapter feels warm.	Normal operation, or slight overload.	A slight warmth during operation is normal. If the adapter becomes excessively hot or emits a burning smell, disconnect it immediately and discontinue use. Ensure the connected device does not exceed 2A current draw.

Specifications

Technical specifications for the UpBright 5V AC/DC Adapter:

- **Model:** Skylight Frame 916496 SKY002 SKYV3 Power
- **Input Voltage:** 100-240VAC, 50/60Hz
- **Output Voltage:** 5V DC
- **Output Current:** 2A (2000mA)
- **Connector Type:** Barrel Connector
- **Protection:** OVP, OCP, SCP (Over Voltage, Over Current, Short Circuit Protection)
- **Dimensions:** Approximately 3 x 3 x 1 inches
- **Weight:** Approximately 2.99 ounces
- **Color:** Black
- **Compatible Devices:** Skylight Frame 916496 SKY002 SKY-V3 SKYV3 SKY-002 Skylight Frame 10” V3 WiFi Digital Picture Frame

Warranty and Support

UpBright products are designed for reliability and performance. For warranty information and customer support, please refer to the details below:

- **Warranty:** UpBright offers a 30-day refund policy and a 24-month exchange warranty for tested units in great working condition.

- **Customer Support:** For technical assistance, troubleshooting, or warranty claims, please contact UpBright customer service. Refer to the contact information provided with your purchase or visit the official UpBright store on Amazon: UPBRIGHT Store.

© 2024 UpBright. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question