NEBULA D2426

NEBULA Capsule 3 Laser Projector User Manual

Model: D2426

INTRODUCTION

The NEBULA Capsule 3 Laser Projector is a compact and powerful device designed to deliver a high-quality visual and audio experience. Featuring a laser light source, 1080p HD resolution, and integrated Google TV, it offers versatile entertainment options in a portable form factor. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your projector.

WHAT'S IN THE BOX

- NEBULA Capsule 3 Laser Projector
- Power Adapter
- Remote Control
- User Manual (this document)

SETUP

1. Initial Charge

Before first use, fully charge the NEBULA Capsule 3 Laser Projector using the provided power adapter. The charging indicator light will show the charging status.

2. Powering On/Off

Press and hold the power button on the projector or the remote control to turn the device on or off.

3. Placement and Projection

Place the projector on a stable, flat surface. For optimal viewing, ensure the projection surface is clear and flat. The projector can project an image up to 120 inches diagonally.

Image: Front view of the NEBULA Capsule 3 Laser Projector, highlighting its compact cylindrical design and the projection lens.

4. Automatic Adjustments

The Capsule 3 features automatic autofocus and keystone correction. Simply place the projector, and it will automatically adjust the image for clarity and shape. Minor manual adjustments can be made via settings if needed.

Image: An infographic detailing the key features of the NEBULA Capsule 3, including its laser-powered brightness, 1080p resolution, 300 ANSI Lumens, 2.5-hour battery life, Dolby Audio, Google TV integration, and compact size.

5. Wi-Fi and Google TV Setup

Upon first power-on, follow the on-screen instructions to connect to your Wi-Fi network and set up Google TV. This includes signing into your Google account to access apps like Netflix, YouTube, and more.

OPERATING INSTRUCTIONS

1. Navigation and Controls

Use the provided remote control to navigate the Google TV interface. The remote features directional buttons, a select button, back, home, and volume controls. The projector also has basic controls on its top panel.

2. App Usage

Access pre-installed apps or download new ones from the Google Play Store. For Netflix, ensure you are using the officially licensed version for optimal performance.

3. Casting and Screen Mirroring

The projector supports Google Cast and AirPlay. You can cast content directly from compatible Android or iOS devices, as well as Mac or Windows computers.
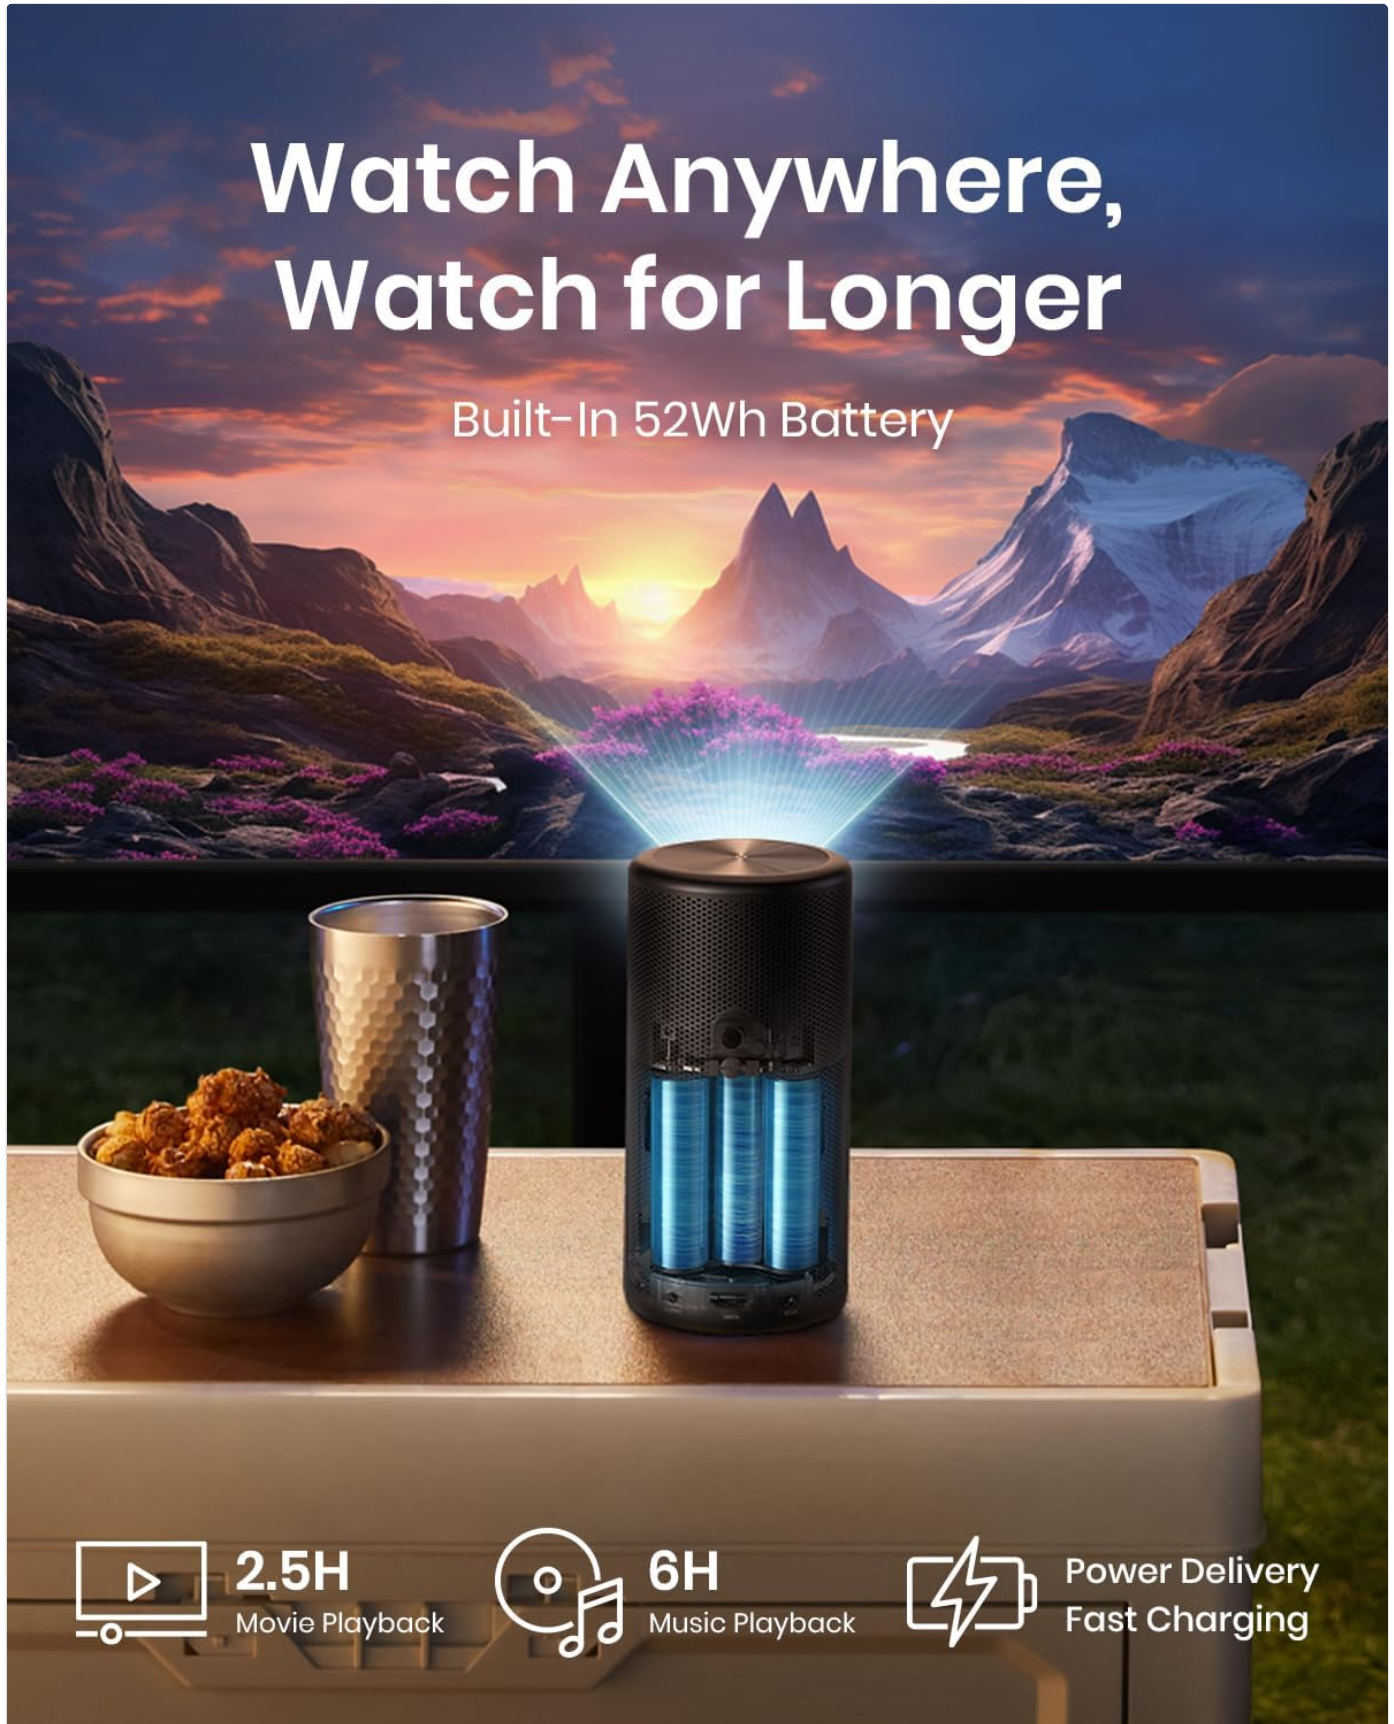
4. Connecting External Devices

The Capsule 3 features HDMI, Aux Out, and Type-C ports for connecting external devices such as gaming consoles, laptops, or external speakers. Bluetooth connectivity is also available for audio devices.

5. Audio Settings

The built-in 8W Dolby Digital speakers provide immersive audio. Adjust volume using the remote. For enhanced audio, connect external speakers via Bluetooth or the Aux Out port.

Image: The NEBULA Capsule 3 projector displaying its internal battery components and projecting a vibrant movie scene onto a screen in an outdoor setting, emphasizing its portability and long playback time.

6. Battery Life

The integrated battery provides approximately 2.5 hours of movie playback or 8 hours of music playback. For extended use, the projector supports PD charging, allowing you to use a power bank.

Image: A hand holding the compact NEBULA Capsule 3 Laser Projector over a cooler filled with beverage cans, illustrating its small size and portability.

MAINTENANCE

1. Cleaning the Lens

Gently wipe the projector lens with a clean, dry microfiber cloth. Avoid using liquid cleaners or abrasive materials that could damage the lens coating.

2. General Care

Keep the projector in a clean, dust-free environment. Avoid exposing it to extreme temperatures or humidity. Do not block the ventilation openings.

3. Software Updates

Periodically check for and install software updates through the Google TV settings to ensure optimal performance and access to the latest features.

TROUBLESHOOTING

- **No Picture:**

  - Ensure the projector is powered on and fully charged or connected to power.
  - Check the focus and keystone settings.
  - Verify the input source if an external device is connected.

- **No Sound:**

  - Increase the volume on the projector and the connected source device.
  - Check if external speakers are properly connected or if Bluetooth audio is paired correctly.
  - Ensure the audio output setting is configured correctly in Google TV.

- **Wi-Fi Connectivity Issues:**

  - Restart the projector and your Wi-Fi router.
  - Ensure the projector is within range of your Wi-Fi network.
  - Re-enter your Wi-Fi password in the settings.

- **Remote Control Not Responding:**

  - Replace the batteries in the remote control.
  - Ensure there are no obstructions between the remote and the projector.
  - Re-pair the remote control if necessary (refer to Google TV settings for pairing instructions).

- **Overheating:**

  - Ensure ventilation openings are not blocked.
  - Operate the projector in a well-ventilated area.
  - If the projector feels excessively hot, power it off and allow it to cool down.
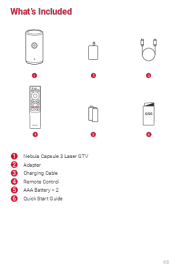
SPECIFICATIONS

Feature	Detail
Model Number	D2426
Display Resolution	1920 x 1080 (1080p HD)
Brightness	300 ANSI Lumens (Laser Light Source)
Product Dimensions	3.27 x 3.27 x 6.57 inches

Feature	Detail
Item Weight	1.98 pounds (900 g)
Battery Life	Up to 2.5 hours (movie playback), 8 hours (music playback)
Operating System	Google TV (Android TV 11.0)
Audio	8W Dolby Digital Speakers
Connectivity	HDMI, Aux Out, Type-C, Bluetooth, Wi-Fi, Screen Mirroring
Special Features	Autofocus, Auto Keystone Correction, Google Assistant, Chromecast built-in, Official Netflix
Manufacturer	Anker
Country of Origin	China

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official NEBULA website or contact customer service.
You can also find additional resources and FAQs on the product support page.
A digital version of this user manual is available for download: User Manual (PDF)

Related Documents - D2426

	Nebula Anker Capsule 3 Laser FAQ and Troubleshooting Guide Comprehensive FAQ and troubleshooting guide for the Nebula Anker Capsule 3 Laser portable projector. Find solutions for setup, connectivity, audio, video playback, app usage, and more.
	Nebula Capsule 3 Laser GTV User Manual and Guide Explore the features and functionalities of the Nebula Capsule 3 Laser GTV projector with this comprehensive user manual. Learn about setup, operation, settings, and troubleshooting.
	Nebula Capsule Air Quick Start Guide - Setup and Usage Comprehensive guide for the Nebula Capsule Air projector, covering safety, setup, screen mirroring, HDMI connectivity, and app usage. Learn how to get the most out of your Nebula projector.

❶ Nebula Capsule 3 Laser GTV
❷ Adapteris
❸ Įkrovimo kabelis
❹ Nuotolinio valdymo pultas
❺ AAA baterija × 2
❻ Greito pokeidimo vadovas

[Nebula Capsule 3 Laser GTV Vartotojo Vadovas](#)

Išsamus vadovas, kaip nustatyti, naudoti ir prižiūrėti Nebula Capsule 3 Laser GTV projektorių, apimantis funkcijas, specifikacijas ir trikčių šalinimą.

❶ Nebula Capsule 3 Laser GTV
❷ Adapter
❸ Kejbil tal-iċċarġjar
❹ Kontroll Mill-bogħod
❺ Batterija AAA × 2
❻ Gwida għall-ftdu Malajr

[Nebula Capsule 3 Laser GTV User Manual and Setup Guide](#)

Comprehensive guide for setting up and using the Nebula Capsule 3 Laser GTV projector, covering features, connectivity, settings, and troubleshooting. Learn about device components, remote control functions, initial setup, network configuration, image and sound adjustments, app integration, streaming options, and problem-solving.

NEBULA by Anker

User Manual
Nebula Mars 3 Air

[Nebula Mars 3 Air User Manual](#)

Comprehensive user manual for the Nebula Mars 3 Air projector, covering setup, features, settings, and troubleshooting.