Nokia NOKIA T10 TA-1503 VOICE 4/64 IN BLUE

Nokia T10 Android™ 12 Tablet User Manual

Model: NOKIA T10 TA-1503 VOICE 4/64 IN BLUE

Introduction

This manual provides essential information for the safe and efficient use of your Nokia T10 Android™ 12 Tablet. Please read it thoroughly before operating your device and keep it for future reference.
The Nokia T10 is an 8-inch HD display tablet featuring Android™ 12, an 8MP rear camera, AI face unlock, and a long-lasting battery. It supports both Wi-Fi and 4G VoLTE connectivity.

Package Contents

Upon unboxing your Nokia T10 tablet, verify that all components are present:

- Nokia T10 Device
- Type-C Cable
- Charger
- Quick Start Guide (QSG)
- Safety Booklet
- Warranty Card
- SIM PIN (for LTE models)

Device Overview

Familiarize yourself with the physical components of your Nokia T10 tablet.



Figure 1: Front and Rear View of Nokia T10 Tablet. This image displays the tablet from both the front, highlighting the screen, and the back, showing the textured finish and the camera lens.



Figure 2: Key Features of Nokia T10 Tablet. This graphic illustrates the tablet's main specifications such as Android 12, display size, camera details, and memory options.

- **Front Camera:** For video calls and selfies.
- **8" HD Display:** Vibrant screen for media consumption and productivity.
- **Power Button:** Turns the device on/off, locks/unlocks the screen.
- **Volume Buttons:** Adjusts audio volume.
- **USB Type-C Port:** For charging and data transfer.
- **8MP Rear Camera with AF and Flash:** For capturing photos and videos.
- **Speaker Grilles:** Stereo speakers for audio output.
- **SIM/MicroSD Card Tray:** For inserting SIM card (LTE models) and microSD card for expandable storage.

Setup

1. Initial Charging

Before first use, fully charge your Nokia T10 tablet. Connect the provided Type-C cable to the tablet's USB port and the

charger to a power outlet. The battery indicator will show charging progress.

2. Inserting SIM and MicroSD Cards (LTE Models Only)

If you have the LTE model, you can insert a Nano-SIM card for mobile data and calls, and a microSD card for additional storage.

1. Locate the SIM/MicroSD card tray on the side of the tablet.
2. Insert the SIM PIN tool into the small hole next to the tray to eject it.
3. Carefully pull out the tray.
4. Place the Nano-SIM card(s) and/or microSD card into the designated slots on the tray, ensuring correct orientation.
5. Gently push the tray back into the tablet until it clicks into place.

3. Powering On and Initial Setup

Press and hold the Power button until the Nokia logo appears. Follow the on-screen instructions to complete the initial setup, which includes selecting your language, connecting to Wi-Fi, setting up your Google account, and configuring security features like AI Face Unlock.

Operating Your Nokia T10 Tablet

1. Navigation and Interface

Your Nokia T10 runs on Android™ 12, offering an intuitive user interface. Swipe down from the top for notifications and quick settings. Swipe up from the bottom to access the app drawer. Use gestures or the navigation bar for Home, Back, and Recent Apps.

2. Connecting to Wi-Fi

1. Go to *Settings* > *Network & internet* > *Internet*.
2. Turn on Wi-Fi.
3. Select your desired Wi-Fi network from the list.
4. Enter the password if prompted and tap *Connect*.

3. Using the Camera

The Nokia T10 features an 8MP rear camera with autofocus and flash, and a 2MP front camera.

1. Open the *Camera* application.
2. Select between photo, video, or other modes.
3. Tap the shutter button to capture an image or start/stop video recording.

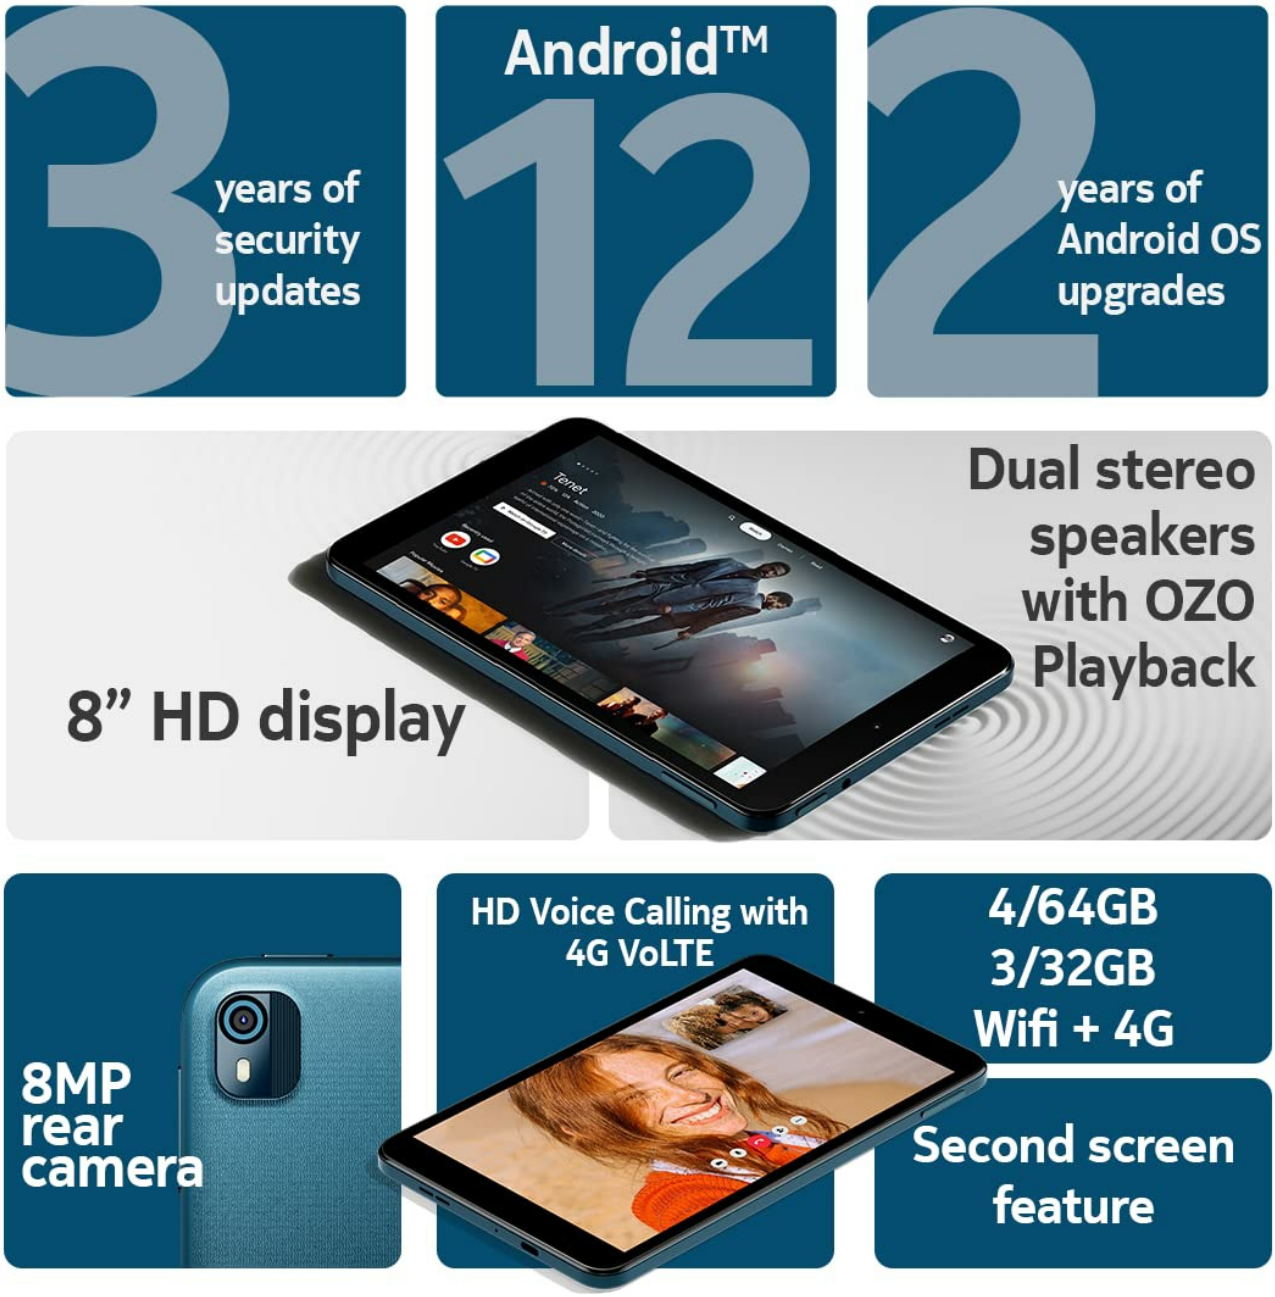


Figure 3: Nokia T10 Lock Screen. This image shows the tablet's display with the current date and time, and a serene beach background.

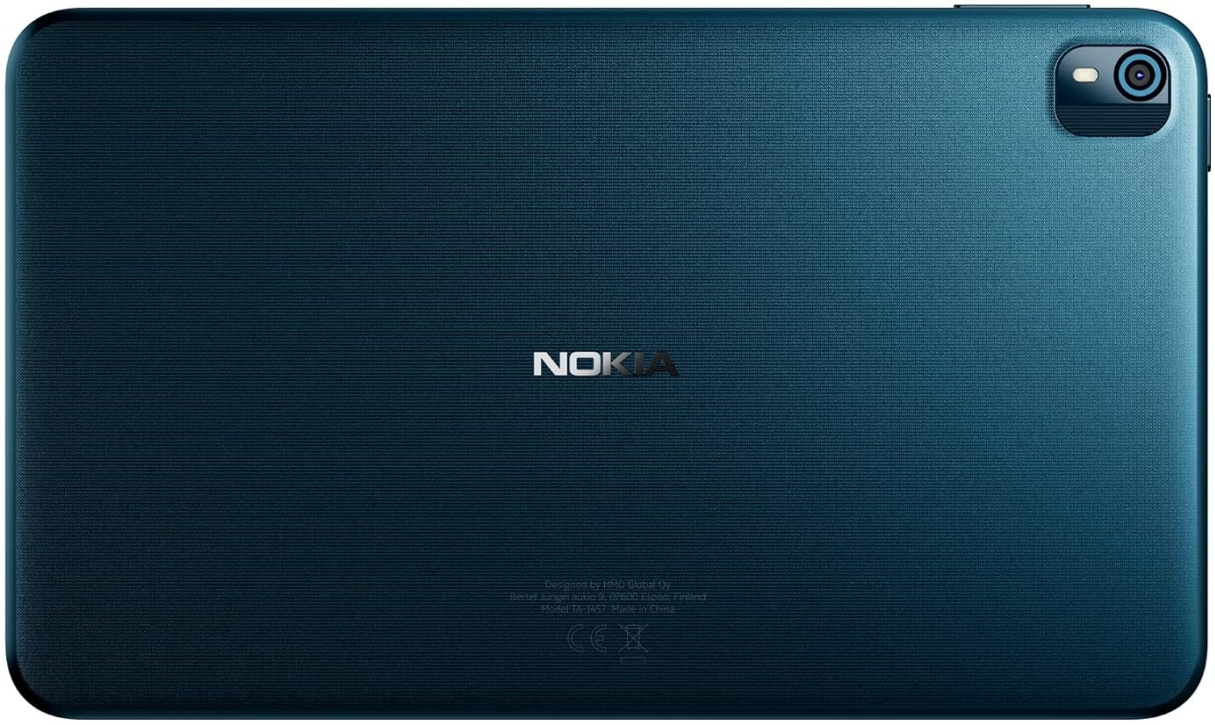


Figure 4: Rear View of Nokia T10 Tablet. This image provides a clear view of the tablet's back panel, including the camera and the Nokia logo.

4. AI Face Unlock

To set up AI Face Unlock for convenient and secure access:

1. Go to *Settings* > *Security* > *Face unlock*.
2. Follow the on-screen prompts to register your face. Ensure good lighting and hold the tablet at eye level.

5. Audio and Video Playback

The Nokia T10 features dual stereo speakers with OZO Playback for an enhanced audio experience. You can stream videos and music from various apps or play local media files.



Figure 5: Sound and Vision on Nokia T10. This image shows the tablet displaying media content, highlighting its visual and audio performance.

Note: No official product videos with 'creator_type:Seller' were found in the provided data to embed.

Maintenance

1. Software Updates

Your Nokia T10 tablet receives 2 years of OS upgrades and 3 years of monthly security updates. Regularly check for and install updates to ensure optimal performance and security.

1. Go to *Settings* > *System* > *System update*.
2. Tap *Check for update* and follow the instructions.

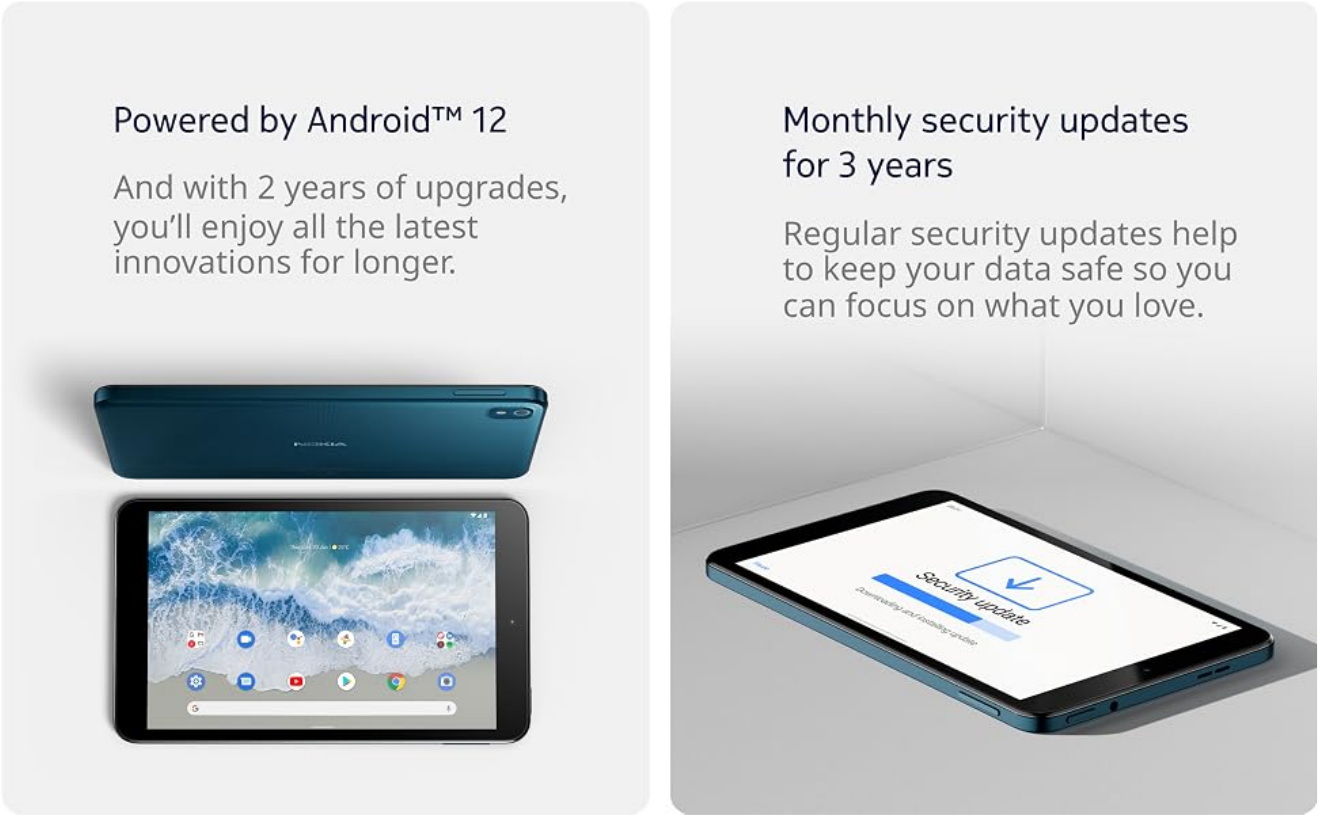


Figure 6: Android 12 and Security Updates. This image highlights the tablet's operating system and commitment to regular security updates.

2. Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of your tablet. Avoid using harsh chemicals or abrasive materials.

3. Battery Care

The Nokia T10 has a long-lasting battery. To prolong its lifespan:

- Avoid extreme temperatures.
- Do not let the battery drain completely before recharging frequently.
- Use only the original charger and cable.

TROUBLESHOOTING

Common Issues and Solutions

Issue	Possible Cause	Solution
Device not powering on	Low battery; software crash	Charge the device for at least 30 minutes. Perform a force restart by holding the Power button for 10-15 seconds.
Wi-Fi connection issues	Incorrect password; router issue; tablet Wi-Fi off	Verify Wi-Fi password. Restart your router. Toggle Wi-Fi off and on on the tablet.
Apps crashing or freezing	Insufficient RAM; app bug; outdated software	Close background apps. Clear app cache (Settings > Apps > [App Name] > Storage > Clear cache). Update the app or tablet software.

Issue	Possible Cause	Solution
Battery drains quickly	High screen brightness; background apps; poor signal	Reduce screen brightness. Close unused apps. Disable unnecessary features like Bluetooth/GPS when not in use.
No sound from speakers	Volume too low; silent mode; hardware issue	Increase volume. Check if silent mode is enabled. Restart the tablet.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact Nokia customer support.

Specifications

Below are the key technical specifications for the Nokia T10 Tablet (Model: NOKIA T10 TA-1503 VOICE 4/64 IN BLUE):

Feature	Detail
Brand	Nokia
Model Name	Nokia T10 TA-1503 VOICE 4/64 IN BLUE
Operating System	Android™ 12 (with 2 years OS upgrades)
Display	8-inch HD (1280 x 800 pixels)
Processor	Unisoc 1.6 GHz
RAM	4GB (also available in 3GB variants)
Internal Storage	64GB (also available in 32GB variants)
Expandable Storage	Yes, via MicroSD card
Rear Camera	8MP with Autofocus and Flash
Front Camera	2MP
Battery	5250 mAh Lithium Polymer (included)
Connectivity	Wi-Fi (802.11a/b/g/n/ac), Bluetooth, 4G VoLTE (on LTE models)
Audio	Stereo Speakers with OZO Playback
Dimensions (LxWxH)	20.8 x 12.3 x 0.9 cm
Weight	375 g
Included Components	Device, Type-C cable, Charger, QSG, Safety booklet, Warranty card, SIM PIN

Warranty and Support

Warranty Information

Your Nokia T10 Tablet comes with a standard manufacturer's warranty. Please refer to the included Warranty Card for specific terms, conditions, and duration of coverage. Keep your proof of purchase for warranty claims.
Extended warranty and total protection plans may be available for purchase. Refer to your retailer or Nokia's official website for details.

Customer Support

For technical assistance, service, or further inquiries, please visit the official Nokia support website or contact their customer service hotline. Contact details can typically be found in the Safety Booklet or on the Nokia website.
Manufacturer: WATER WORLD INTERNATIONAL INDUSTRIAL LIMITED
Importer: HMD Mobile India Private Limited

© 2025 Nokia. All rights reserved. Nokia and the Nokia logo are trademarks of Nokia Corporation.
Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question