TELESIN TE-RCSS-003

TELESIN TE-RCSS-003 51.2"/1.3M Selfie Stick Tripod with Remote Control User Manual

Model: TE-RCSS-003

1. Product Overview

The TELESIN TE-RCSS-003 is a versatile 51.2-inch (1.3-meter) selfie stick and tripod combination designed for use with GoPro cameras (Hero 8, 9, 10, 11, 12, Max, Mini) and iOS/Android smartphones. It features a built-in, non-detachable tripod for stability and an integrated Bluetooth remote control for convenient operation. Constructed from aluminum, it offers durability and a compact design for portability.



Figure 1: TELESIN Selfie Stick Tripod with Remote Control. This image displays the selfie stick extended with a GoPro, the remote control, the stick folded, and the stick in tripod mode with a smartphone.

2. Package Contents

Verify that all items are present in the package:

- 1 x Selfie Stick Pole
- 1 x Bluetooth Remote Control
- 1 x Type-C Data Cable (for remote charging)
- 1 x Phone Clip
- 1 x Short Screw
- 1 x Long Screw
- 1 x User Manual (this document)
- 1 x Packaging Box

3. Setup

3.1 Attaching Devices

1. **For GoPro Cameras:** Use the provided screws to attach your GoPro camera directly to the mounting head of the selfie stick.

2. **For Smartphones:** Attach the phone clip to the mounting head. Secure your smartphone within the phone clip. Ensure the phone is held firmly. The phone clip allows for both horizontal and vertical orientation.



Figure 2: Switching between horizontal and vertical phone orientations on the selfie stick.

3.2 Remote Control Pairing

The remote control is magnetic and can be attached to the selfie stick for convenience. It has two modes: GoPro Camera Mode (green light) and Phone Mode (red light).



Figure 3: The remote control offers a wireless connection range of approximately 40 meters in open areas.

3.2.1 Connect with GoPro Camera Mode:

1. Long press the power button on the remote control until the indicator light flashes.
2. If the green light flashes, proceed to the next step. If the red light flashes, long press the mode button until the green light flashes.
3. On your GoPro camera, swipe down, then swipe left to access the connection settings. Select **Connect** > **Connect Device** > **GoPro App**.
4. Wait for the camera to confirm successful connection.
5. Once connected, the green light on the remote will stop flashing and remain solid. Press the photo button to capture photos, or press the mode button to switch between camera modes (photography delay, video recording, photo recording).

3.2.2 Connect with Phone Mode:

1. Long press the power button on the remote control until the indicator light flashes.
2. If the red light flashes, proceed to the next step. If the green light flashes, long press the mode button until the red light flashes.
3. On your mobile phone, enable Bluetooth and search for the device named**"t-se"**. Click to pair. The red light on the remote control will flash during pairing and become solid upon successful connection.

4. Open your phone's camera application and press the photo button on the remote to take photos or start/stop video recording.

4. Operating Instructions

4.1 Extending and Retracting the Selfie Stick

To extend the selfie stick, gently pull the sections outwards. To retract, push the sections back into the main body. The aluminum alloy pole is designed for smooth extension and retraction, and it will remain stable at various lengths up to 51.2 inches (1.3 meters).

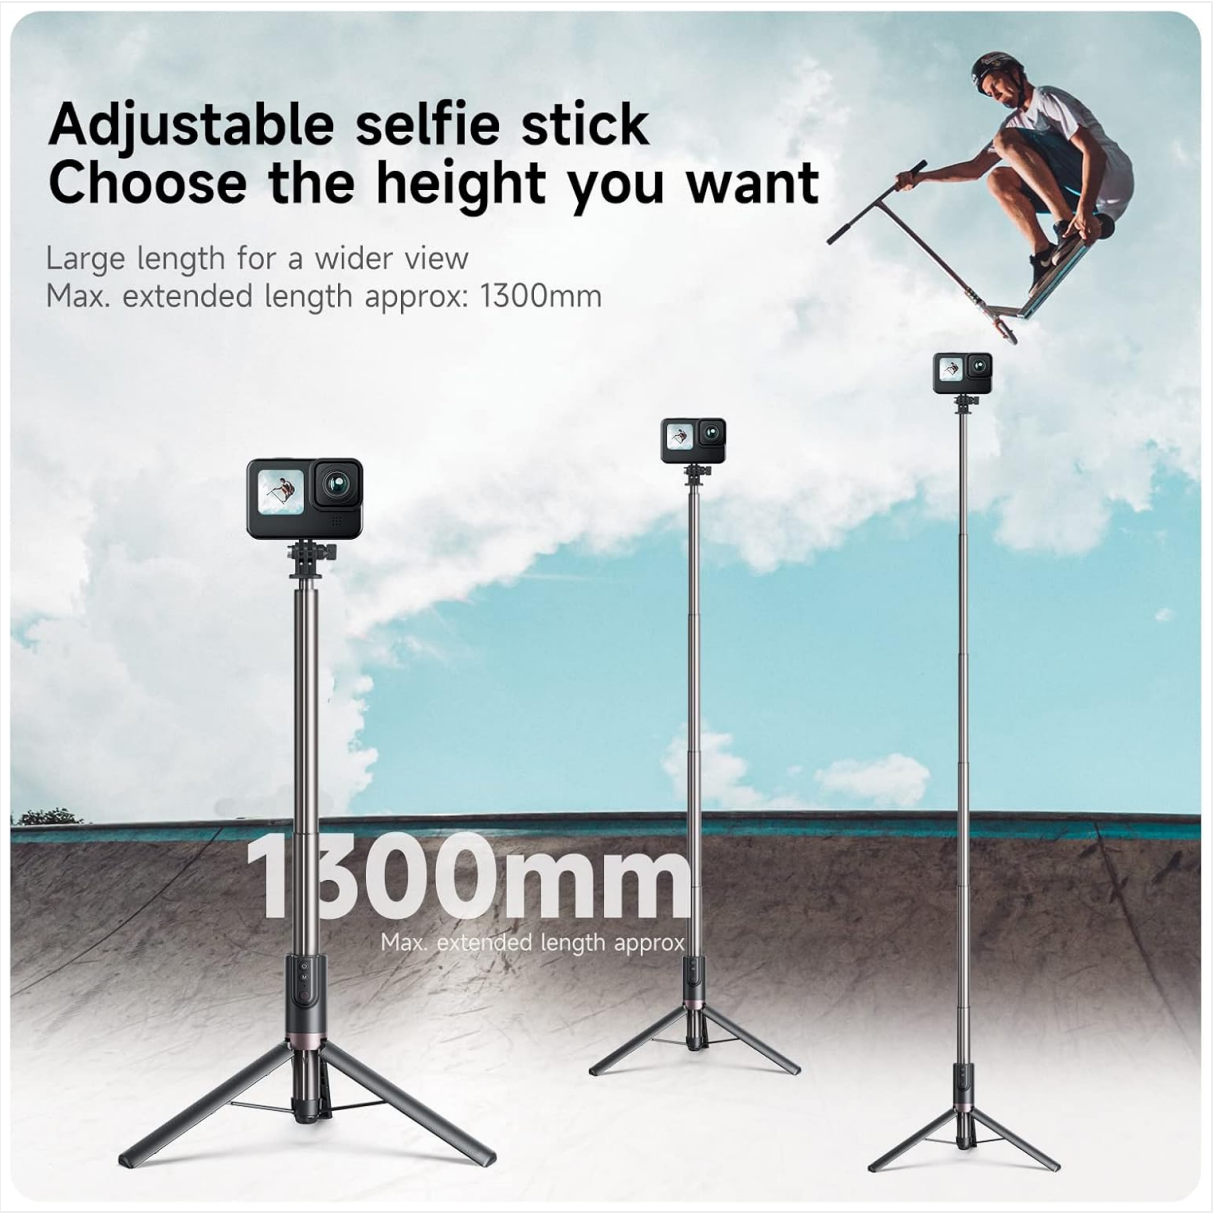


Figure 4: The selfie stick can be adjusted to various heights, with a maximum extended length of approximately 1300mm.

4.2 Using the Tripod Function

The selfie stick features a built-in tripod. To deploy the tripod, locate the button at the bottom of the handle. Press this button to expand the three legs, transforming the monopod into a stable tripod. Ensure the legs are fully extended for maximum stability. To fold the tripod, press the button again and gently push the legs back into the handle.



Figure 5: Mechanism for transforming the selfie stick into a tripod by pressing a button to expand the metal triangular support legs.

4.3 Remote Control Functions

- **Power Button:** Long press to turn the remote on/off.
- **Mode Button (M):**
  - In GoPro mode (green light): Switches between photography, video recording, and time-lapse modes.
  - Long press: Switches between GoPro mode (green light) and Phone mode (red light).
- **Shutter Button (Red Circle):**
  - In GoPro mode: Takes photos, starts/stops video recording, or initiates time-lapse.
  - In Phone mode: Takes photos or starts/stops video recording in the phone's camera app.

For security during extreme sports, it is recommended to connect the remote with a strap to prevent loss.

5. Maintenance

- **Cleaning:** Wipe the selfie stick and remote control with a soft, dry cloth. Avoid using harsh chemicals

or abrasive materials.

- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the remote control is turned off before storage.
- **Waterproof:** The selfie stick is designed to be waterproof. However, ensure the remote control's charging port is dry before charging.
- **Remote Battery:** The remote control contains a rechargeable Lithium-Ion battery. Charge it using the provided Type-C data cable when the battery is low.

6. Troubleshooting

Issue	Possible Cause / Solution
Remote control does not turn on.	The battery may be depleted. Charge the remote control using the Type-C data cable.
Remote control fails to pair with GoPro/Phone.	◦ Ensure the remote is in the correct mode (green for GoPro, red for Phone). Long press the mode button to switch. ◦ Ensure Bluetooth is enabled on your phone or GoPro. ◦ Make sure the remote is within the 40-meter operating range. ◦ Restart the remote control and the device you are trying to pair. ◦ For phones, ensure no other Bluetooth devices are interfering.
Remote control takes photos but also adjusts phone volume.	This can occur on some Android phones where the volume button acts as a shutter. Check your phone's camera settings for an option to disable volume key functions or remap them.
Selfie stick feels unstable when fully extended.	Ensure all telescoping sections are fully extended and locked. Avoid excessive weight on the end of the stick. For maximum stability, use the tripod function.
Tripod legs do not deploy or retract smoothly.	Ensure the release button at the bottom is fully pressed. Check for any obstructions or debris in the leg mechanism.

7. Specifications

Feature	Detail
Model Number	TE-RCSS-003
Material	Aluminum Alloy
Maximum Extended Height	51.2 inches (1.3 meters / 1300mm)
Minimum Height (Folded)	9.7 inches (26.5 cm)

Feature	Detail
Item Weight	8.1 ounces (230 grams)
Remote Control Range	Approximately 40 meters (open area)
Remote Control Battery	1 x Lithium Ion (rechargeable, included)
Compatible Devices	GoPro Hero 8/9/10/11/12/Max/Mini, iOS/Android Smartphones (e.g., iPhone 13/12/11 Pro Max XS MAX 8 6 7 Plus, Samsung Galaxy Note 20 10 S10 S9)
Special Feature	Integrated Bluetooth Remote Control, Built-in Tripod

8. Warranty and Support

This product comes with a 90-day free return and refund policy, and a 12-month warranty period. For any product-related issues or shipping concerns, please contact GAOPOLO online customer service for assistance.
For further support, you may visit the official TELESIN store:TELESIN Store on Amazon

© 2024 TELESIN. All rights reserved.