OSOTEK H200

OSOTEK H200 Cordless Wet Dry Vacuum Cleaner User Manual

Model: H200 | Brand: OSOTEK

1. Introduction

Welcome to the OSOTEK H200 Cordless Wet Dry Vacuum Cleaner user manual. This innovative 3-in-1 cleaning machine is designed to vacuum, wash, and mop your hard tile and wood floors simultaneously, providing a comprehensive and efficient cleaning solution. The H200 features a unique 180° lie-flat design for reaching difficult areas, advanced brush roll technology for superior cleaning, and smart functionalities for ease of use.

The OSOTEK H200 aims to simplify your cleaning routine, offering powerful suction for both wet and dry messes, effective hair elimination, and a self-cleaning brush roll system. Its dual water tank design ensures clean water is always used for mopping, while separating solid and liquid waste for hygienic disposal.



Figure 1: OSOTEK H200 Cordless Wet Dry Vacuum Cleaner with cleaning solution and brush.

2. Important Safety Instructions

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Use only as described in this manual.
- Do not immerse the appliance in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not pick up flammable or combustible materials, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Always turn off the appliance before connecting or disconnecting the brush roll or other accessories.
- Store the appliance indoors in a cool, dry place.

3. What's Included

The OSOTEK H200 package includes the following components:

- OSOTEK H200 Cordless Wet Dry Vacuum Cleaner Unit
- Charging Base / Dock
- Brush Roll (pre-installed or included separately)
- Clean Water Tank
- Dirty Water Tank
- Cleaning Brush (for maintenance)
- Power Adapter
- User Manual (this document)



Figure 2: OSOTEK H200 on its convenient charging dock.

4. Setup

4.1 Assembly

1. Carefully unpack all components from the packaging.
2. Attach the handle to the main body of the vacuum cleaner until it clicks securely into place.
3. Ensure the clean water tank and dirty water tank are correctly inserted into their respective compartments.

4.2 Initial Charging

Before first use, fully charge the vacuum cleaner. The charging time is approximately 8 hours.

1. Place the OSOTEK H200 onto its charging base.
2. Connect the power adapter to the charging base and plug it into a wall outlet.

3. The digital display on the vacuum will indicate the charging status. A full charge is indicated by 100% on the display.

4.3 Filling the Clean Water Tank

The H200 is equipped with a 750ml clean water tank.

1. Remove the clean water tank from the main unit.
2. Open the tank cap and fill with clean tap water. For optimal cleaning, you may add a small amount of non-foaming, compatible floor cleaning solution (refer to solution manufacturer's instructions).
3. Close the tank cap securely and reinsert the clean water tank into the vacuum cleaner.

5. Operating Instructions

5.1 Powering On/Off and Mode Selection

- Press the power button on the handle to turn the unit on or off.
- Use the mode selection button to cycle through the three dynamic cleaning modes: Standard, Max, and Water Absorption.
- The smart LED display will show the current mode, battery level, and other relevant information.

5.2 Cleaning Your Floors

The OSOTEK H200 vacuums, washes, and mops simultaneously. It is suitable for hard tile and wood floors.

- **Standard Mode:** Ideal for everyday cleaning of light dirt and dust.
- **Max Mode:** Provides increased suction and water flow for stubborn stains and heavier messes.
- **Water Absorption Mode:** Designed to pick up spills and remove excess moisture from floors, leaving them dry quickly.

5.3 180° Lie-Flat Design and Edge Cleaning

The H200's unique design allows the main unit to lie flat up to 180°, enabling access to hard-to-reach areas such as under furniture, beds, and sofas without moving them. The head also rotates up to 150 degrees for enhanced maneuverability.

Your browser does not support the video tag.

Video 1: Demonstration of the 180° horizontally flexible adjustability for deeper cleaning under furniture.

Equipped with powerful LED headlights, the vacuum illuminates dark areas, ensuring no dirt is missed. The brush head is designed for 2-sides edge cleaning, allowing you to clean right up to baseboards and corners effectively.

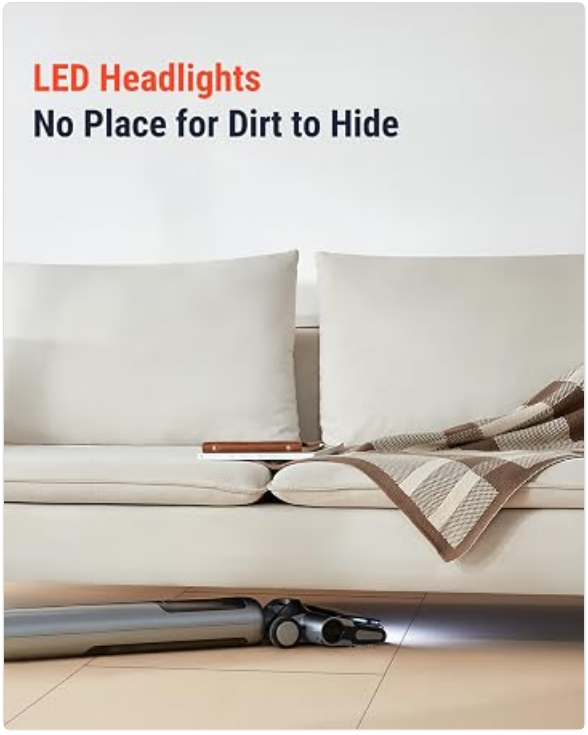


Figure 3: The OSOTEK H200's LED headlights illuminate dirt under furniture for thorough cleaning.



Figure 4: The 2-sides edge cleaning design ensures comprehensive cleaning along walls and corners.

6. Maintenance

6.1 Self-Cleaning Function

The OSOTEK H200 features a convenient self-cleaning brush roll function.

1. After cleaning, place the vacuum cleaner back on its charging dock.
2. Press the self-cleaning button (refer to the digital display or manual for button location).
3. The machine will use clean water and powerful suction to clean the brush roll, removing dirt and debris.
4. Once the self-cleaning cycle is complete, empty the dirty water tank.

6.2 Emptying the Dirty Water Tank

The dirty water tank has a wet and dry garbage separation function.

1. Remove the dirty water tank from the main unit.
2. Carefully open the tank and dispose of the separated solid waste into a trash bin.
3. Pour out the dirty liquid waste.
4. Rinse the dirty water tank thoroughly with clean water.
5. Reinsert the clean dirty water tank into the vacuum cleaner.

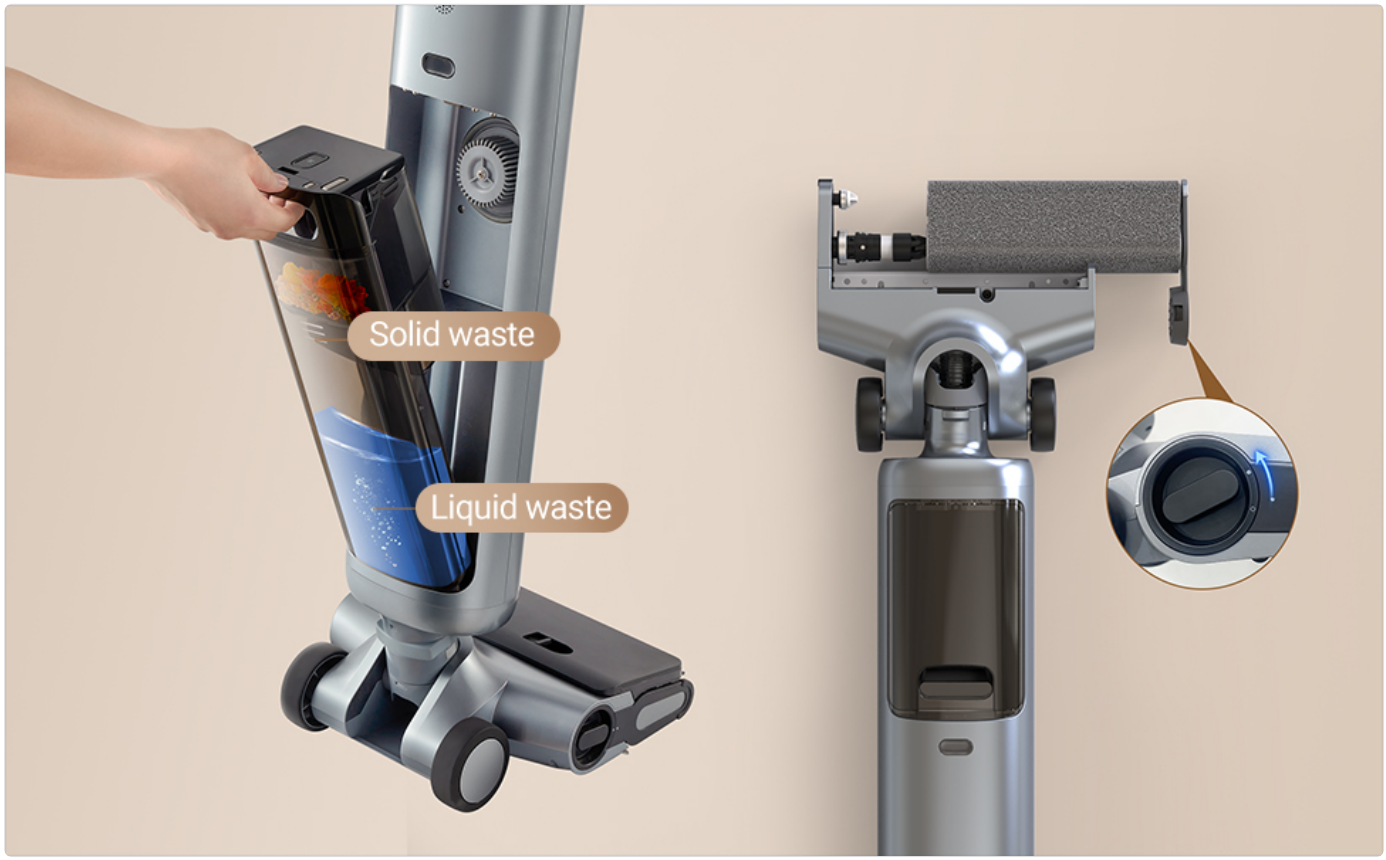


Figure 5: The dirty water tank separates solid and liquid waste for easy disposal.

6.3 Brush Roll Cleaning and Replacement

While the self-cleaning function is effective, periodic manual cleaning of the brush roll may be necessary, especially if hair tangles occur.

1. Ensure the vacuum is turned off and disconnected from the charger.
2. Remove the brush roll cover and then the brush roll itself.
3. Use the provided cleaning brush to remove any tangled hair or debris from the brush roll.
4. Rinse the brush roll under running water if necessary and allow it to air dry completely before reinserting.
5. Replace the brush roll and cover securely.

7. Troubleshooting

If you encounter issues with your OSOTEK H200, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum not turning on	Low battery; Not properly docked; Power button not pressed firmly.	Charge the unit fully; Ensure it's correctly seated on the charging base; Press the power button firmly.
Poor suction	Dirty water tank full; Clogged brush roll; Clogged air ducts/filter.	Empty and clean dirty water tank; Clean brush roll; Check and clear any blockages in air ducts or filter.
Leaves streaks on floor	Dirty brush roll; Dirty water tank not emptied; Too much cleaning solution.	Clean brush roll; Empty and rinse dirty water tank; Use less cleaning solution or switch to water-only.
Abnormal noise	Obstruction in brush roll or suction path; Loose component.	Turn off and inspect brush roll and suction path for obstructions; Ensure all components are securely attached.

If the problem persists after attempting these solutions, please contact OSOTEK customer support.

8. Specifications

Feature	Detail
Brand	OSOTEK
Model Number	H200
Special Features	Auto-Traction Control, Cordless, Smart Surface Sensor, Three Dynamic Cleaning Modes, 180° Lie-Flat Design, LED Headlights, Self-Cleaning Brush Roll
Filter Type	Cartridge
Cordless	Yes
Capacity (Dirty Water Tank)	1.5 Pounds (approx. 0.68 kg)
Clean Water Tank Capacity	750ml (approx. 0.75 liters)
Runtime	Up to 35 minutes
Charging Time	8 Hours
Recommended Uses	Hard Floor, Tile
Form Factor	Stick
Color	White
Noise Level	75 dB

Feature	Detail
Amperage	3.6 Amps
Motor Horsepower	1.2 Horsepower
Control Method	Touch, Push Button
Number of Speeds/Power Levels	3
Product Dimensions	9.85 x 9.85 x 43.3 inches
Item Weight	21.2 pounds

9. Warranty and Support

For warranty information, technical support, or service inquiries, please contact OSOTEK customer support through the official website or your point of purchase. Please have your model number (H200) and purchase details ready when contacting support. You can also visit the official OSOTEK store for more information and product updates:OSOTEK Store on Amazon.

© 2023 OSOTEK. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question