Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

OSOTEK H200

OSOTEK H200 Wet Dry Vacuum Cleaner User Manual

Model: H200 | Brand: OSOTEK

Introduction

The OSOTEK H200 Wet Dry Vacuum Cleaner is an advanced cleaning machine designed to simplify floor maintenance. This smart cordless device simultaneously vacuums, washes, and mops hard tile and wood floors, providing a comprehensive cleaning solution. Its innovative features, such as the 180° lie-flat design, digital display, and self-cleaning brush roll, ensure efficient and thorough cleaning, even in hard-to-reach areas.

Safety Instructions

Please read all safety instructions carefully before using the OSOTEK H200 Wet Dry Vacuum Cleaner to prevent injury or damage. Keep this manual for future reference.

- Ensure the power adapter is compatible with your local power supply.
- Do not immerse the main unit in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only OSOTEK recommended cleaning solutions.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Always turn off the appliance before connecting or disconnecting the brush roll.
- Store the vacuum in a dry indoor area.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Package Contents

Verify that all items are included in your package:



Image: The OSOTEK H200 Wet Dry Vacuum Cleaner shown with its included accessories: charging station, storage box, power cable, brush roll, filter, water tank cleaning brush, and Osotek sanitize formula.

- OSOTEK H200 Main Unit
- Charging Station
- Power Cable
- Brush Roll
- Filter
- Water Tank Cleaning Brush
- OSOTEK Sanitize Formula
- Storage Box

Product Features

180° Horizontally Reclining Design

The unique 180° horizontally reclining design allows the vacuum to lie flat, making it easy to clean under furniture, beds, and other

hard-to-reach areas without moving heavy objects. This feature significantly enhances cleaning accessibility.

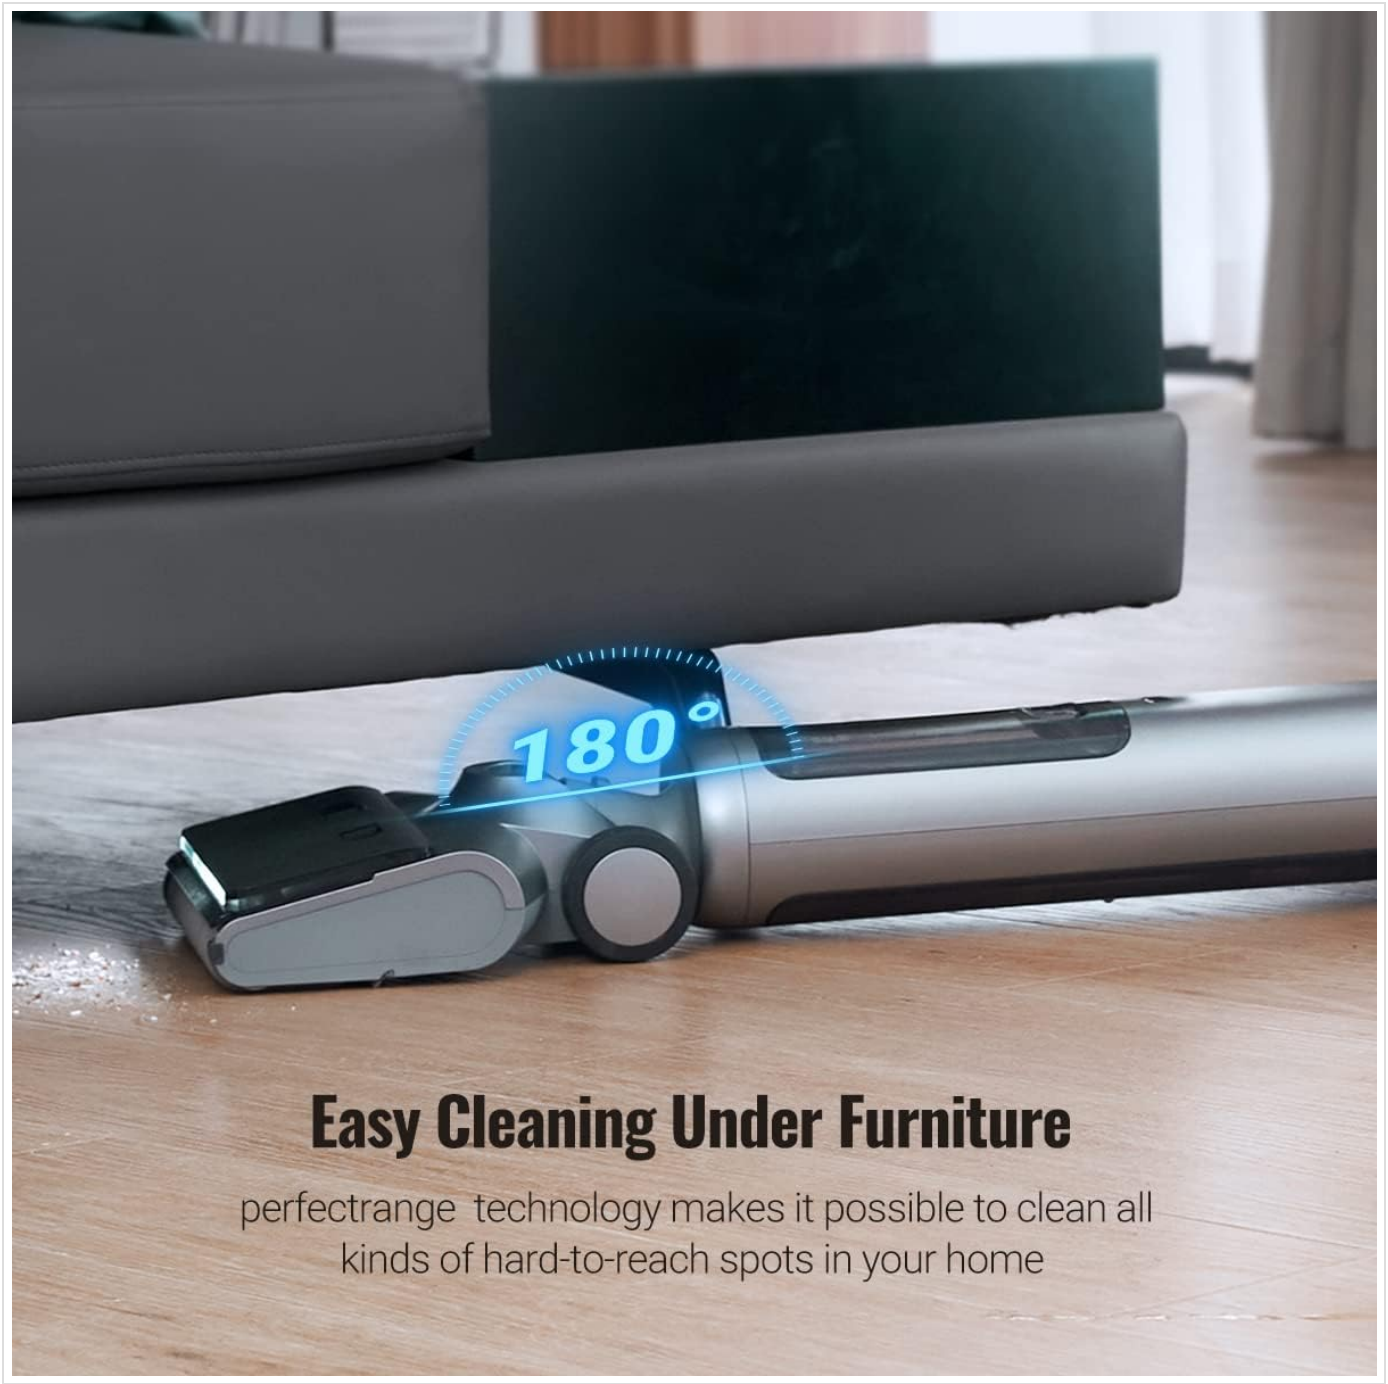


Image: The OSOTEK H200 vacuum cleaner demonstrating its 180° lie-flat capability, reaching deep under a piece of furniture to clean the floor.

Your browser does not support the video tag.

Video: This video demonstrates the OSOTEK H200's horizontally flexible adjustability, showing how it can lie flat to clean under low-clearance furniture, making previously unattainable areas reachable. It also highlights its ability to absorb large particles, eliminate hair tangles, and absorb liquids efficiently.

Innovative Self-Cleaning System

The H200 features a real-time and one-touch self-cleaning system. After cleaning, simply place the vacuum on its charging base and press the self-clean button. The machine will automatically clean the brush roll, saving you time and effort.



Image: A close-up view of the OSOTEK H200's innovative self-cleaning system, showing water jets cleaning the brush roll while docked on its charging station.

Smart Digital Display

The integrated smart LED display provides real-time information, including cleaning modes, water level sensor alerts, voice broadcast status, and remaining battery life, ensuring an intuitive and user-friendly experience.



Image: The smart digital display of the OSOTEK H200, showing icons for cleaning modes, water level, voice broadcast, and battery indicator, designed for easier operation.

Dual High-Capacity Water Tanks

Equipped with separate tanks for clean water (750ml) and dirty water (640ml), the H200 ensures that clean water is always used for washing, preventing cross-contamination and leaving no dirt streaks. The dirty water tank also features a wet and dry garbage separation function.



Image: A diagram illustrating the OSOTEK H200's dual water tank system, showing the flow of clean water to the brush roll and dirty water being collected into a separate tank, highlighting the 750ml clean water tank and 640ml used water tank.

Powerful LED Headlights and Edge Cleaning

Integrated LED headlights illuminate dark areas, ensuring no dirt or debris is missed. The 2-sides edge cleaning design allows the brush roll to reach close to baseboards and corners, providing a thorough clean along edges.



Image: The OSOTEK H200 vacuum cleaner with its LED headlights illuminating the floor under a sofa, demonstrating its ability to clean in dark or low-light areas.



Image: A close-up view of the OSOTEK H200 demonstrating its 2-sides edge cleaning capability, showing the brush head cleaning right up against a wall or baseboard.

Setup

Follow these steps to set up your OSOTEK H200 Wet Dry Vacuum Cleaner:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble Handle:** Insert the handle into the main unit until it clicks securely into place.
3. **Install Brush Roll:** Ensure the brush roll is correctly installed in the cleaning head.
4. **Fill Clean Water Tank:** Remove the clean water tank, fill it with tap water and the recommended amount of OSOTEK cleaning solution, then reinsert it into the main unit.
5. **Charge Battery:** Place the vacuum on the charging station and connect the power cable. Allow the unit to fully charge before first use. The digital display will indicate charging status.

Operating Instructions

Operating your OSOTEK H200 is straightforward:

1. **Power On:** Press the power button on the handle to turn on the vacuum.
2. **Select Mode:** Use the mode selection button (if available on the handle or display) to choose between different cleaning modes (e.g., standard, max, water absorption).
3. **Start Cleaning:** Tilt the vacuum back to engage the brush roll and begin cleaning. Move the vacuum slowly over the floor surface.
4. **Clean Under Furniture:** For low-clearance areas, gently recline the vacuum to its 180° flat position to reach under furniture.
5. **Monitor Display:** Keep an eye on the digital display for real-time information on battery life, water levels, and cleaning status.
6. **Water Absorption Mode:** For spills, activate the water absorption mode to quickly suck up liquids from the floor.
7. **Power Off:** Once finished, return the vacuum to an upright position and press the power button to turn it off.



Image: A person operating the OSOTEK H200 Wet Dry Vacuum Cleaner on a tiled floor with a visible spill, demonstrating its ability to vacuum and wash simultaneously.

Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

1. **Self-Cleaning Cycle:** After each use, place the vacuum on the charging station and initiate the self-cleaning cycle by pressing the dedicated button.
2. **Empty Dirty Water Tank:** After the self-cleaning cycle or when full, remove and empty the dirty water tank. Dispose of solid waste separately from liquid waste. Rinse the tank thoroughly with clean water.
3. **Clean Brush Roll:** Periodically remove the brush roll and clean any tangled hair or debris using the provided cleaning brush. Ensure it is dry before reinserting.
4. **Clean Filter:** Remove and rinse the filter regularly. Allow it to air dry completely before reinserting to maintain suction power.
5. **Wipe Down Unit:** Use a soft, damp cloth to wipe the exterior of the main unit and charging station.



Image: A diagram showing the dirty water tank of the OSOTEK H200, illustrating the separation of solid waste from liquid waste for easier disposal and maintenance.

Troubleshooting

If you encounter issues with your OSOTEK H200, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is low or depleted.	Place the vacuum on the charging station and ensure it is fully charged.
Poor suction.	Dirty water tank is full; Filter is clogged; Brush roll is tangled.	Empty dirty water tank; Clean or replace filter; Clean brush roll.
Water not dispensing.	Clean water tank is empty; Tank is not properly installed.	Refill clean water tank; Reinstall tank securely.
Abnormal noise during operation.	Obstruction in brush roll or air path.	Turn off and inspect brush roll and air path for blockages.

Specifications

Feature	Detail
Brand	OSOTEK
Model Number	H200
Special Feature	Wet, Dry

Feature	Detail
Included Components	Brush
Cordless	Yes
Form Factor	Stick
Noise Level	75 dB
Control Method	Touch, Push Button
Product Dimensions	9.85 x 9.85 x 43.3 inches
Item Weight	21.2 pounds

Warranty and Support

For detailed warranty information, technical support, or to download the full PDF user manual, please refer to the official OSOTEK website or the provided PDF document.
Official User Manual (PDF): Download Here

© 2023 OSOTEK. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BDR2C6NX

More documents and user manuals: **https://manuals.plus/**