AOSKY BK-RB-G3672

AOSKY Cordless Blackout Roller Shades Instruction Manual

Model: BK-RB-G3672

Brand: AOSKY

1. Introduction

This manual provides detailed instructions for the installation, operation, adjustment, and maintenance of your AOSKY Cordless Blackout Roller Shades. Designed for room darkening and UV protection, these shades feature a robust spring-loaded system for smooth, cordless operation. Please read this manual thoroughly before installation and retain it for future reference.

2. Package Contents

Before beginning installation, please verify that all components are present:

- 1 x AOSKY Cordless Blackout Roller Shade (36"W x 72"H, Grey)
- Mounting Hardware (screws, wall anchors)
- Metal Brackets
- User Manual
- Valance (if applicable to specific model)

If any parts are missing or damaged, please contact AOSKY customer service for assistance.

3. Product Features

- **100% Blackout Material:** Made of 100% polyester with a reinforced thermal insulated coating, blocking 100% of sunlight and UV rays.
- **Thermal Insulation:** The thermal backing helps reduce heat loss in winter and heat gain in summer, contributing to energy efficiency.
- **Cordless Design:** Features a robust spring-loaded mechanism for enhanced safety for children and pets, eliminating hazardous cords.
- **Smooth Operation:** Passed 5,000 lifting/pulling tests, allowing the shade to stop smoothly at any desired position.
- **Easy Installation:** Designed for convenient installation with included hardware and clear instructions.

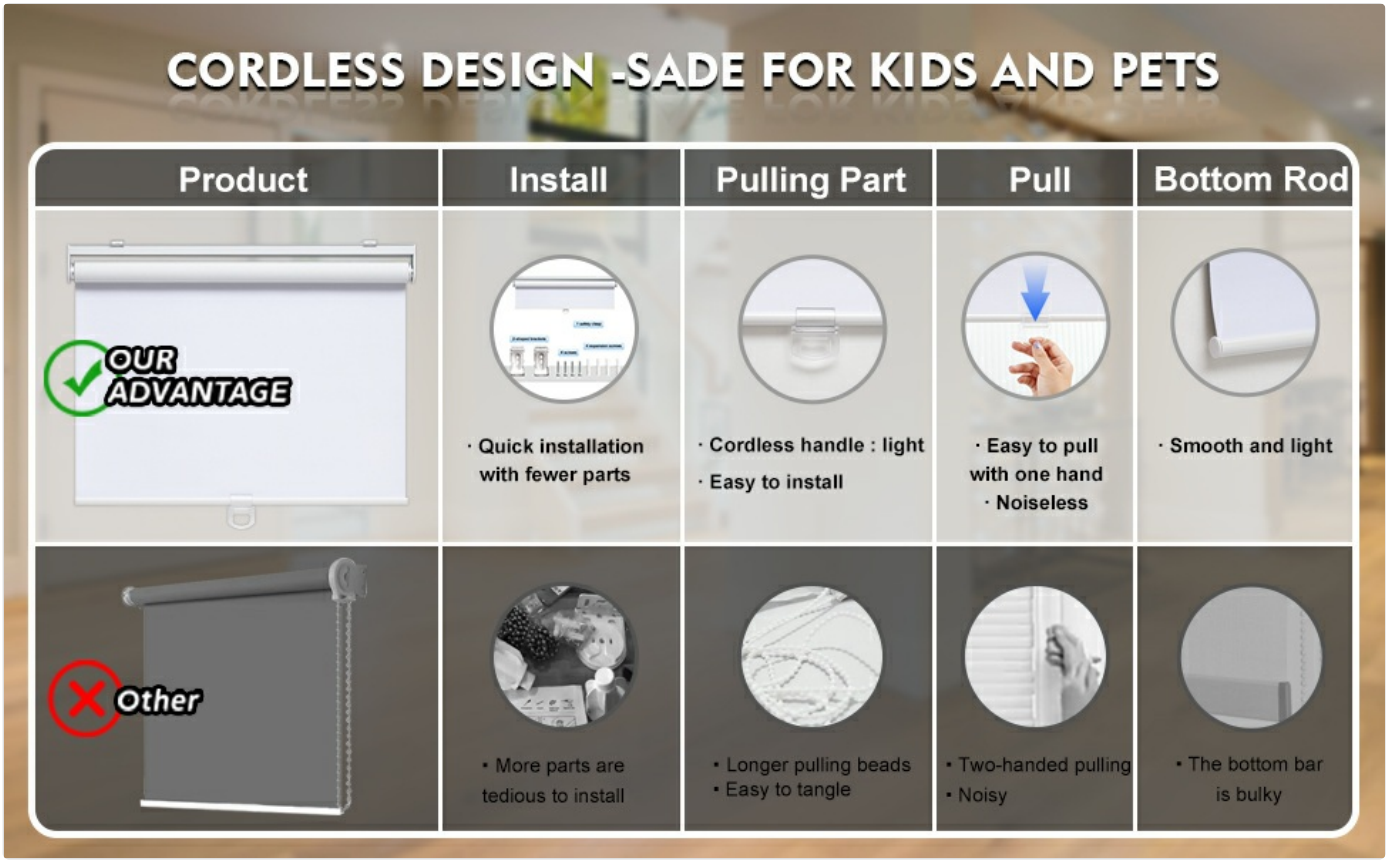


Figure 1: Advantages of AOSKY Cordless Roller Shades

4. Sizing Guide

Accurate measurement is crucial for proper fit and function. Consider whether you will be using an inside mount or an outside mount.

Inside Mount:


- **Order Width:** Exact window width (or 0-1 inch less).
- **Shade Height:** Works for windows less than 72" high.
- **Fabric Width:** 1 inch shorter than the order width.
- **Window Depth:** Requires > 2" depth for flush fit.

Outside Mount:

- **Shade Width:** Window width + 4" or more (to ensure full window coverage and minimize light gaps).
- **Shade Height:** Works for windows less than 72" high.
- **Window Depth:** No requirement for window depth.

Note: For 100% blackout, an outside mount is recommended as a tiny light gap will exist on each side with an inside mount.

Example choose a 23″ shade

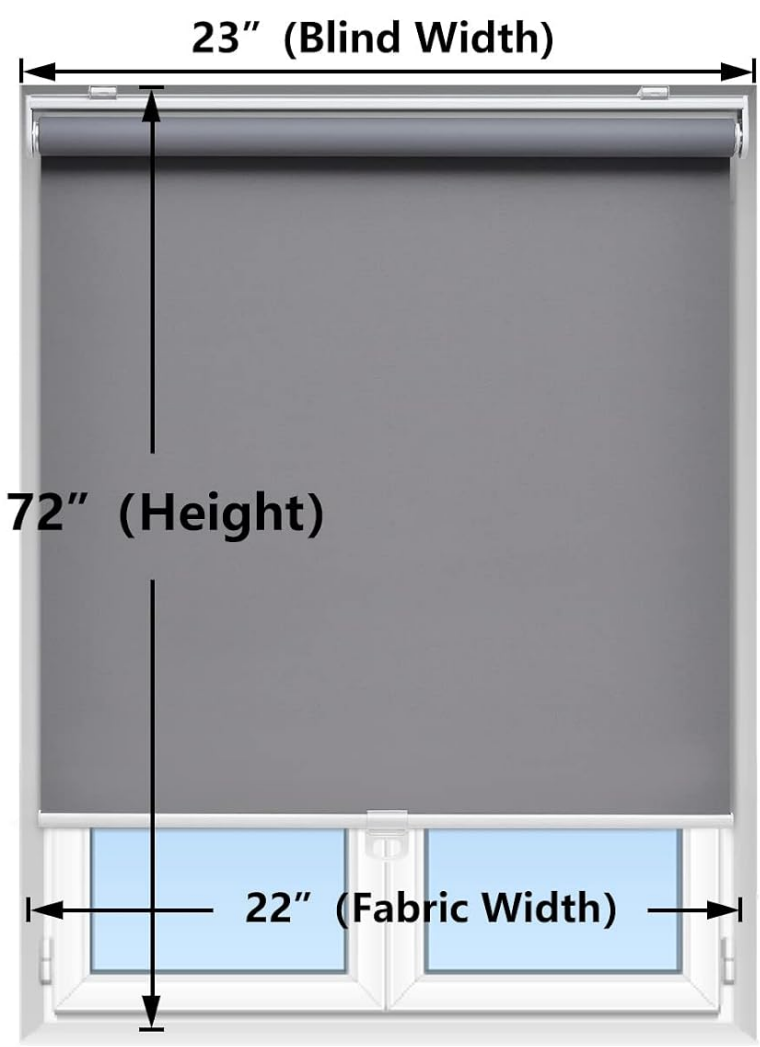



Fabric Width=Blind Width-1 inch

Blind Width	Fabric Width	Height
23″	22″	72″
.....	.....	
47″	46″	
48″	47″	

Note: Tiny light gap will exist on each side.
please choose outside mount for 100% blackout.

Figure 2: Sizing Example and Fabric Width Note



Figure 3: Inside Mount Measurement Guide



Figure 4: Outside Mount Measurement Guide

5. Installation Instructions

Follow these steps for quick and convenient installation. A drill, tape measure, and pencil are recommended tools.

1. **Mark Bracket Positions:** Based on your chosen mount type (inside or outside), hold the brackets in place and mark the screw holes with a pencil. Ensure brackets are level and spaced appropriately to support the shade.
2. **Drill Pilot Holes:** Drill pilot holes at the marked positions. For drywall, insert the provided wall anchors before screwing in the brackets.
3. **Secure Brackets:** Attach the metal brackets using the provided screws. Ensure they are firmly secured.
4. **Install the Shade:** Align the top rod of the roller shade with the installed brackets. Gently push the shade into the brackets until it clicks securely into place.
5. **Remove Protective Film:** Carefully remove any protective film or paper from the shade fabric.
6. **Attach Handle:** If desired, slide the transparent handle onto the bottom rod of the shade.

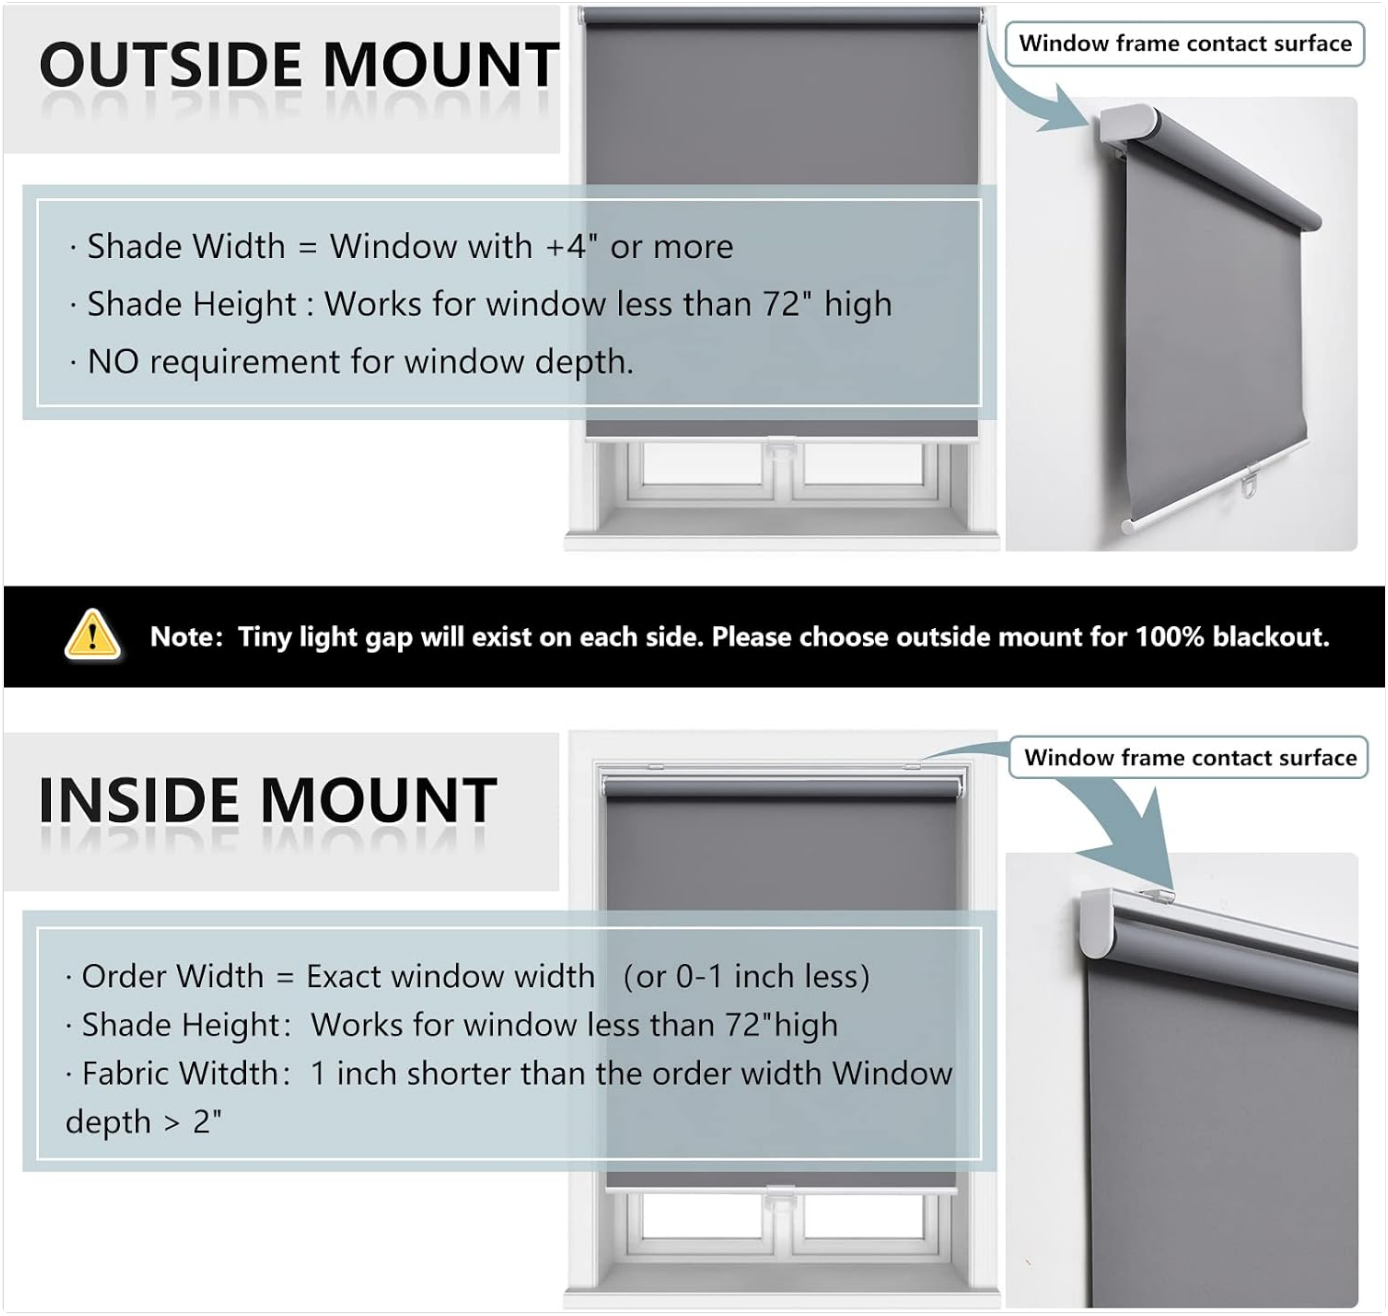


Figure 5: Inside and Outside Mount Installation Overview

Official Installation Video:

Video 1: AOSKY Installation Instruction. This video demonstrates the step-by-step process of installing the AOSKY Cordless Blackout Roller Shades, including mounting the brackets and attaching the shade.

Video 2: Cordless Roller Shades: Effortless Installation Guide by GENIMO. This video provides a visual guide to installing cordless roller shades, covering both inside and outside mount options.

6. Operation

Your AOSKY Cordless Blackout Roller Shade operates with a smooth, spring-loaded mechanism.

- **To Lower the Shade:** Gently pull the bottom rod or the attached handle downwards to the desired position. The shade will stop automatically when released.
- **To Raise the Shade:** Gently pull the bottom rod or the attached handle downwards slightly, then release. The shade will retract smoothly upwards. You can stop it at any point by gently pulling down again and releasing.

Note: Avoid forcing the shade up or down, as this may damage the spring mechanism.

7. Adjustment

The rebound position and speed of your roller shades can be adjusted to suit your preference.

- **Adjusting Rebound Speed:** Open the right side cover of the shade mechanism. Adjust the screw clockwise to make the rebound speed slower, and counterclockwise to make it faster.
- **Adjusting Rebound Position:** Open the left side cover of the shade mechanism. Adjust the screw counterclockwise to set the desired stopping position when the roller shades retract. The shade will return to this position when fully raised.



Figure 6: Adjustment Points for Rebound Speed and Position

8. Maintenance

To ensure the longevity and appearance of your AOSKY Cordless Blackout Roller Shades, follow these simple maintenance guidelines:

- **Cleaning:** Spot clean only. Use a soft, damp cloth with mild soap and water to gently clean any soiled areas. Avoid harsh chemicals or abrasive cleaners.

- **Dusting:** Regularly dust the shades with a soft brush or vacuum cleaner with a brush attachment.
- **Mechanism Care:** The cordless spring mechanism is designed to be maintenance-free. Do not attempt to lubricate or disassemble it.

9. Troubleshooting

If you encounter any issues with your roller shades, please refer to the following common solutions:

- **Shade Not Rolling Smoothly:** Check for any obstructions in the roller mechanism or along the fabric path. Ensure the shade is properly seated in the brackets.
- **Shade Not Staying in Position:** The spring tension may need adjustment. Refer to Section 7: Adjustment for instructions on adjusting rebound position and speed.
- **Light Leakage:** For inside mounts, some light leakage around the edges is normal due to the fabric being narrower than the blind width. For maximum blackout, an outside mount is recommended (refer to Section 4: Sizing Guide).

If problems persist, please contact AOSKY customer service for further assistance.

10. Specifications

Feature	Detail
Material	100% Polyester
Product Dimensions	72"L x 36"W
Brand	AOSKY
Color	Grey
Opacity	Blackout
Recommended Uses	Indoor, Outdoor
Specific Uses	Window, Door
Room Type	Bathroom (and other rooms requiring blackout)
Operation Mode	Manual
Special Feature	UV Protection
Included Components	Mounting Hardware, User Manual, Valance
Closure Type	Cordless
Mounting Type	Outside Mount (also supports Inside Mount)
Control Type	Wireless
Item Weight	3.24 pounds (1.47 Kilograms)
Item Model Number	BK-RB-G3672

11. Warranty & Support

For any questions, concerns, or warranty inquiries regarding your AOSKY Cordless Blackout Roller Shades, please contact AOSKY customer service. We are committed to providing a satisfactory solution within 24 hours for any issues you may

encounter.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question