Besia 6c087f8d-cb54-4c49-b9a4-b087be3de4f2

Universal Replacement Remote for Apple TV User Manual

Model: 6c087f8d-cb54-4c49-b9a4-b087be3de4f2
Brand: Besia

Introduction

Thank you for choosing the Besia Universal Replacement Remote. This manual provides essential information for setting up, operating, and maintaining your new remote control. Designed as a universal replacement, this remote offers seamless control for various Apple TV models and is also compatible with certain television brands.
Please note that this is an Infrared (IR) remote control. It does not support Bluetooth, RF, Siri voice commands, or touchpad functions. Line-of-sight to your device is required for proper operation.



Image: The Besia Universal Replacement Remote (left) shown alongside several original Apple TV remotes (right) that it is designed to replace, illustrating its universal compatibility.

Product Features

- **Universal Compatibility:** Works with all Apple TV models, including Apple TV 4K, Gen 1, 2, 3, 4, and HD (A2843, A2737, A2169, A1842, A1625, A1427, A1469, A1378, A1218).
- **TV Control:** Power, Volume Up/Down, and Mute buttons are compatible with Samsung, LG, Westinghouse, Insignia, Vizio, and Toshiba TVs.
- **No Programming Required:** Ready for use immediately after battery insertion.
- **Infrared (IR) Operation:** Reliable control via infrared signal.

Compatibility

This remote is designed for broad compatibility with Apple TV devices and select television brands. Please review the compatibility

details below:

Apple TV Compatibility:

- Apple TV 4K
- Apple TV HD
- Apple TV Gen 1, 2, 3, 4
- Supported Model Numbers: A2843, A2737, A2169, A1842, A1625, A1427, A1469, A1378, A1218

Television Compatibility (for Power, Volume, Mute buttons):

- Samsung
- LG
- Westinghouse
- Insignia
- Vizio
- Toshiba

Important Notes on Compatibility:

- This remote is **NOT compatible** with Roku TVs for TV control functions.
- This remote does **NOT** support Siri remote functions, voice control, or touchpad functions.
- It is **NOT compatible** with Homepod Mini or Homepod. For these devices, the original remote is required.

Besia



1: Power TV on/off

2: GO HOME

3: Navigation Arrows

4: CONFIRM

5: GO BACK

6: MUTE

7: VOL UP

8: VOL DOWN

9: CHANGE YOUTUBE VIDEOS

10: START AT BEGINNING

11: REWIND 5 SECS

12: STOP

13: SKIP 5 SECS

14: REWIND 10 SECS

15: PAUSE

16: SKIP 10 SECS

Note: Power, Vol+and Vol- ,Mute only work for TV Brand: Samsung,LG,Sony,Westinghouse,Insignia,Vizio,Toshiba, not for any ROKU TV

Image: A visual representation of the remote's compatibility, displaying various TV brands (Hisense, LG, Samsung, Vizio, Sony) and different Apple TV generations (Gen 2 3, HD, 4K) that can be controlled by this single remote.

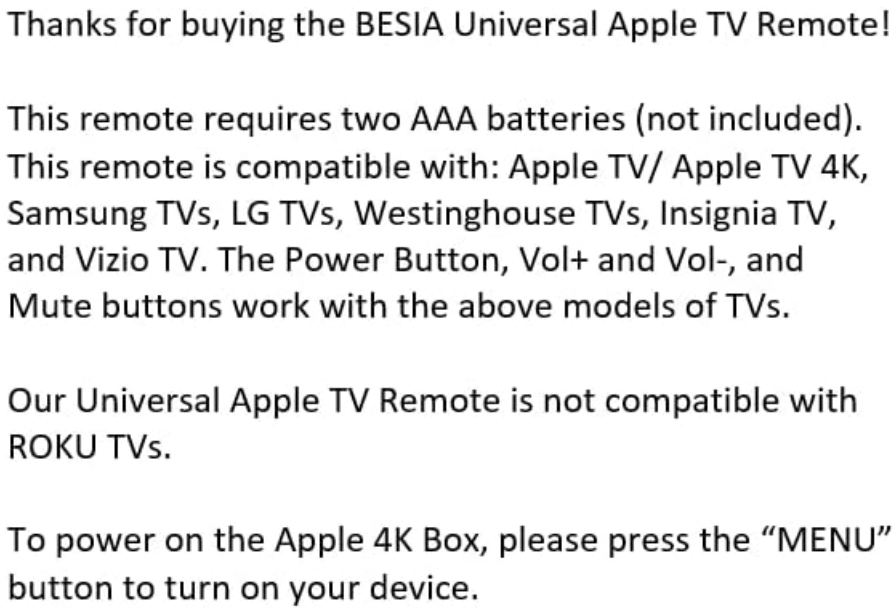


Image: A text-based image detailing the specific Apple TV and Apple TV 4K model numbers (A1625, A1427, A1469, A1378, A1218, A1842, A2169) that are compatible with the remote.

Setup

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two (2) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment. *(Batteries are not included)*
4. Close the battery cover securely.

Initial Use:

This remote requires no programming. Once batteries are installed, it is ready for immediate use with your Apple TV.

- To begin using the remote, ensure your TV's input/source is set to your Apple TV channel.
- Press the **MENU** button on the remote to activate your Apple TV.

Operating Instructions

Familiarize yourself with the buttons and their functions:



Compatibility

- **Apple TV**
  A1625 A1427 A1469 A1378 A1218
- **Apple TV 4K**
  A1842 A2169



Image: A detailed diagram of the Besia Universal Replacement Remote, with each button clearly numbered and labeled with its specific function, such as Power, Menu, Navigation Arrows, OK, Mute, Volume Up/Down, and various playback controls.

Remote Button Functions

Button	Function	Notes
Power ( )	Turns the TV on and off.	Works with compatible TV brands (Samsung, LG, Westinghouse, Insignia, Vizio, Toshiba). Does not control Apple TV power directly.
MENU	Goes to the Apple TV home screen / Activates Apple TV.	Can also turn on Apple TV.

Button	Function	Notes
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and content.	Standard navigation for Apple TV interface.
OK	Confirms selection.	Equivalent to clicking on an item.
Back (◀)	Goes back to the previous screen.	
Mute ( )	Mutes/unmutes TV volume.	Works with compatible TV brands. Does not mute Apple TV audio directly.
Vol+ / Vol-	Adjusts TV volume up or down.	Works with compatible TV brands. Does not control Apple TV volume directly.
CH+ / CH-	Changes channels (e.g., on YouTube).	Functionality may vary by app.
Rewind ( )	Rewinds content.	
Fast Forward ( )	Fast forwards content.	
Play/Pause ( )	Plays or pauses content.	
Stop ( )	Stops playback.	

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the remote. Avoid using abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Disposal:** Dispose of old batteries according to local regulations.

Troubleshooting

Common Issues and Solutions

Problem	Possible Cause	Solution
Remote not responding to Apple TV.	Low or dead batteries; Obstruction between remote and Apple TV; Apple TV unresponsive.	Replace batteries. Ensure clear line-of-sight. Try unplugging your Apple TV from power for 10 seconds, then plug it back in.
TV Power/Volume/Mute buttons not working.	TV brand not supported; Incorrect TV input.	Verify your TV is one of the supported brands (Samsung, LG, Westinghouse, Insignia, Vizio, Toshiba). Ensure your TV input is set to the Apple TV.
No Siri, voice, or touchpad functions.	This remote does not support these features.	This is an IR-only remote. These functions are not available.
Remote feels sluggish or delayed.	Weak batteries.	Replace batteries with fresh AAA batteries.

Specifications

Product Specifications

Feature	Detail
Product Dimensions	5 x 5.49 x 0.5 inches
Item Weight	1.45 ounces
ASIN	B0BFC444V7
Item Model Number	6c087f8d-cb54-4c49-b9a4-b087be3de4f2
Batteries Required	2 AAA batteries (not included)
Manufacturer	Young Electronics
Brand	Besia
Special Feature	Universal
Color	Black, Grey, White
Max Number of Supported Devices	5
Compatible Devices	Set Top Box (Apple TV), Television

Warranty and Support

Specific warranty information for this product is not detailed within this manual. For any warranty claims, technical support, or product inquiries, please contact the seller or manufacturer directly through your purchase platform.
Manufacturer: Young Electronics
Brand: Besia

© 2024 Besia. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question