Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

WOPET FT70 Plus

WOPET FT70 Plus Automatic Pet Feeder User Manual

Model: FT70 Plus

Product Overview

The WOPET FT70 Plus Automatic Pet Feeder is designed to provide convenient and reliable feeding for your cats and dogs. With its programmable features, you can ensure your pets receive the right portions at the right time, even when you're away. This feeder boasts a 4L capacity, voice recording function, and dual power supply options for uninterrupted operation.



Figure 1: WOPET FT70 Plus Automatic Pet Feeder with food bowl.

Setup and Assembly

Follow these steps to assemble and prepare your WOPET FT70 Plus feeder for use.

1. **Unpack Components:** Carefully remove all components from the packaging, including the main feeder unit, food tank, food tray, desiccant bag, and power adapter.
2. **Remove Food Tank:** To remove the food tank, press the two buttons located at both sides of the pet feeder and pull up. Remove the food tray and other accessories from the tank.
3. **Install Desiccant:** Place the provided desiccant into its designated compartment within the lid to keep food fresh.
4. **Install Food Tray:** Securely attach the food tray to the base of the feeder.
5. **Power Supply:** The feeder supports dual power supply. Use the wired adapter for primary power. For backup, insert 3 D batteries (not included) into the battery compartment at the bottom. It is recommended to use both modes to prevent power loss during interruptions.
6. **Fill Food Tank:** Open the cover and fill the food tank with dry pet food. Ensure kibble size is between 2-15mm in diameter for smooth dispensing. It is not recommended to pour food straight from the bag into the tank. Follow the arrow sign to place the cover, then twist to lock, making sure to align with the sticker.

Your browser does not support the video tag.

Video 1: WOPET Cat Feeder Assembly and Setting for FT70 & FT70 Plus. This video demonstrates the assembly process and initial setup of the feeder.



Figure 2: Dual-Function Feeding and Storage with 5L capacity. Suitable for both dogs and cats.

Operating Instructions

Setting Current Time

To set the current time on your feeder:

1. Ensure the feeder screen is unlocked. If locked, press and hold the setting button (⚙) for 2 seconds to unlock.
2. Press the setting button (⚙) to set the current hour. Use the increase (▲) / decrease (▼) buttons to adjust. Press the setting button (⚙) again to save.
3. Repeat the process to set the minute. Press the setting button (⚙) to save.

Scheduling Feeding Plan

The WOPET FT70 Plus allows you to schedule 1-6 meals per day with up to 8 portions per meal.

1. Press the decrease button (▼) to move to set the first meal.
2. Press the setting button (⚙) to set the meal time. Use the increase (▲) / decrease (▼) buttons to set the hour and minute. Press the setting button (⚙) to save.
3. Use the increase (▲) / decrease (▼) buttons to set up the portion size for this meal. Then press the setting button (⚙) to save.
4. Continue this procedure for setting the third to sixth meals if needed.
5. When you are done with all settings, press the return button (↩) to exit.

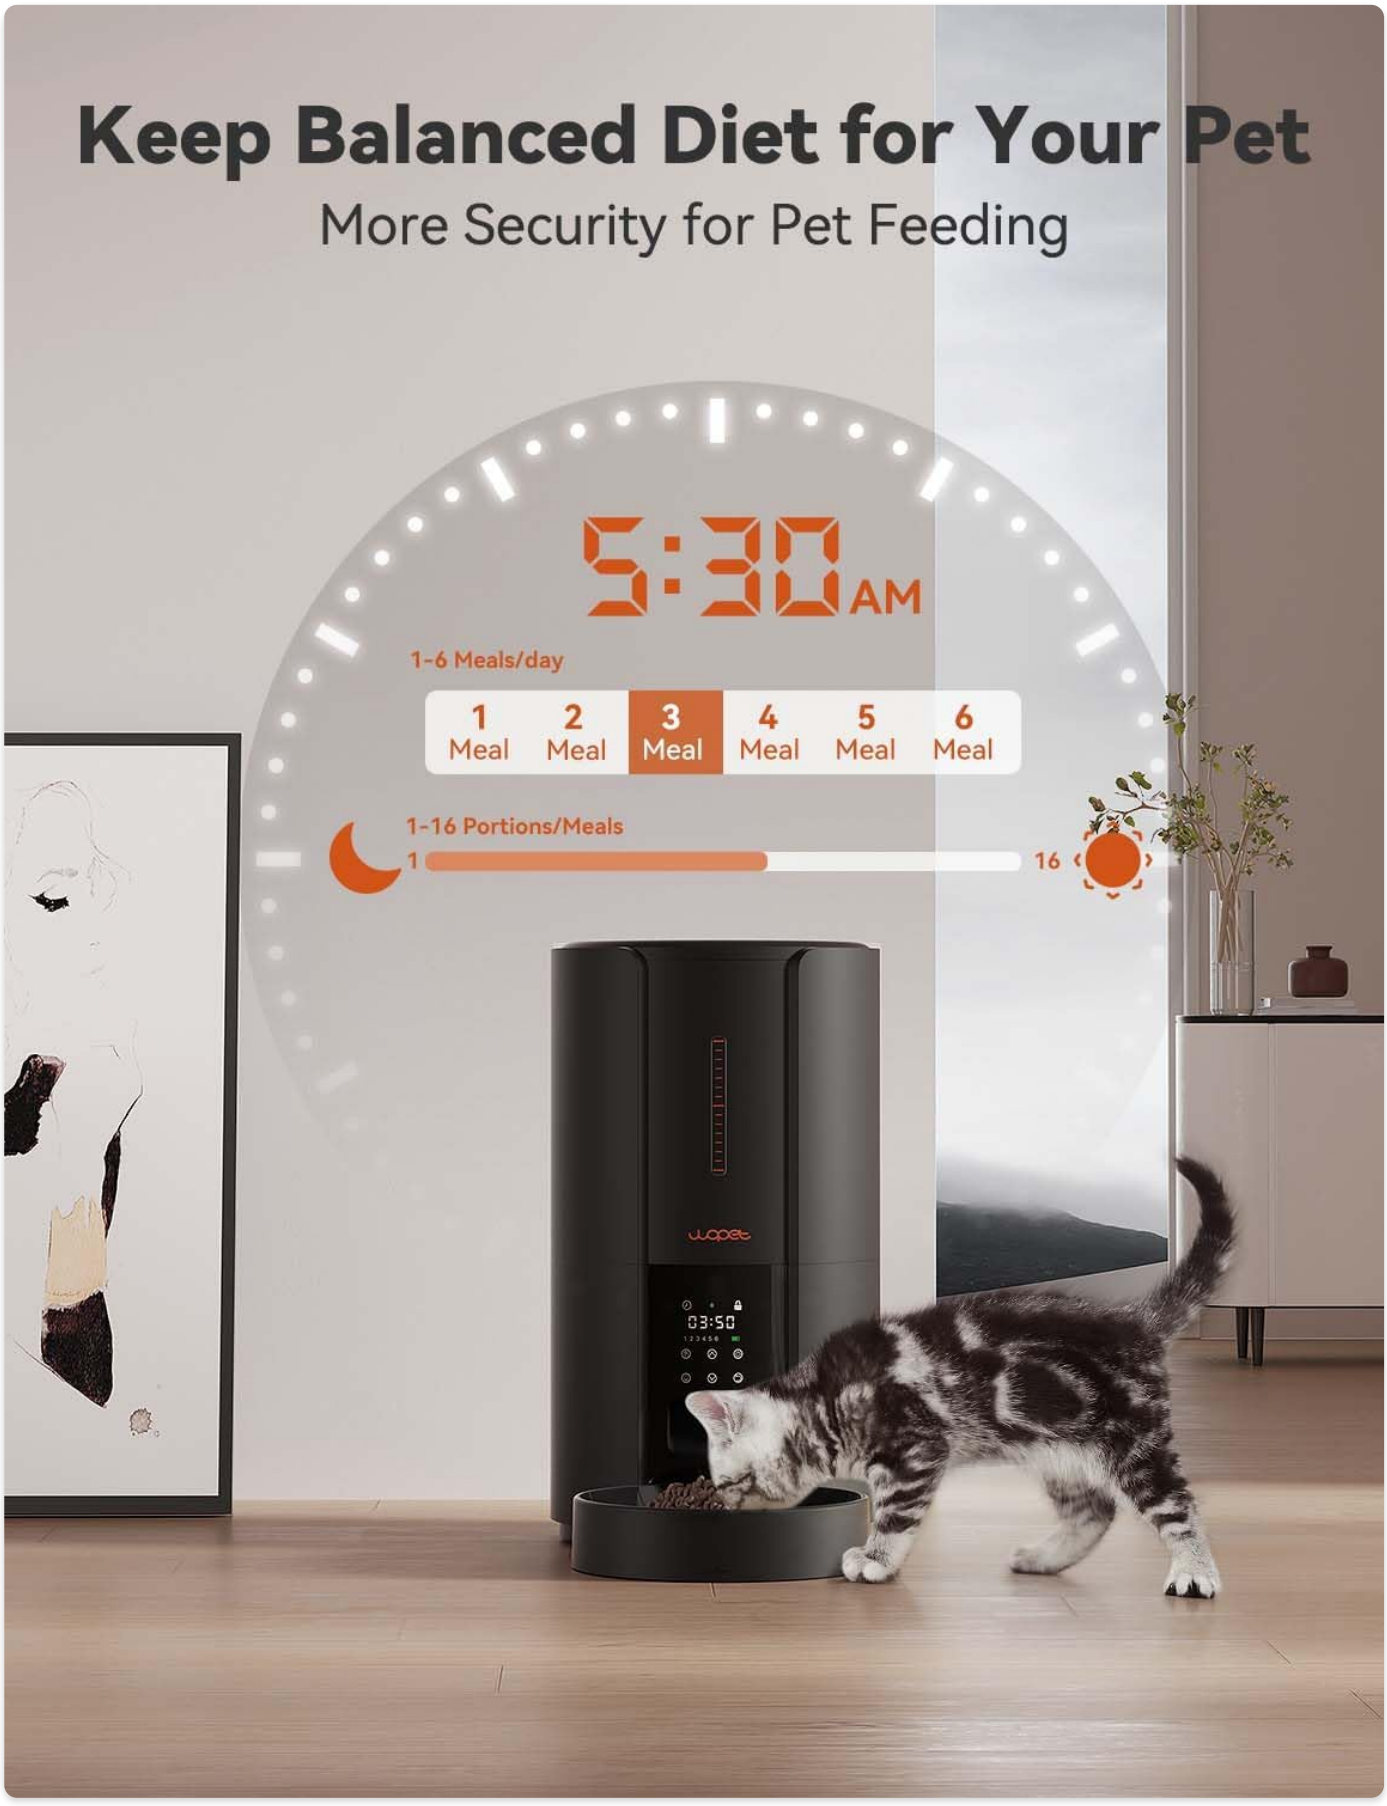


Figure 3: Keep a balanced diet for your pet by scheduling 1-6 meals per day and 1-16 portions per meal.

Personalized Meal Call (Voice Recording)

Record a 10-second voice message to call your pets at mealtime.

1. Make sure the screen is unlocked.

2. Hold the recording button ( ) for 3 seconds and start recording after a beep is heard. The feeder records up to 10 seconds.
3. A double beep will signal your recording is successfully saved.



Figure 4: Personalized mealtime call for pets. Your familiar voice helps them feel safe and cared for.

Manual Feeding

- Make sure the screen is unlocked.
- Press the manual button ( ) to feed 1 portion.

Locking the Screen

To prevent unintended touches or pets from accessing extra food:

- Press and hold the setting button (⚙) for 2 seconds to lock the screen.
- Note: The screen locks automatically after 2 minutes of inactivity.



Figure 5: Upgrade Pet-proof design with secured twist-lock lid and child lock feature.

Maintenance

Regular cleaning ensures optimal performance and hygiene for your pet.

Cleaning the Rotator

1. Remove the lid cover.
2. Turn the rotator anti-clockwise to the open position and remove the rotator.
3. Clean the rotator and food tray with water and mild soap. Do not clean the main unit or motor directly with water.
4. After cleaning, match the rotator to the indicator and press down. Turn the rotator clockwise to the install position, then replace the lid cover.



Figure 6: Patented design to prevent food blockage. The motor reverses in case of grain jam, and a 45° steep slope design ensures smooth dispensing.



Figure 7: Easy to Disassemble and Clean. Note: The motor cannot be cleaned directly with water.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Feeder not dispensing food.	Food tank empty; food jammed; power issue.	Refill food; clear jam; check power connection/batteries.
Incorrect portion size dispensed.	Incorrect portion setting; kibble size too large/small.	Adjust portion setting; ensure kibble is 2-15mm.
Voice recording not playing.	Recording not saved; volume too low.	Re-record message; check volume settings.
Screen is locked.	Automatic lock activated; manual lock engaged.	Press and hold setting button for 2 seconds to unlock.

Specifications

- **Model Name:** FT70 Plus
- **Capacity:** 4L / 21 cups
- **Dimensions:** 4 x 7 x 12 inches
- **Item Weight:** 3.62 Pounds
- **Material:** Polyethylene Terephthalate, Plastic
- **Power Supply:** Wired adapter, 3 x D batteries (not included)
- **Kibble Size:** 2-15mm in diameter
- **Voice Recording:** Up to 10 seconds
- **Meals Per Day:** 1-6
- **Portions Per Meal:** Up to 8
- **Color:** Black



Figure 8: Dimensions of the WOPET FT70 Plus Automatic Pet Feeder.

Warranty and Support

The WOPET FT70 Plus Automatic Pet Feeder comes with a 1-year warranty.

For detailed instructions, troubleshooting, or warranty claims, please refer to the official User Guide (PDF) or contact WOPET customer support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BFM67YSQ

More documents and user manuals: **https://manuals.plus/**