Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Proscenic T31

Proscenic T31 Air Fryer Oven User Manual

Model: T31 | Brand: Proscenic

1. Introduction

Thank you for choosing the Proscenic T31 Air Fryer Oven. This appliance is designed to provide a healthier and more efficient way to cook your favorite meals, utilizing rapid air circulation technology. Please read this manual thoroughly before operation to ensure safe and optimal performance. Keep this manual for future reference.

2. Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local power supply before connecting.
- Keep the appliance and its cord out of reach of children.
- Do not block any air vents. Ensure adequate space around the appliance for proper ventilation.
- Do not touch hot surfaces. Use handles or knobs. Always use oven mitts when handling hot accessories or food.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is for household use only.

3. Product Overview

3.1 Components

The Proscenic T31 Air Fryer Oven features a robust design with a clear viewing window and an intuitive control panel.



Image: The Proscenic T31 Air Fryer Oven, showcasing its internal cooking space with a rotisserie chicken and the digital control panel. A smartphone displaying the Proscenic app is positioned next to the appliance, highlighting its smart control capabilities.

3.2 Accessories

The Proscenic T31 comes with a variety of accessories to enhance your cooking experience:

- **Skewer:** For preparing kebabs and other skewered items.
- **Rotisserie Basket:** Ideal for tumbling smaller items like fries or nuts for even cooking.
- **Rotisserie Tongs:** For safely removing the rotisserie spit and basket from the hot oven.
- **Drip Pan:** Collects excess oil and food drippings for easier cleaning.
- **Rotisserie Fork:** Used to secure whole chickens or roasts for rotisserie cooking.
- **Cooking Tray:** For baking, roasting, or air frying various foods.



Image: A visual representation of the six included accessories: skewer, rotisserie basket, rotisserie tongs, drip pan, rotisserie fork, and cooking tray, each designed to facilitate diverse cooking methods.

4. Setup

1. **Unpacking:** Carefully remove all packaging materials and accessories from the air fryer oven.
2. **Initial Cleaning:** Wipe the exterior of the appliance with a damp cloth. Wash all removable accessories (drip pan, cooking tray, rotisserie parts) with warm, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the air fryer oven on a stable, heat-resistant, and level surface. Ensure there is at least 10 cm (4 inches) of clear space on all sides and above the appliance for proper air circulation. Do not place it near walls or other appliances.
4. **First Use:** Before first use, it is recommended to run the appliance empty for about 10-15 minutes at 200°C (390°F) to burn off any manufacturing residues. A slight odor may be present, which is normal. Ensure the area is well-ventilated during this process.

5. Operation

5.1 Basic Controls

The Proscenic T31 features an LED touchscreen and a rotary knob for easy control.

- **Power Button:** Press to turn the appliance on or off.
- **Rotary Knob:** Turn to adjust temperature and time. Press to confirm selection or switch between temperature and time settings.
- **Preset Programs:** Select from 12 pre-set cooking functions for common dishes.
- **Temperature Control:** Adjustable from 80°C to 200°C (170°F to 400°F).
- **Timer:** Adjustable up to 60 minutes.

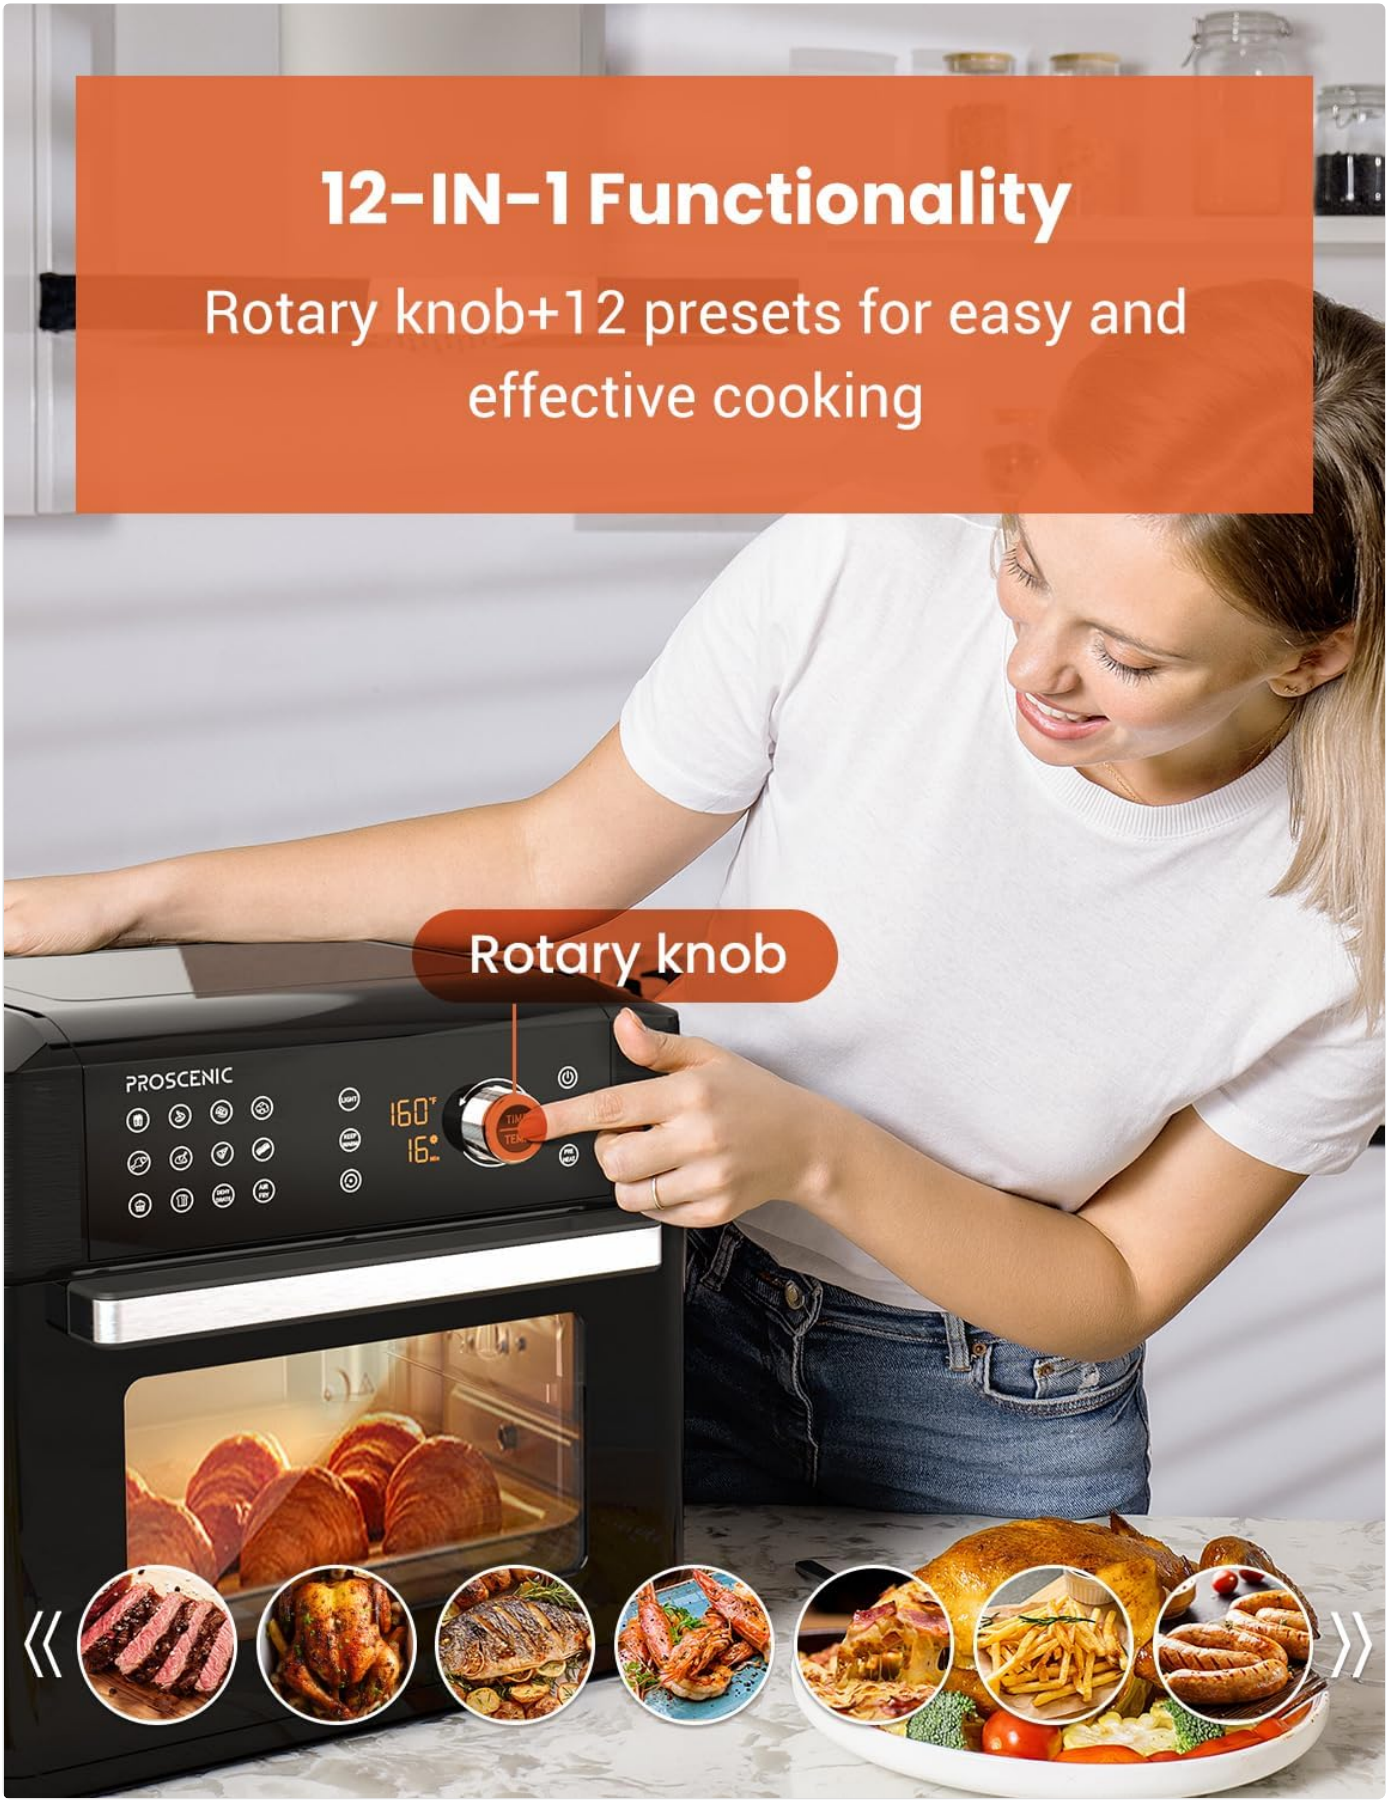


Image: A user interacting with the rotary knob on the Proscenic T31, demonstrating the intuitive control for selecting from 12 preset cooking programs.

5.2 Preset Programs

The T31 offers 12 preset programs for various foods, simplifying your cooking process. Simply select the desired program, and the oven will automatically set the optimal temperature and time. You can manually adjust these settings if needed.

5.3 App Control & Online Recipes

Control your Proscenic T31 Air Fryer Oven remotely using the Proscenic app on your smartphone. The app allows you to:

- Start, pause, and stop cooking cycles.
- Adjust temperature and time.
- Access over 100 online recipes with step-by-step instructions.
- Receive notifications, such as when to 'flip the food'.
- Integrate with Amazon Alexa for voice control.

Image: The Proscenic T31 Air Fryer Oven with a smartphone showing the Proscenic app interface and a smart speaker, demonstrating the convenience of app and Alexa voice control for cooking.

5.4 Rotisserie Function

The rotisserie function is ideal for cooking whole chickens or roasts, ensuring even browning and juicy results. Use the rotisserie fork to secure your food and the rotisserie tongs for safe removal.

5.5 TurboAir Technology

The Proscenic T31 utilizes TurboAir technology, which circulates hot air rapidly and evenly throughout the cooking chamber. This technology is designed to reduce cooking time and achieve crispy textures with significantly less oil compared to traditional frying methods.

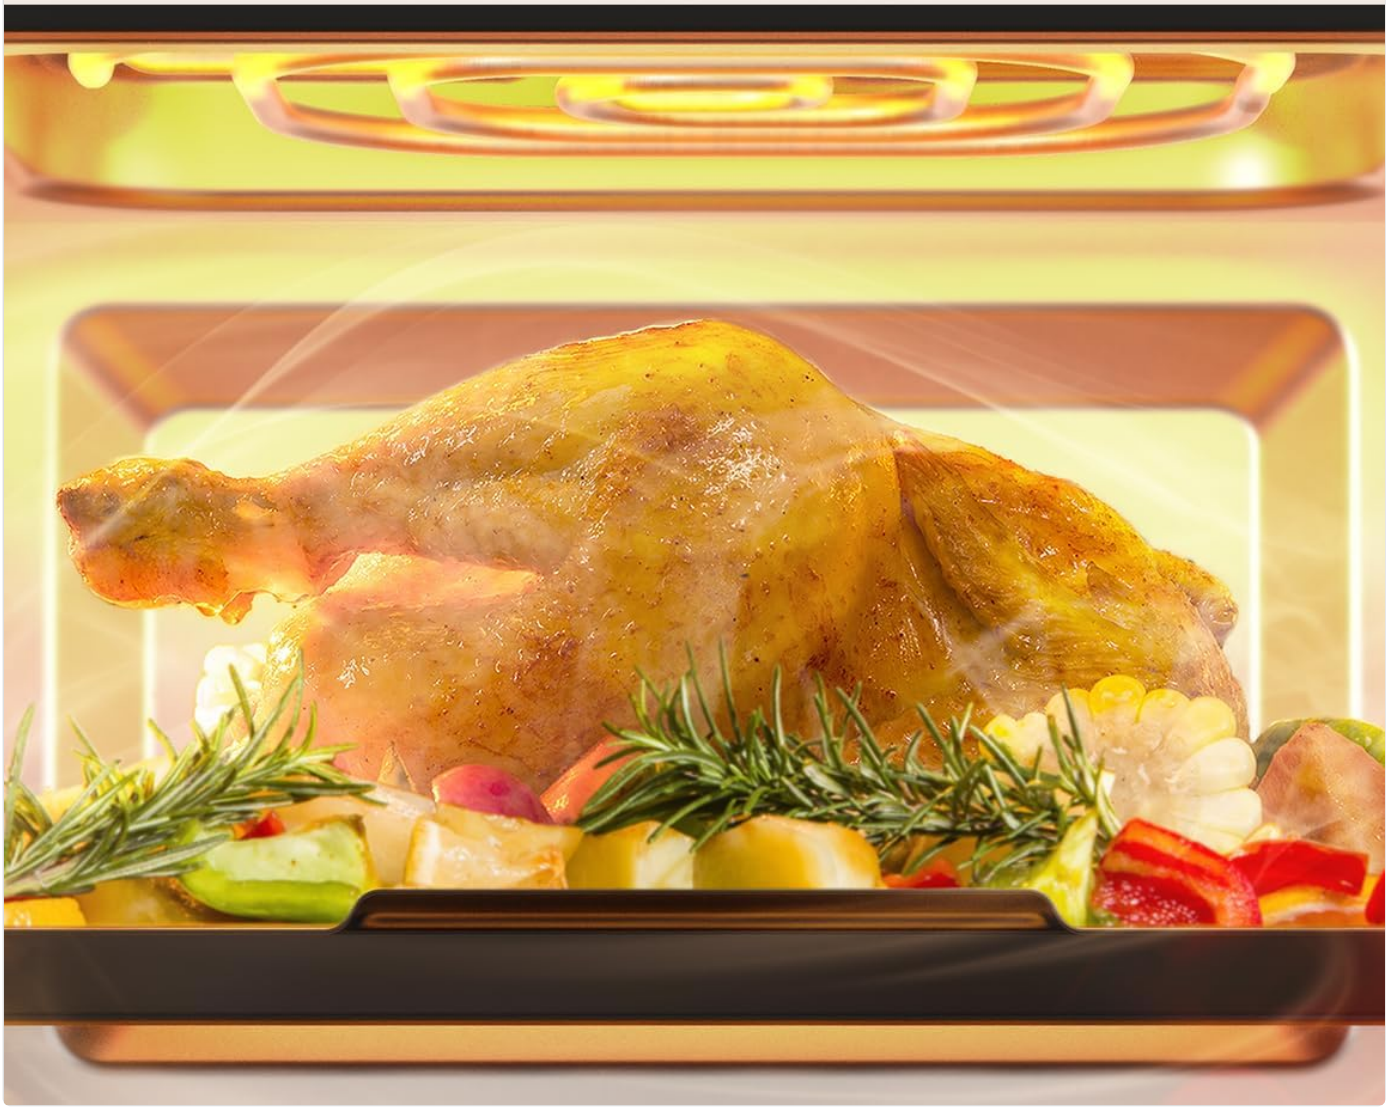


Image: A close-up view of a roasted chicken inside the Proscenic T31, illustrating the powerful 360-degree hot air circulation enabled by TurboAir Technology for efficient and even cooking.

6. Maintenance and Cleaning

Regular cleaning ensures the longevity and optimal performance of your Proscenic T31 Air Fryer Oven.

- **Before Cleaning:** Always unplug the appliance and allow it to cool completely before cleaning.
- **Interior and Accessories:** The oven basket and other removable accessories are made of food-safe materials with a non-stick Teflon coating. They can be cleaned directly in the dishwasher or by hand with warm, soapy water and a non-abrasive sponge.
- **Exterior:** Wipe the exterior with a damp cloth. Do not use harsh abrasive cleaners or scouring pads.
- **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.



Image: The Proscenic T31 Air Fryer Oven with its interior components removed, illustrating the non-stick coating that facilitates easy cleaning and maintenance.

7. Troubleshooting

Problem	Possible Cause	Solution
App connection issues	Incorrect Wi-Fi password; Router too far; App not updated.	Ensure correct Wi-Fi credentials. Move router closer or use a Wi-Fi extender. Update the Proscenic app to the latest version.
Food not cooked evenly	Overcrowding the basket/tray; Incorrect temperature/time; Food not flipped/shaken.	Cook in smaller batches. Adjust temperature and time as per recipe. Shake or flip food halfway through cooking.
White smoke from appliance	Grease residue from previous use; High fat content food.	Clean the drip pan and interior thoroughly after each use. For high-fat foods, add a little water to the drip pan to prevent smoke.
Appliance does not turn on	Not plugged in; Power outlet issue; Appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Try a different outlet. If problem persists, contact customer support.

8. Specifications

Feature	Detail
Model Number	89-030101-10-DI

Feature	Detail
Capacity	15 Litres
Power / Wattage	1700 Watts
Product Dimensions (L x W x H)	40.8 x 38.8 x 34.1 cm
Item Weight	9.1 kg
Material	Plastic, Metal
Special Features	Temperature Control, Timer, Automatic Shut-Off, Programmable, App Control, Alexa Control

9. Warranty and Support

Proscenic is committed to providing quality products and customer service.

- **Warranty:** The Proscenic T31 Air Fryer Oven comes with up to a 12-month warranty from the date of purchase. Please retain your proof of purchase for warranty claims.
- **Money-Back Guarantee:** A 30-day money-back guarantee is offered for eligible purchases.
- **Local Maintenance:** Proscenic operates a local maintenance warehouse in the UK for service and repairs.
- **Customer Service:** For any inquiries, technical support, or warranty claims, please contact the Proscenic customer service team. They offer 24/7 rapid responding service.

For further assistance, please visit the official Proscenic website or refer to the contact information provided with your product packaging.

© 2025 Proscenic. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BFR33KP9

More documents and user manuals: **https://manuals.plus/**