Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Potensic Atom SE Parallel Charging Hub

Potensic Atom SE Parallel Charging Hub User Manual

Model: Atom SE Parallel Charging Hub

Introduction

This user manual provides essential information for the safe and efficient operation of your Potensic Atom SE Parallel Charging Hub. Please read this manual thoroughly before use and retain it for future reference. This charging hub is specifically designed for Potensic Atom SE drone batteries and is not compatible with other battery types.

Package Contents

- 1 x Potensic Atom SE Parallel Charging Hub
- 2 x Potensic Atom SE Smart Batteries
- 1 x Super Quick Charge Adapter (Max 60W Input)



Image: Contents of the Potensic Atom SE Parallel Charging Hub package, including the hub, two smart batteries, and the super quick charge adapter.

Product Overview



Image: Front view of the Potensic Atom SE Charging Hub, showing the power button, LED indicators for each battery slot, and the 'IN' and 'OUT' ports.



Image: Top-down view of the Potensic Atom SE Charging Hub, clearly showing the three battery charging slots with their respective contact pins.

The Potensic Atom SE Parallel Charging Hub is designed for efficient and simultaneous charging of up to three Atom SE smart batteries. It also features a USB output port for charging the remote control or other compatible devices.

Setup

1. **Connect the Power Adapter:** Insert the Super Quick Charge Adapter into a power outlet. Connect the adapter's output cable to the 'IN' port on the charging hub.
2. **Insert Batteries:** Carefully insert up to three Potensic Atom SE Smart Batteries into the designated slots on the charging hub. Ensure the batteries are correctly oriented and fully seated.
3. **Initial Power On:** The hub will automatically begin charging once batteries are inserted and power is connected. The LED indicators above each slot will show the charging status.

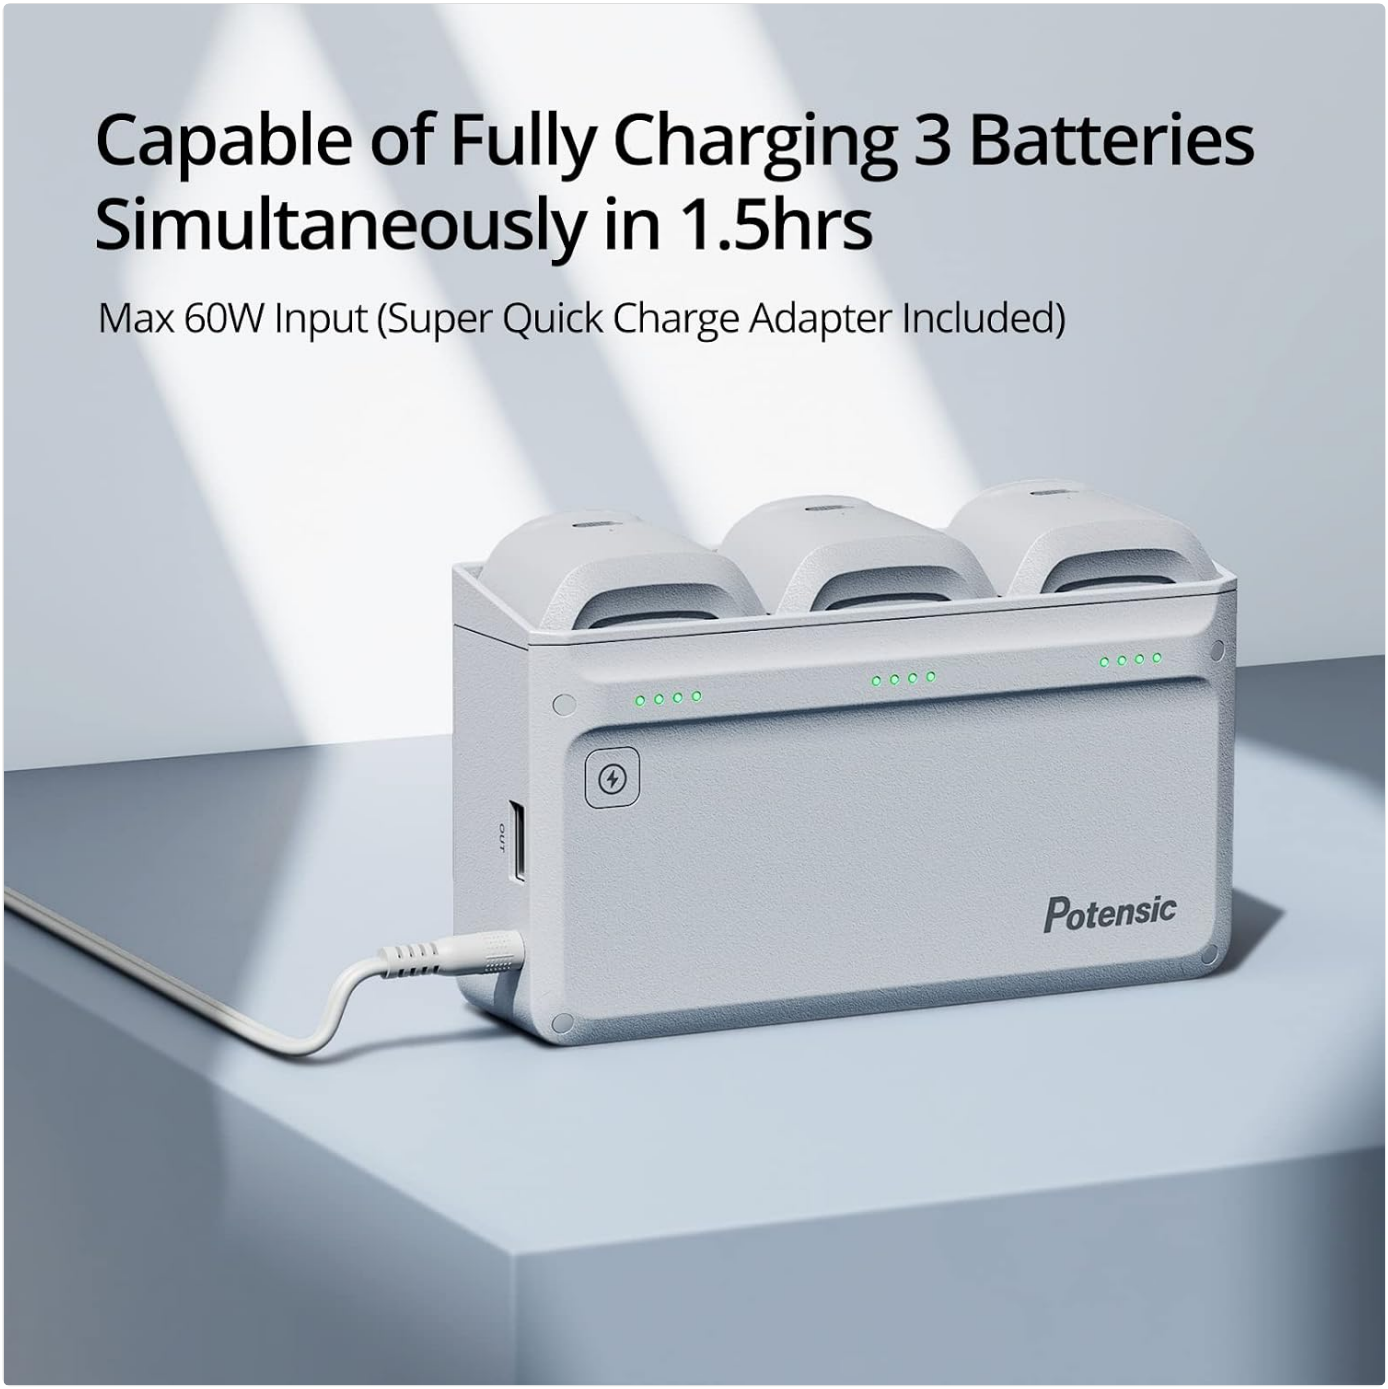


Image: The Potensic Atom SE Charging Hub with three smart batteries inserted, showing green LED indicators, signifying active charging.

Operating Instructions

Charging Batteries

The charging hub is designed to charge all inserted batteries simultaneously. It takes approximately 90 minutes to fully charge three batteries from empty. The charging time for one battery is the same as for three batteries due to the parallel charging capability.

- **Charging Indicator:** Each battery slot has a set of LED indicators. These LEDs will illuminate to show the charging progress. A solid green light typically indicates a full charge.
- **Optimal Charging:** For best results, use the included Super Quick Charge Adapter.

Charging Remote Control

You can also charge your Potensic drone's remote control using the 'OUT' USB port on the charging hub. Connect the remote control's charging cable to this port.



Image: The Potensic Atom SE Charging Hub with the Super Quick Charge Adapter plugged into a wall outlet, and a remote control connected to the hub's USB 'OUT' port for charging.

Maintenance

- Keep the charging hub and batteries clean and dry. Use a soft, dry cloth to wipe surfaces.
- Avoid exposing the device to extreme temperatures, direct sunlight, or moisture.
- Store the charging hub and batteries in a cool, dry place when not in use.
- Regularly inspect the charging ports and battery contacts for any signs of damage or debris.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Batteries not charging	Power adapter not connected properly. Battery not seated correctly. Damaged battery or charging hub.	Ensure the power adapter is securely plugged into both the outlet and the hub. Remove and re-insert the battery, ensuring it clicks into place. Contact customer support if the issue persists.
Remote control not charging via USB OUT port	USB cable faulty. Remote control issue. Hub not powered on.	Try a different USB cable. Ensure the hub is powered and charging at least one battery. Test charging the remote control with another power source.

Specifications

Feature	Detail
Brand	Potensic
Model	Atom SE Parallel Charging Hub
Package Dimensions	8.74 x 6.81 x 2.8 inches
Item Weight	9.6 ounces
Batteries	2 Lithium Ion batteries (included, for Atom SE only)
Output Voltage	11.1 Volts
Input Power	Max 60W (with Super Quick Charge Adapter)
Charging Time (3 Batteries)	Approx. 90 minutes
Safety Certification	UL

Warranty and Support

Potensic products come with a standard warranty. For detailed warranty information, product support, or to contact customer service, please visit the official Potensic website or their store on Amazon.
Potensic Official Store: Visit Potensic Store on Amazon
For further assistance, refer to the official User Manual (PDF) available for download:
User Manual (PDF): Download PDF Manual

© 2025 Potensic. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BFWQ8D77

More documents and user manuals: **https://manuals.plus/**