Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

realme RMX3690

realme C30s Smartphone User Manual

Model: RMX3690

1. Product Overview

The realme C30s is a powerful and sleek smartphone designed for everyday use. It combines essential features with a user-friendly interface, making it ideal for communication, entertainment, and productivity. This manual provides detailed instructions to help you get the most out of your device.



Image: Front and back view of the realme C30s smartphone in Stripe Blue, showcasing its design.



Image: An infographic illustrating the key features of the realme C30s, including its display size, fingerprint unlock speed, battery capacity, slimness, card slots, and camera resolution.

2. Getting Started

2.1 What's in the Box

- realme C30s Smartphone
- USB Cable
- Quick Start Guide
- SIM Ejector Tool

2.2 Inserting SIM Card(s) and MicroSD Card

The realme C30s supports Dual-SIM functionality and a dedicated microSD card slot for expandable storage. Use the provided SIM ejector tool to open the SIM tray.

1. Locate the SIM tray on the side of the device.

2. Insert the SIM ejector tool into the small hole next to the tray and push gently until the tray pops out.
3. Place your Nano-SIM cards and microSD card into the designated slots on the tray. Ensure the gold contacts are facing down.
4. Carefully push the tray back into the phone until it is flush with the device body.

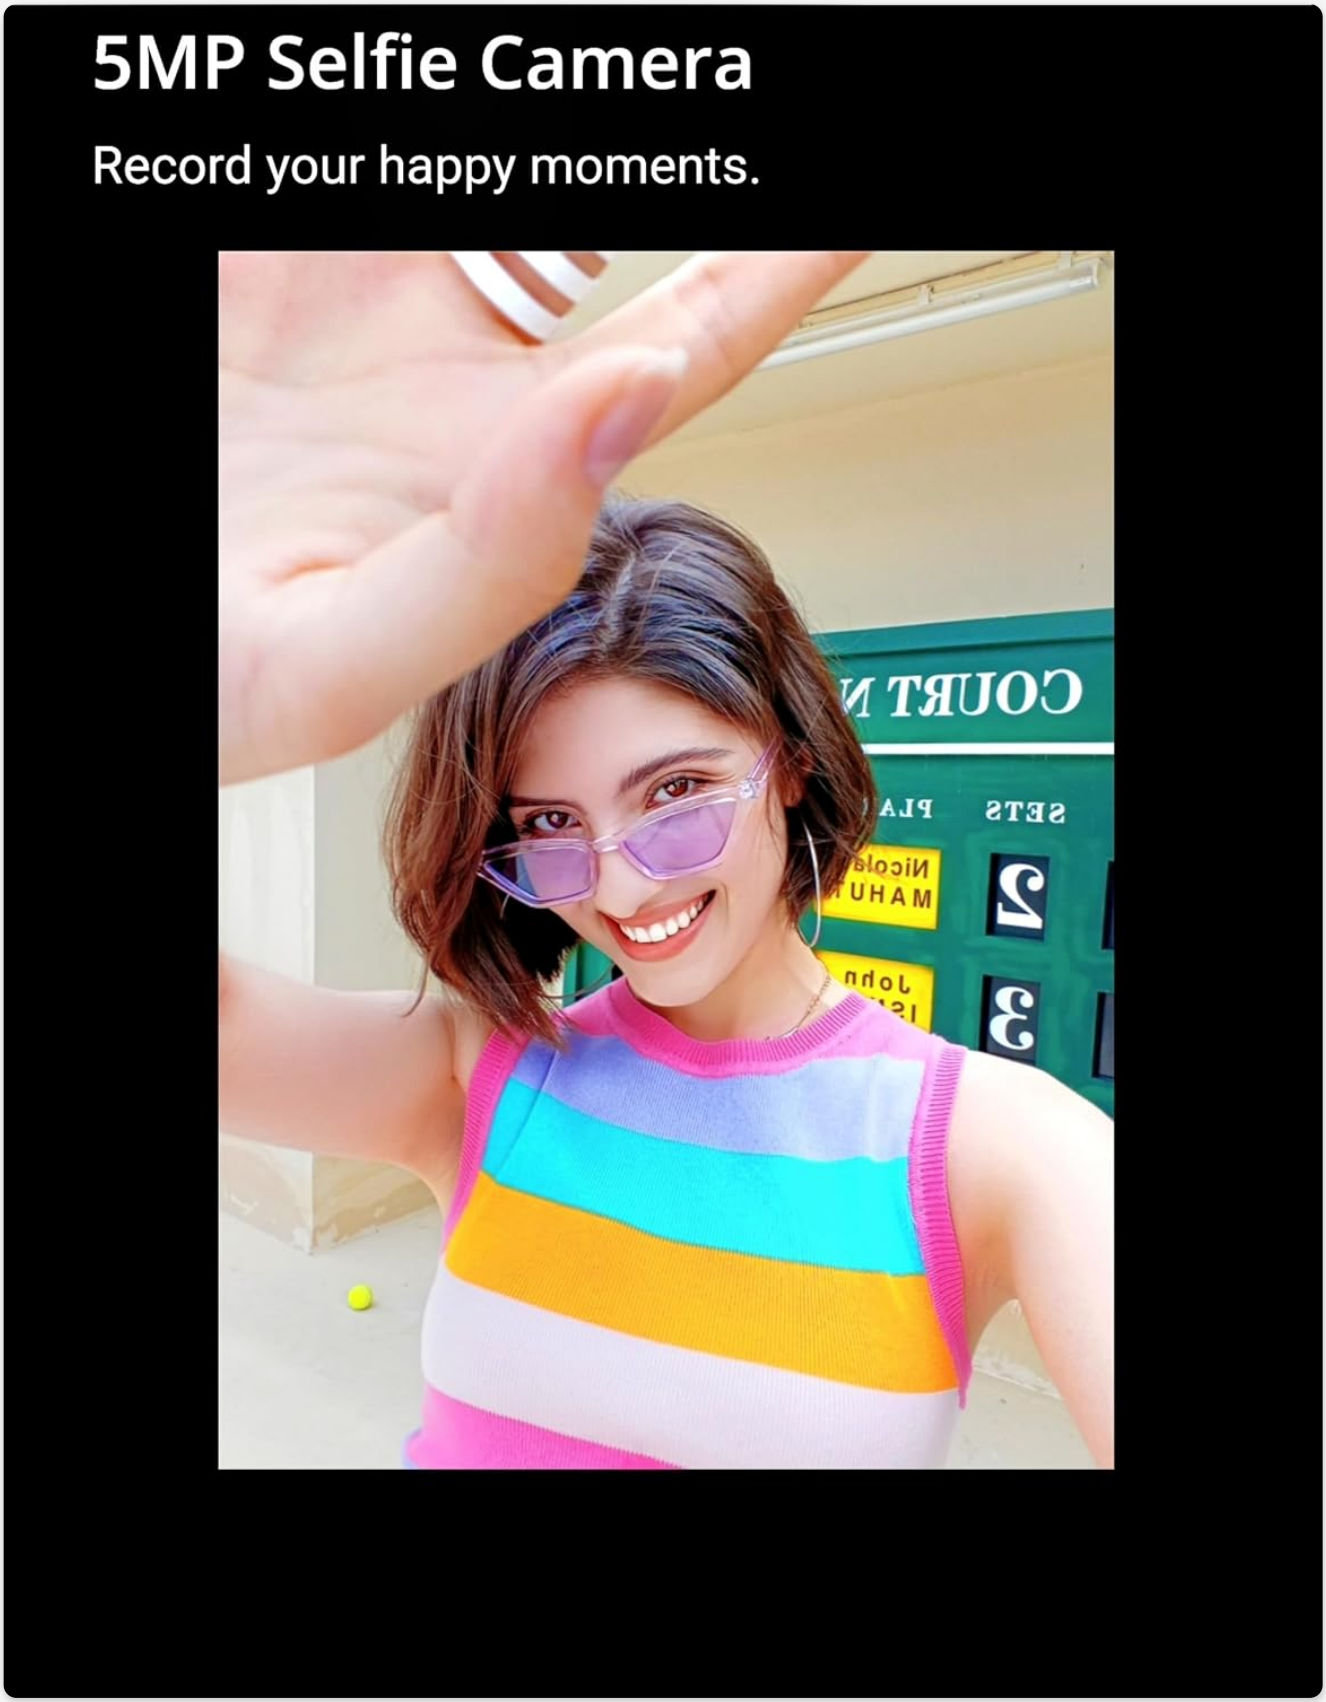


Image: A close-up view of the realme C30s's SIM tray, illustrating its capacity for two SIM cards and a separate microSD card.

2.3 Powering On/Off

- **To Power On:** Press and hold the Power button (located on the right side) until the realme logo appears.
- **To Power Off:** Press and hold the Power button until the power menu appears, then select 'Power off'.
- **To Restart:** Press and hold the Power button until the power menu appears, then select 'Restart'.

2.4 Initial Setup

Upon first power-on, follow the on-screen prompts to complete the initial setup. This includes selecting your language, connecting to Wi-Fi, setting up your Google account, and configuring security features.

2.5 Charging the Battery

Connect the USB cable to the phone's charging port and the other end to a power adapter or a computer's USB port. The battery indicator on the screen will show the charging status. For optimal performance, use the original realme charger and cable.



Image: An X-ray style view of the realme C30s, highlighting the large 5000mAh battery inside the device.

3. Operating Your realme C30s

3.1 Basic Navigation

- **Touchscreen Gestures:** Tap, swipe, pinch-to-zoom, and long-press to interact with the screen.
- **Home Screen:** Access your apps, widgets, and notifications.
- **Notification Panel:** Swipe down from the top of the screen to view notifications and quick settings.

3.2 Making Calls and Sending Messages

- **Calls:** Open the 'Phone' app, dial the number, and tap the call icon.
- **Messages:** Open the 'Messages' app, tap the new message icon, enter the recipient and your message, then send.

3.3 Using the Camera

The realme C30s features an 8MP AI rear camera and a 5MP selfie camera.

1. Open the 'Camera' app.
2. Select your desired mode (Photo, Video, Portrait, etc.).
3. Tap the shutter button to capture a photo or start/stop recording a video.
4. Tap the camera switch icon to toggle between the front and rear cameras.



Image: A sample photograph demonstrating the quality of the 8MP AI Camera on the realme C30s, capturing an outdoor scene.

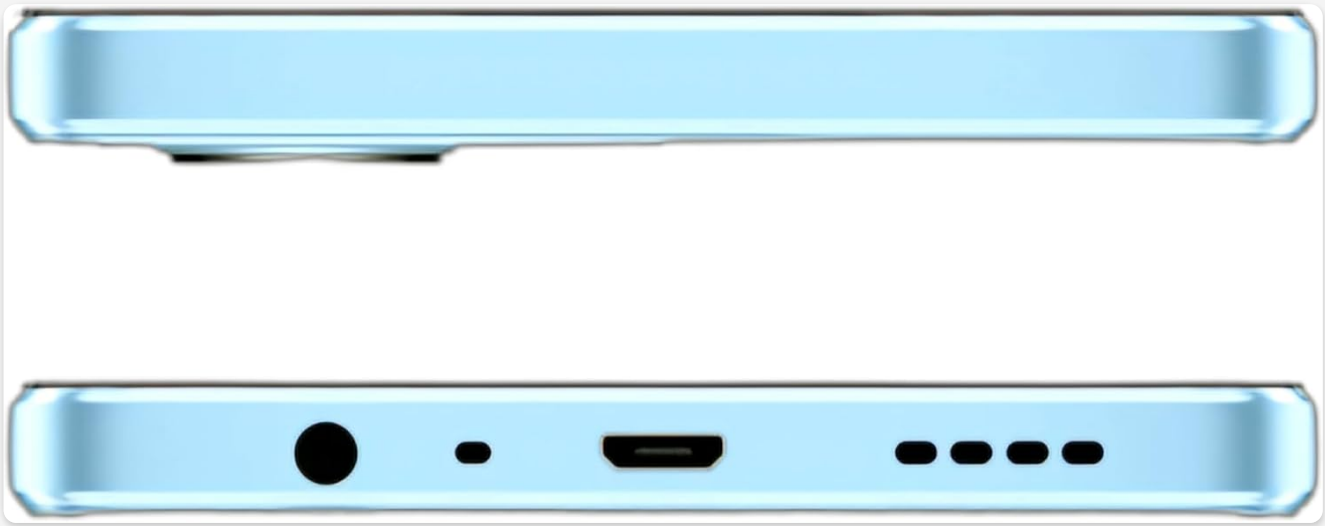


Image: A sample selfie taken with the 5MP front camera of the realme C30s, showcasing its capability for clear self-portraits.

3.4 Connectivity (Wi-Fi, Bluetooth)

- **Wi-Fi:** Go to Settings > Network & internet > Wi-Fi. Turn Wi-Fi on and select a network to connect.
- **Bluetooth:** Go to Settings > Connected devices > Bluetooth. Turn Bluetooth on and pair with nearby devices.

3.5 Fingerprint Unlock

The realme C30s features a fast side-mounted fingerprint sensor for secure and quick unlocking.

1. Go to Settings > Security > Fingerprint.
2. Follow the on-screen instructions to register your fingerprint.
3. Once registered, you can unlock your phone by placing your finger on the sensor.

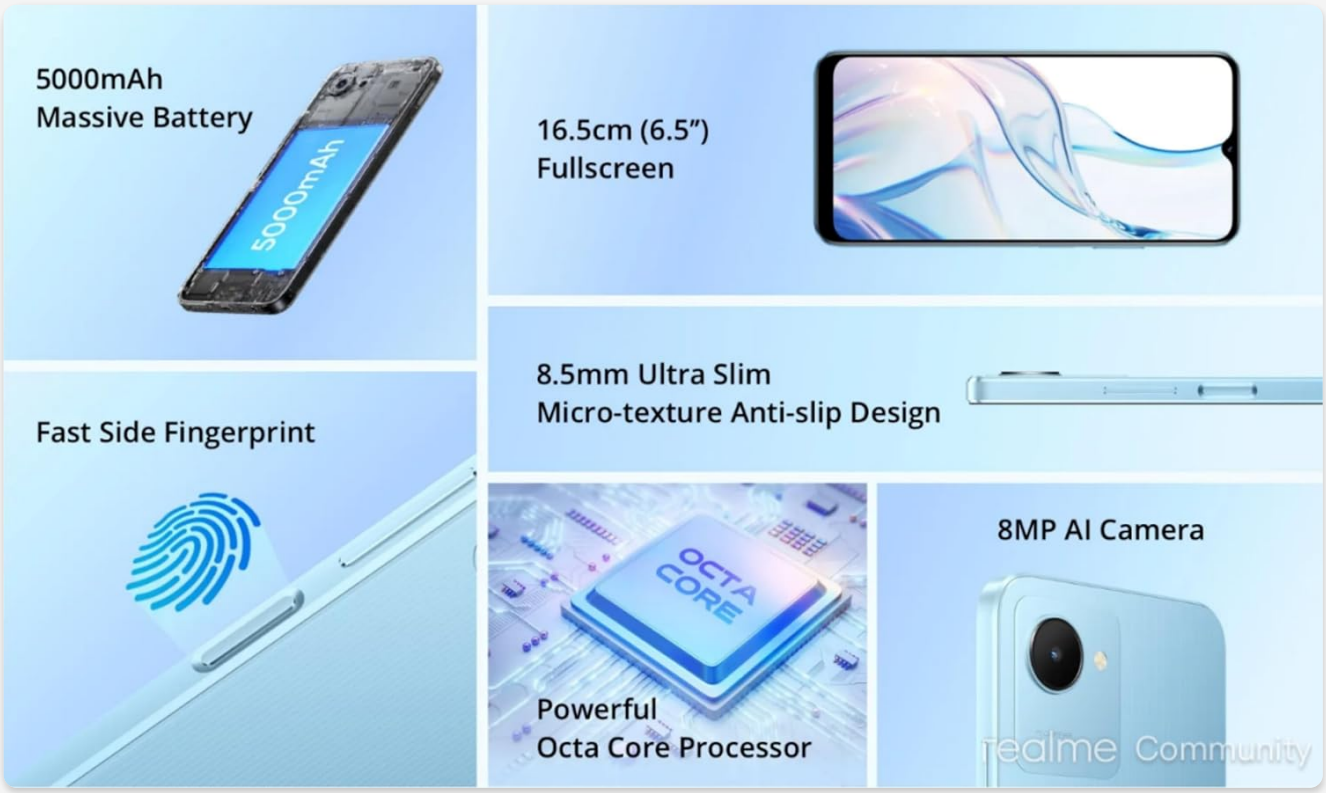


Image: A detailed view of the side-mounted fingerprint sensor on the realme C30s, indicating its location and function.

4. Care and Maintenance

4.1 Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of your phone. Avoid using harsh chemicals or abrasive materials that could damage the finish.

4.2 Battery Care

- Avoid exposing the phone to extreme temperatures.
- Do not fully discharge the battery frequently.
- Use only realme approved chargers and cables.

4.3 Software Updates

Regularly check for software updates to ensure your device has the latest features and security patches. Go to Settings > System > System update.

5. Troubleshooting

5.1 Common Issues and Solutions

Issue	Possible Solution
Phone not turning on	Ensure battery is charged. Press and hold the Power button for at least 10 seconds to force restart.
Slow performance / App freezing	Close background apps. Clear cache. Restart the phone.

Issue	Possible Solution
Cannot connect to Wi-Fi/Bluetooth	Toggle Wi-Fi/Bluetooth off and on. Restart the phone. Forget network and reconnect.
Battery drains quickly	Reduce screen brightness. Disable unnecessary features (GPS, Bluetooth). Limit background app activity.

5.2 Factory Reset

If issues persist, a factory reset may be necessary. This will erase all data on your phone, so back up important information first. Go to Settings > System > Reset options > Erase all data (factory reset).

6. Technical Specifications

Below are the detailed specifications for the realme C30s (Model: RMX3690):

- **Model Name:** Realme C30s
- **Operating System:** Android 12.0 (Realme UI Go Edition)
- **Processor:** Octa-core 1.6 GHz Cortex-A55 (Unisoc SC9863A)
- **Display:** 6.5 inches IPS LCD, 720 x 1600 pixels resolution
- **RAM:** 2 GB
- **Internal Storage:** 32 GB (expandable via microSDXC)
- **Rear Camera:** 8 MP (wide), 1/4.0", 1.12µm
- **Front Camera:** 5 MP (wide), 1/5.0", 1.12µm
- **Battery:** Li-Po 5000 mAh, non-removable
- **Dimensions:** 6.31 x 2.89 x 0.31 inches (160.5 x 73.6 x 8.5 mm)
- **Weight:** 13.1 ounces (372 Grams)
- **SIM Support:** Dual-SIM (Nano-SIM, dual stand-by)
- **Network Compatibility:** GSM, HSDPA, LTE (Specific bands listed in product description)
- **Connectivity:** Wi-Fi, Bluetooth, USB
- **Security:** Side-mounted Fingerprint Sensor



Image: An infographic providing a concise overview of the realme C30s's core specifications, including its processor, camera details, design elements, battery capacity, display type, and security features.

7. Warranty and Support

7.1 Warranty Information

Your realme C30s smartphone comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details. Keep your proof of purchase for warranty claims.

7.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please visit the official realme support website or contact their customer service hotline. Contact information can typically be found on the realme official website or in the documentation provided with your device.

© 2024 realme. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BG329Z6S

More documents and user manuals: **https://manuals.plus/**