Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TELESIN TE-RCSS

TELESIN 3-in-1 Selfie Stick with Wireless Remote Control User Manual

Model: TE-RCSS

1. Introduction

Thank you for choosing the TELESIN 3-in-1 Selfie Stick with Wireless Remote Control. This versatile accessory functions as a selfie stick, a tripod, and includes a detachable Bluetooth remote control. It is designed for use with GoPro Hero cameras (Hero 11/10/9/8, MAX) and most smartphones (iPhone, Android Samsung), providing flexibility for various photography and videography needs.

Please read this manual carefully before using the product to ensure proper operation and to maximize its features.

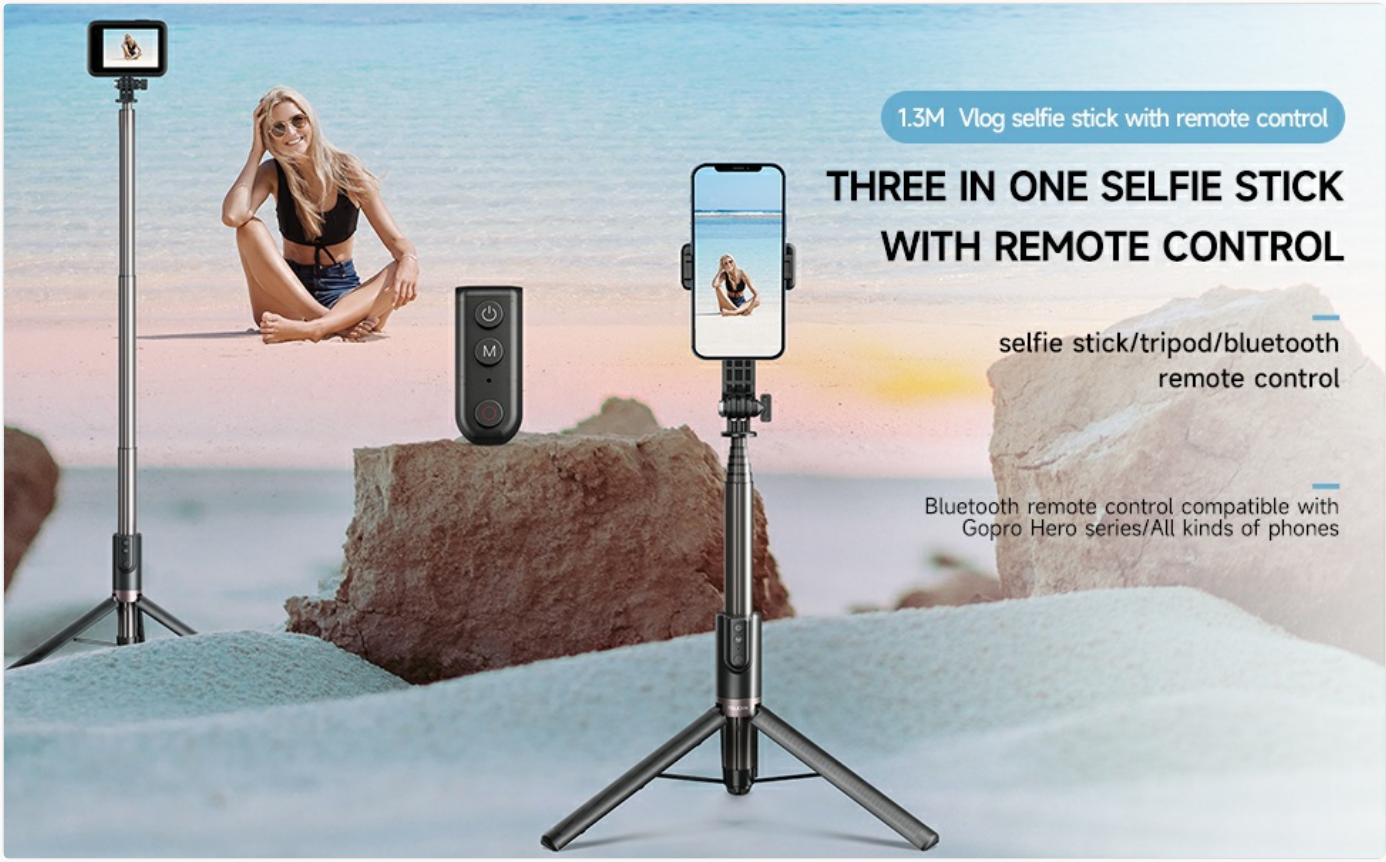


Image 1.1: Overview of the TELESIN 3-in-1 Selfie Stick in both selfie stick and tripod configurations, demonstrating its versatility with

different devices.

2. Package Contents

Please check the package for the following items:

- 1. TELESIN 1.3m Selfie Stick Tripod with Remote Control
- 2. Rotatable Phone Stand
- 3. Type-C Data Cable
- 4. Bluetooth Remote Control
- 5. Short Rod Locking Screw
- 6. Long Rod Locking Screw
- 7. User Manual



Image 2.1: Visual representation of all items included in the TELESIN 3-in-1 Selfie Stick package.

3. Setup Instructions

3.1 Attaching Your Device

1. **For Smartphones:** Attach the rotatable phone stand to the top of the selfie stick using the appropriate locking screw. Securely place your smartphone into the phone stand.
2. **For Action Cameras (e.g., GoPro):** Directly attach your action camera to the top mount of the selfie stick using the provided locking screw.

3.2 Pairing the Bluetooth Remote Control

1. Ensure the remote control is charged. Connect the Type-C data cable to charge if necessary.
2. Press and hold the power button on the remote control until the indicator light flashes, indicating it's in pairing mode.

3. On your smartphone or action camera, go to Bluetooth settings and search for available devices.
4. Select "TELESIN Remote" or a similar name from the list to pair. The indicator light on the remote will stop flashing once successfully paired.
5. The remote control has a range of approximately 40 meters (130 feet).



Image 3.1: The detachable Bluetooth remote control, highlighting its functions and wireless range for capturing photos, videos, and time-lapse shots.

3.3 Extending the Selfie Stick

Gently pull the top section of the stick upwards to extend it to your desired length. The maximum extended length is approximately 1300mm (1.3 meters or 51 inches).



Image 3.2: The selfie stick extended to different lengths, showcasing its maximum reach of 1300mm for wider views.

3.4 Transforming to a Tripod

To convert the selfie stick into a tripod:

1. Locate the button at the bottom of the handle.
2. Press the button to release and unfold the three legs of the tripod base.
3. Ensure the legs are fully extended and stable on a flat surface before placing your device.



Image 3.3: Illustration of how to transform the selfie stick into a stable tripod by pressing the bottom button to deploy the legs.

4. Operating Instructions

4.1 Using as a Selfie Stick

Extend the stick to your desired length. Hold the handle firmly and use the Bluetooth remote control to capture photos or start/stop video recording.

4.2 Using as a Tripod

With the legs unfolded, place the tripod on a stable, flat surface. Adjust the stick's height as needed. Use the remote control for hands-free operation.

4.3 Switching Between Horizontal and Vertical Shooting

The rotatable phone stand allows you to easily switch your smartphone's orientation between horizontal (landscape) and vertical (portrait) modes. Simply adjust the angle of the phone stand as required for your shot.



Image 4.1: Demonstrating the flexibility to switch between horizontal and vertical shooting modes for smartphones.

4.4 Remote Control Functions

- **Power Button:** Press and hold to turn on/off. Short press to activate/deactivate sleep mode.
- **Shutter Button:** Press once to take a photo or start/stop video recording (functionality may vary based on device and app).
- **Mode Button (M):** Press to switch between different modes if supported by your connected device (e.g., photo, video, time-lapse).

5. Maintenance and Care

- **Cleaning:** Wipe the selfie stick and remote control with a soft, dry cloth. Do not use harsh chemicals or abrasive

cleaners.

- **Storage:** When not in use, collapse the selfie stick and fold the tripod legs. Store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** The product is water-repellent, but not fully waterproof. Avoid submerging it in water.
- **Charging:** Charge the remote control using the provided Type-C cable. Do not use damaged cables or chargers.

6. Troubleshooting

Q: The remote control does not pair with my device.
A: Ensure the remote control is charged. Make sure Bluetooth is enabled on your device and the remote is in pairing mode (flashing indicator light). Try restarting both the remote and your device. If issues persist, try pairing with another device to rule out a remote control malfunction.

Q: The selfie stick does not extend or retract smoothly.
A: Check for any obstructions or debris in the telescopic sections. Clean the sections with a dry cloth. Do not force the stick, as this may cause damage.

Q: The tripod legs do not open or close.
A: Ensure the release button at the bottom of the handle is fully pressed. Check for any foreign objects preventing the legs from deploying or retracting.

Q: My camera/phone is not stable on the mount.
A: Ensure the locking screw is tightened securely. For smartphones, ensure the phone stand grips the device firmly. Avoid excessive movement or heavy devices that exceed the stick's capacity.

7. Product Specifications

Feature	Specification
Model Number	TE-RCSS
Brand	TELESIN
Product Dimensions (D x W x H)	24.6D x 24.6W x 130H cm
Folded Size	9.7 inches
Max. Extended Length	130 cm (51 inches)
Weight	400 g
Compatible Devices	GoPro Hero 11/10/9/8, GoPro MAX, most smartphones (iPhone, Android Samsung)
Remote Control Range	Approx. 40 meters
Water Resistance Level	Water-repellent
Material	Aluminum alloy pole, Metal triangular support
First Available Date	September 28, 2022

8. Warranty Information

This TELESIN product comes with a**1-year warranty** from the date of purchase. The warranty covers manufacturing

defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper maintenance.

Please retain your proof of purchase for warranty claims.

9. Customer Support

If you encounter any issues or have questions regarding your TELESIN 3-in-1 Selfie Stick, please refer to the troubleshooting section first. For further assistance, please contact TELESIN customer support through the retailer where you purchased the product or visit the official TELESIN website for contact information.

For more information and product updates, visit:www.telesin.cn

© 2024 TELESIN. All rights reserved. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BG9WCSST

More documents and user manuals: **https://manuals.plus/**