Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

KIPTUMTEK A40-Pro

KIPTUMTEK A40 Pro Wireless Earbuds User Manual

Model: A40-Pro | Brand: KIPTUMTEK

1. Introduction

This manual provides detailed instructions for the KIPTUMTEK A40 Pro Wireless Earbuds, designed for an immersive audio experience with advanced features like one-step pairing, clear calls, and long battery life. These earbuds are suitable for music listening and gaming, compatible with both Android and iOS devices.

What's in the Box

- Wireless Charging Case
- Type-C Cable
- Earbuds
- English manual
- S/M/L three pairs of ear caps



The image displays the KIPTUMTEK A40 Pro Wireless Earbuds resting inside their sleek black charging case, with the lid open, showcasing the earbuds and the case's indicator lights.

2. Components Overview

The KIPTUMTEK A40 Pro Wireless Earbuds consist of two earbuds and a portable charging case. Each earbud features touch controls and a comfortable in-ear design.

Earbuds

Each earbud is lightweight, weighing approximately 4 grams, and designed for a secure and comfortable fit. They are equipped with 12mm dynamic drivers for rich audio and multiple microphones for clear call quality.



A detailed view of one KIPTUMTEK A40 Pro Wireless Earbud, highlighting its ergonomic shape and touch-sensitive surface.

Charging Case


The compact charging case provides extended battery life for the earbuds and features a USB Type-C charging port.



The image shows both KIPTUMTEK A40 Pro Wireless Earbuds placed beside their open charging case, illustrating their compact size.

Ear Tips

The earbuds come with S/M/L three pairs of ear caps to ensure a customizable and comfortable fit for different ear sizes.

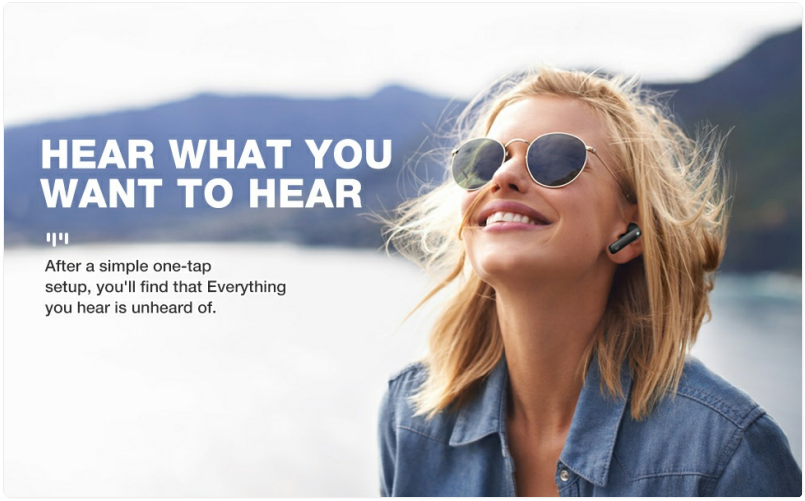

This diagram illustrates the three available sizes of silicone ear tips (Small, Medium, Large) that can be interchanged on the earbuds to achieve a personalized and comfortable fit.


3. Setup Guide

Initial Charging

Before first use, fully charge the earbuds and the charging case. Connect the provided Type-C cable to the charging case and a power source. The indicator lights on the case will show charging status.

One-Step Pairing

1. Ensure your device's Bluetooth is turned on.
2. Open the charging case. The earbuds will automatically power on and enter pairing mode.
3. On your device, search for "A40 Pro" in the Bluetooth settings and select it to connect.
4. Once connected, the earbuds will automatically pair with your last device when the case is opened.

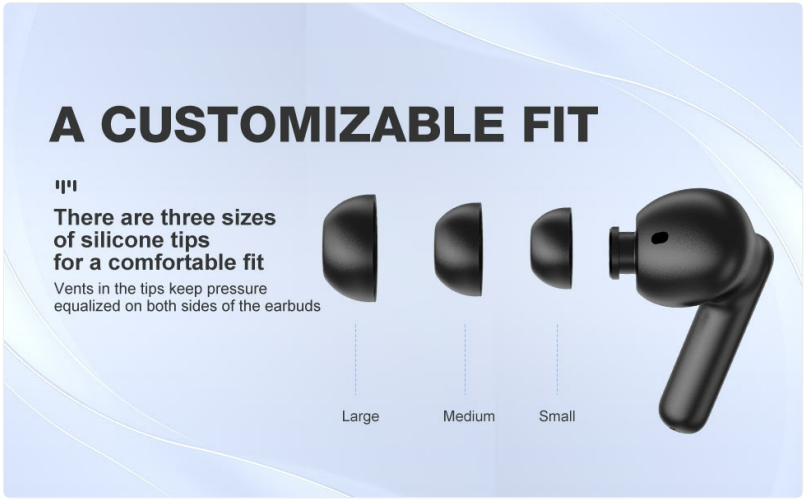

The image demonstrates the one-step pairing process, showing a smartphone's Bluetooth menu with the 'A40 Pro' earbuds listed as connected, alongside the earbuds and their open charging case.

Your browser does not support the video tag.


This video provides a visual guide on how to set up and pair the A40 Pro wireless earbuds with your device, demonstrating the automatic connection process.

4. Operating Instructions

Touch Controls

The A40 Pro earbuds feature intuitive touch controls for various functions:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.
- **Activate Voice Assistant:** Triple tap on either earbud.

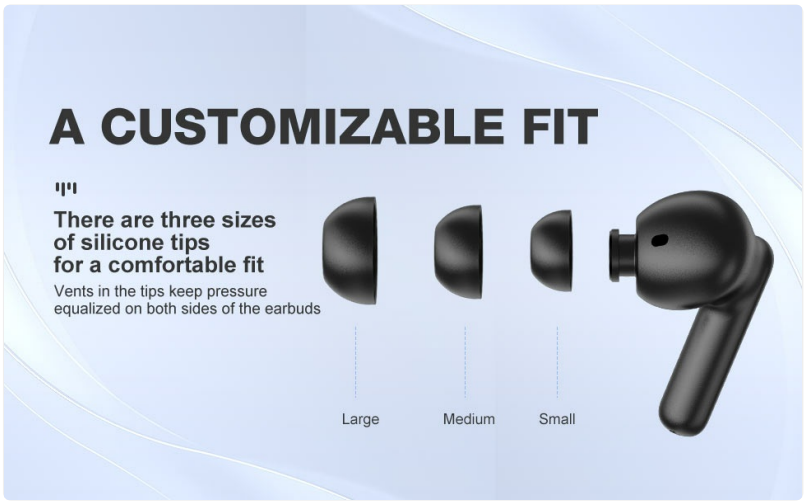

This image visually represents the touch control areas on the earbuds and common gestures for playback and call management.

Call Management

The earbuds are equipped with a built-in noise cancellation microphone for clear calls, even in noisy environments.



An illustration highlighting the placement of the four microphones on the earbuds, designed to enhance call clarity by reducing environmental noise.

Battery Life

The earbuds provide approximately 5 hours of playtime on a single charge, with the charging case extending total playtime to up to 50 hours.



This graphic visually represents the impressive battery life of the A40 Pro earbuds, indicating 5 hours of playtime per charge and a total of 50 hours with the charging case.

5. Maintenance

Cleaning

Regularly clean your earbuds and charging case to ensure optimal performance and hygiene. Use a soft, dry, lint-free cloth to wipe the surfaces. For ear tips, remove them and clean with a damp cloth, then dry thoroughly before reattaching.

Water Resistance

The A40 Pro Wireless Earbuds are IPX7 waterproof, making them resistant to sweat and light splashes. They are suitable for workouts and outdoor activities. However, they are not designed for swimming or submersion in water.



This image illustrates the IPX7 waterproof capability of the earbuds, showing them resistant to water splashes, making them ideal for active use.

Storage

When not in use, store the earbuds in their charging case to protect them and keep them charged. Avoid storing in extreme temperatures or humid environments.

6. Troubleshooting

If you encounter issues with your A40 Pro Wireless Earbuds, please refer to the following common solutions:

Earbuds Not Pairing/Connecting

- Ensure Bluetooth is enabled on your device.
- Make sure the earbuds are fully charged.
- Place the earbuds back into the charging case, close the lid, wait a few seconds, then open the lid to re-initiate pairing mode.
- Forget "A40 Pro" from your device's Bluetooth list and try pairing again.
- Ensure the earbuds are within the Bluetooth range (up to 10 meters).

No Sound or Low Volume

- Check the volume level on both your device and the earbuds.
- Ensure the earbuds are properly seated in your ears.
- Clean any debris from the earbud speakers and ear tips.
- Try re-pairing the earbuds with your device.

Charging Issues

- Verify the charging cable is securely connected to both the case and the power source.
- Try a different USB-C cable or power adapter.
- Ensure the charging contacts on the earbuds and inside the case are clean and free of obstruction.

Poor Call Quality

- Ensure the microphones are not obstructed.
- Move to a quieter environment if possible.
- Check the earbud fit to ensure proper seal.

7. Specifications

Feature	Detail
Model Name	A40-PRO
Connectivity Technology	Wireless

Feature	Detail
Wireless Communication Technology	Bluetooth
Included Components	Earbuds, English manual, S/M/L three pairs of ear caps, Wireless Charging Case, Type-C Cable
Age Range (Description)	Adult
Specific Uses For Product	Music,Gaming
Charging Time	1.5 Hours
Compatible Devices	Cellphones
Control Type	Media Control
Cable Feature	Without Cable
Item Weight	0.14 Ounces
Water Resistance Level	Waterproof
Customer Package Type	FFP
Unit Count	1 Count
Control Method	Touch
Number of Items	1
Battery Life	5 Hours
Audio Driver Type	Dynamic Driver
Bluetooth Range	10 Meters
Bluetooth Version	5.1
Carrying Case Battery Average Life	25 Hours
Carrying Case Battery Charging Time	1.5 Hours
Audio Driver Size	12 Millimeters
UPC	766997874702
Manufacturer	XIAOWTEK
Package Dimensions	4.06 x 2.91 x 1.54 inches
Item Weight	0.141 ounces
ASIN	B0BGKLS4TH
Item model number	A40-Pro

Feature	Detail
Batteries	3 A batteries required. (included)
Customer Reviews	4.4 4.4 out of 5 stars 1,929 ratings 4.4 out of 5 stars
Best Sellers Rank	#4,162 in Electronics (See Top 100 in Electronics) #535 in Earbud & In-Ear Headphones
Date First Available	September 27, 2022
Country of Origin	China
Brand	KIPTUMTEK
Color	Black
Ear Placement	On Ear
Form Factor	Over Ear
Noise Control	None

8. Warranty and Support

For warranty information or technical support regarding your KIPTUMTEK A40 Pro Wireless Earbuds, please contact the manufacturer, XIAOWTEK, directly through their official support channels.

Please refer to your purchase documentation for specific warranty terms and conditions.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BGKLS4TH

More documents and user manuals: **https://manuals.plus/**