AEG CCB6642BBM

AEG CCB6642BBM Freestanding Cooker User Manual

Model: CCB6642BBM

1. Introduction

This user manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your AEG CCB6642BBM Freestanding Cooker. Please read this manual thoroughly before using the appliance and keep it for future reference.

The AEG CCB6642BBM is an electric freestanding cooker featuring a multifunction oven with a 73-liter capacity and a 60 cm ceramic hob with 4 zones. It is designed for ease of use and cleaning, offering various cooking functions to enhance your culinary experience.

2. Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, burns, or injury. This appliance is intended for domestic use only.

- Ensure the appliance is correctly installed by a qualified person.
- Do not touch hot surfaces. Use oven mitts or pot holders.
- Supervise children when the appliance is in use.
- Never use water to extinguish cooking oil fires. Smother the fire with a lid or fire blanket.
- Disconnect the appliance from the power supply before cleaning or maintenance.
- The ceramic hob surfaces will retain residual heat after use. Be aware of residual heat indicators.

3. Setup and Installation

Before installation, ensure the appliance is undamaged. For detailed electrical connections and specific installation requirements, consult a qualified electrician or installer.

3.1 Unpacking

Carefully remove all packaging materials. Keep packaging away from children. Inspect the appliance for any signs of damage during transit. Report any damage immediately to your retailer.

3.2 Positioning and Dimensions

The cooker should be placed on a stable, level surface. Ensure adequate ventilation around the appliance. Refer to the

diagram below for precise dimensions and clearance requirements.



Figure 3.2.1: Dimensions of the AEG CCB6642BBM freestanding cooker. Width: 596 mm, Depth: 600 mm, Height: 858 mm (adjustable from 847-867 mm).

The appliance dimensions are approximately 60 cm (width) x 85.8 cm (height) x 59.6 cm (depth). The height is adjustable.

3.3 Electrical Connection

This appliance operates on 230V. The electrical connection must be performed by a qualified electrician in accordance with local regulations. Ensure the appliance is properly earthed.



Figure 3.3.1: Rear view of the AEG CCB6642BBM cooker, showing the electrical connection point and ventilation grilles.

3.4 Initial Cleaning

Before first use, clean the interior of the oven and the hob surface with a damp cloth and mild detergent. Run the oven empty for approximately 30 minutes at maximum temperature to burn off any manufacturing residues. Ensure the room is well-ventilated during this process.

4. Operating Instructions

Your AEG CCB6642BBM cooker is equipped with intuitive controls for both the oven and the ceramic hob.

4.1 Control Panel Overview



Figure 4.1.1: Close-up of the AEG CCB6642BBM control panel, showing rotary knobs for hob zones and oven functions, and a digital display for time and temperature.

The control panel features rotary knobs for selecting hob zones and oven functions, along with a digital display for setting time and monitoring cooking progress.

4.2 Ceramic Hob Operation

The 60 cm ceramic hob has 4 cooking zones. Each zone is controlled by a dedicated rotary knob. Turn the knob to the desired heat setting (1-9, typically) to activate the zone. The hob features rapid heating elements for quick cooking.

- **Residual Heat Indicators:** After use, the hob surface will remain hot. Indicators will illuminate to warn you of residual heat, reducing the risk of accidental burns.
- Use flat-bottomed cookware that matches the size of the cooking zone for optimal efficiency.

4.3 Multifunction Oven Operation

The 73-liter multifunction oven offers a variety of cooking functions:

- **Fan + Top:** For even cooking and baking.
- **Grill + Top Heat:** Ideal for grilling smaller quantities.
- **Grill + Bottom + Fan:** For intense grilling with air circulation.
- **Grill + Fan:** For larger grilling tasks.
- **Grill + Fan + Evaporator:** Combines grilling with steam for specific dishes.
- **Top + Bottom:** Traditional cooking for roasting and baking.
- **Grill + Top Heat + Fan:** Enhanced grilling with fan assistance.
- **SteamBake Function:** This function introduces a burst of steam at the beginning of the baking process, which helps dough rise fully and creates a rich, crispy crust, particularly beneficial for bread and pastries.

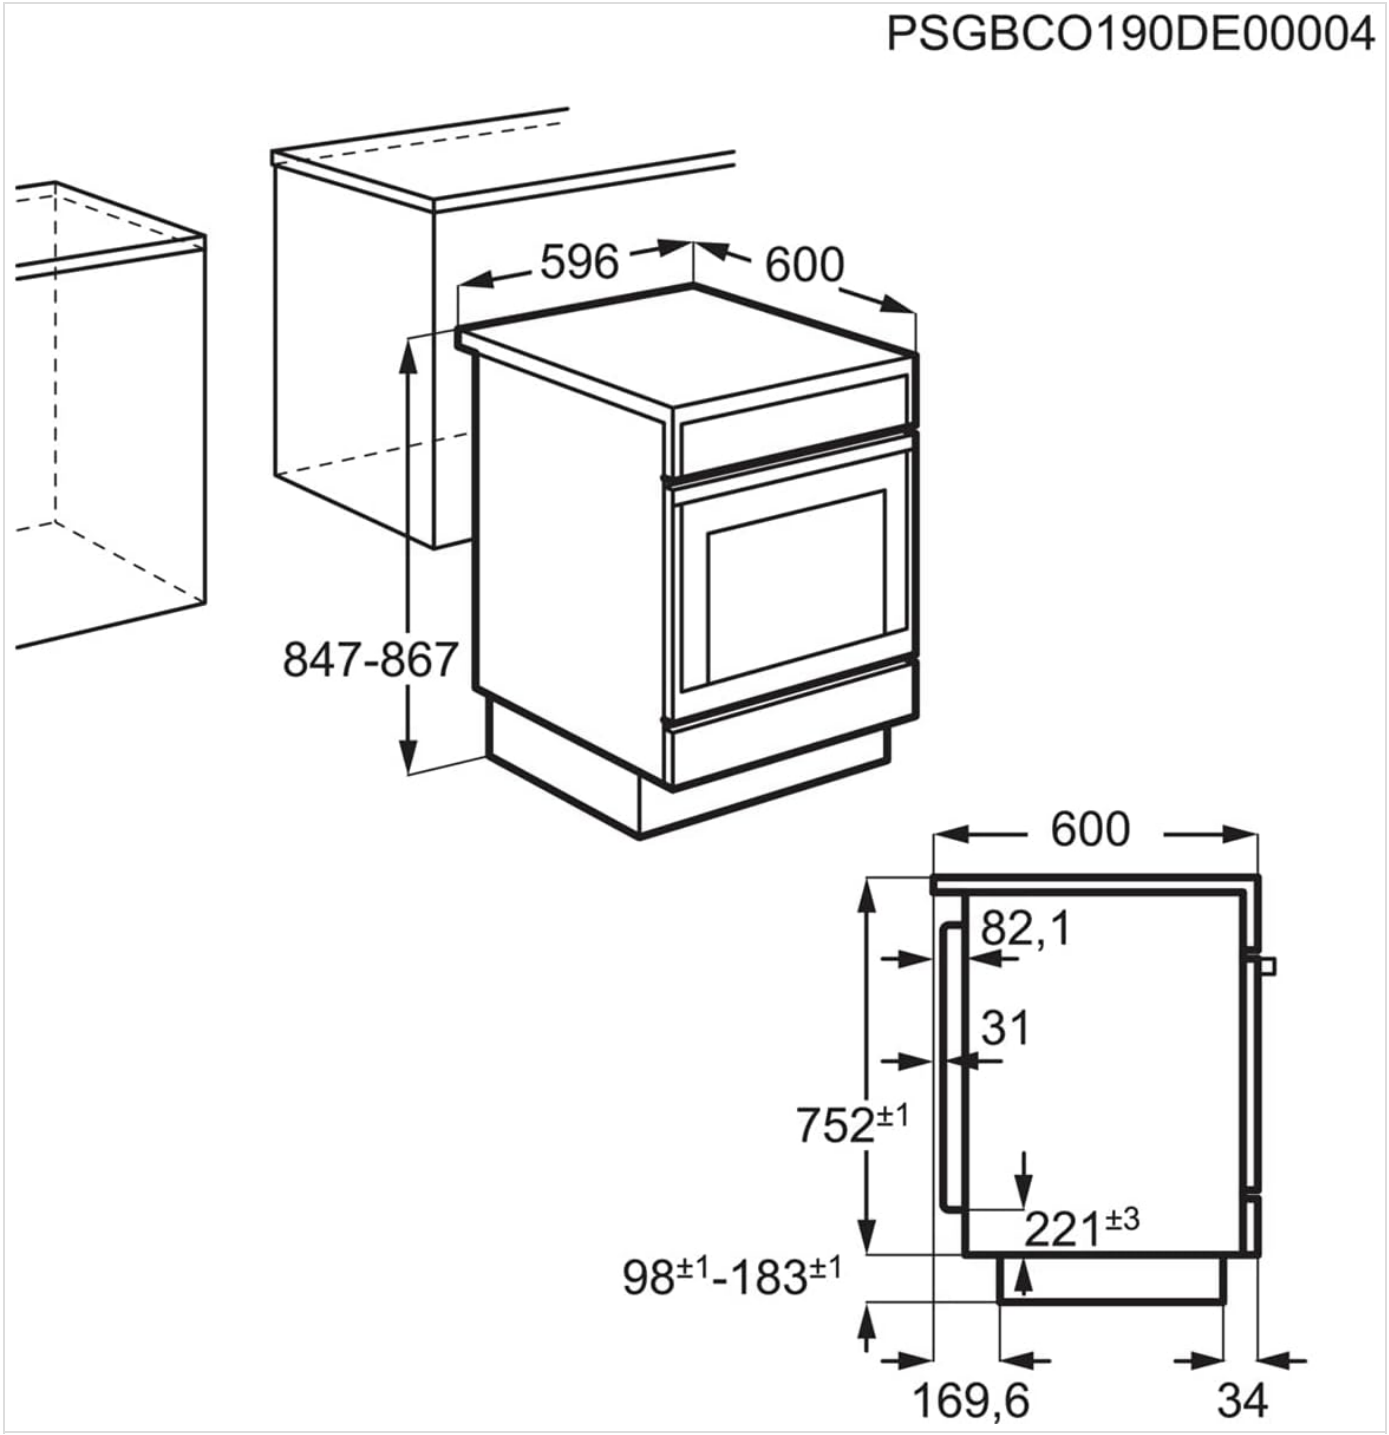


Figure 4.3.1: Interior view of the AEG CCB6642BBM oven, showing the fan and rack supports.

To select an oven function, turn the function selector knob. Then, set the desired temperature using the temperature knob. The digital display will show the current settings or time.

5. Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your AEG cooker.

5.1 General Cleaning

Always ensure the appliance is cool and disconnected from the power supply before cleaning.

- **Hob Surface:** The ceramic hob surface is smooth and easy to clean. Use a damp cloth and a small amount of mild dish soap. For stubborn stains, use a ceramic hob cleaner. Avoid abrasive cleaners or scourers.
- **Oven Interior:** For light soiling, wipe the oven interior with a damp cloth and mild detergent after each use. For heavier grease and food residues, use a specialized oven cleaner according to the product instructions.

- **Exterior Surfaces:** Clean the stainless steel and other exterior surfaces with a soft cloth and a non-abrasive cleaner suitable for kitchen appliances.

5.2 Accessories

The cooker comes with the following accessories:

- 1 x Baking Tray
- 1 x Dripping Pan (Grasera)
- 1 x Oven Rack

These accessories can be cleaned with warm soapy water or in a dishwasher, if suitable.

6. Troubleshooting

If you encounter issues with your cooker, refer to the following common troubleshooting tips before contacting customer service.

Problem	Possible Cause	Solution
Appliance does not turn on.	No power supply; fuse tripped.	Check the power cable connection. Check your household fuse box.
Hob zone not heating.	Incorrect setting; cookware not suitable.	Ensure the correct heat setting is selected. Use flat-bottomed, ferromagnetic cookware.
Oven not heating.	Incorrect function/temperature setting; oven door not closed properly.	Verify oven function and temperature settings. Ensure the oven door is fully closed.
Residual heat indicator stays on.	Hob surface is still hot.	This is normal. The indicator will turn off once the surface has cooled sufficiently.

If the problem persists after attempting these solutions, please contact AEG customer support or a qualified service technician.

7. Technical Specifications

Feature	Specification
Brand	AEG
Model Number	CCB6642BBM
Product Dimensions (W x D x H)	59.6 cm x 60 cm x 85.8 cm (adjustable)
Weight	52 kg
Oven Capacity	73 Liters
Oven Type	Multifunction Electric
Hob Type	Ceramic (Vitrocerámica)
Hob Zones	4 Zones
Voltage	230V

Feature	Specification
Energy Efficiency Class	A
Material	Stainless Steel
Control Type	Rotary Knobs, Digital Display

8. Warranty and Support

For information regarding the warranty period and terms for your AEG CCB6642BBM cooker, please refer to the warranty card included with your appliance or visit the official AEG website.

If you require technical assistance, spare parts, or have any questions not covered in this manual, please contact AEG customer support. You can find contact details on the official AEG website or through your retailer.

Visit the official AEG store for more information and products:AEG Brand Store

© 2024 AEG. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question