Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Tovala Tovala Smart Oven Pro

Tovala Smart Oven Pro 6-in-1 Instruction Manual

Model: Tovala Smart Oven Pro

Brand: Tovala

1. Introduction

The Tovala Smart Oven Pro is a versatile 6-in-1 countertop convection oven designed to simplify your cooking experience. It combines the functionalities of a steam oven, toaster, air fryer, baker, broiler, and reheater into a single, smart appliance. With integrated smartphone control and a unique barcode scanning feature, this oven offers automated cooking for a wide range of meals and groceries.



Figure 1: Tovala Smart Oven Pro with companion smartphone app.

2. Safety Information

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.

3. Package Contents

Verify that all components are present upon unpacking:

- Tovala Smart Oven Pro Unit
- Air Fry Basket

- Sheet Tray
- Oven Mitt
- Drip Tray
- Quick Start Guide / Recipes



Figure 2: Included accessories for the Tovala Smart Oven Pro.

4. Setup

1. **Unpack:** Carefully remove the oven and all accessories from the packaging.
2. **Placement:** Place the oven on a stable, heat-resistant, and level surface. Ensure adequate clearance (at least 4 inches) on all sides for proper ventilation.
3. **Power Connection:** Plug the oven into a grounded electrical outlet.
4. **Water Reservoir (for Steam):** Locate the water reservoir on the top right side of the oven. Open the cap and fill with distilled water for optimal steam function. Close the cap securely.

5. **App Connection:** Download the Tovala app from the App Store or Google Play. Follow the in-app instructions to connect your Smart Oven Pro to your home 2.4 GHz Wi-Fi network. This enables smart features like remote control, recipe access, and barcode scanning.

5. Operating Instructions

5.1. Control Panel Overview

The Tovala Smart Oven Pro features intuitive controls on its right-side panel:

- **Mode Dial:** Select cooking modes (Toast, Scan, Bake, Steam, Reheat, Broil).
- **Temperature Dial:** Adjust cooking temperature.
- **Time Dial:** Set cooking duration.
- **Start/Stop Button:** Initiate or cancel a cooking cycle.

5.2. Using the Scan Feature

The oven's built-in barcode scanner simplifies cooking for Tovala Meals and over 1,000 scannable groceries:

1. Place your food item (e.g., Tovala Meal, scannable grocery) inside the oven.
2. Select the 'Scan' mode on the oven's control panel.
3. Hold the barcode of your food item under the scanner located above the mode dial. The oven will automatically detect the item and set the optimal cooking parameters.
4. Press the 'Start' button to begin cooking.



Figure 3: Barcode scanning for automated cooking.

5.3. Using the Tovala App

The Tovala app provides enhanced control and access to a vast recipe library:

- **Remote Control:** Adjust cooking modes, temperature, and time directly from your smartphone.
- **Recipe Library:** Browse hundreds of chef-perfected recipes. The app guides you through prep steps and sends cooking instructions directly to your oven.
- **Notifications:** Receive alerts when your meal is ready.
- **Custom Cook Cycles:** Create and save personalized cooking programs using one or more modes.

5.4. Cooking Modes

The Tovala Smart Oven Pro offers six versatile cooking modes:

- **Steam:** Ideal for juicy meats, tender seafood, and vibrant vegetables.
- **Bake:** Perfect for cakes, cookies, and casseroles.

- **Broil:** Achieve crispy tops and perfectly browned dishes.
- **Air Fry:** For crispy results with less oil, such as fries, chicken wings, or vegetables.
- **Reheat:** Gently warms leftovers without drying them out.
- **Toast:** For perfectly browned bread, bagels, and pastries.

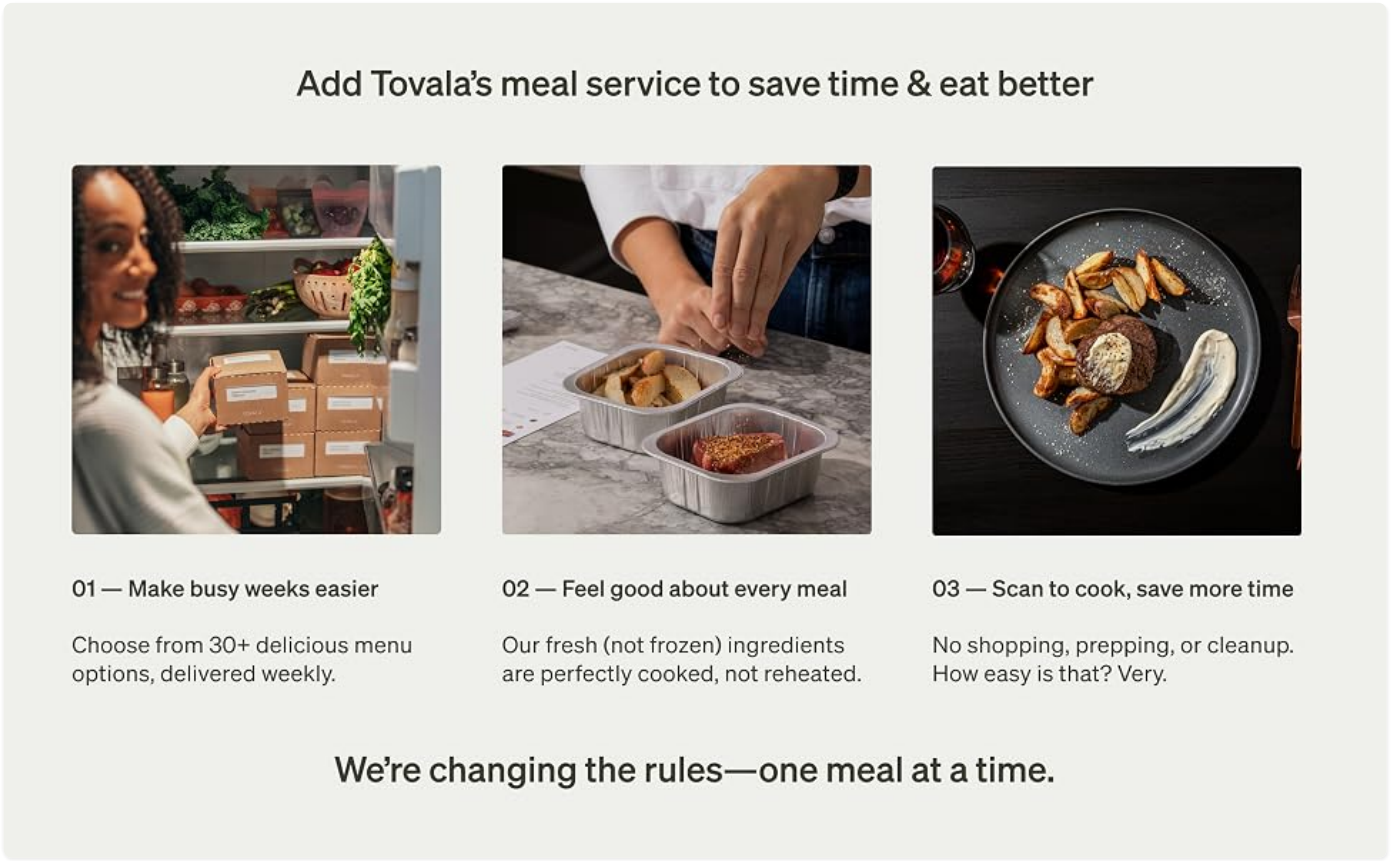


Figure 4: Overview of the six cooking modes.

5.5. Air Frying Instructions

For optimal air frying results:

1. Preheat the oven to the desired temperature using the 'Bake' mode (e.g., 375°F).
2. Spread a single layer of food evenly in the air fry basket. Avoid overcrowding.
3. Insert the basket into the middle rack position of the oven.
4. Set the cooking time and press 'Start'.
5. Shake or flip food halfway through cooking for even crisping.

Your browser does not support the video tag.

Video 1: Demonstrating how to air fry using the Tovala Smart Oven Pro.

6. Maintenance

6.1. Cleaning

- Always unplug the oven and allow it to cool completely before cleaning.
- **Interior:** Wipe the interior with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth.

- **Accessories:** The air fry basket, sheet tray, and drip tray are dishwasher safe or can be hand-washed with warm, soapy water.
- **Water Reservoir:** Empty and rinse the water reservoir regularly to prevent mineral buildup.

7. Troubleshooting

Problem	Possible Cause	Solution
Oven not turning on	Not plugged in; power outage	Ensure power cord is securely plugged in; check circuit breaker.
Wi-Fi connectivity issues	Incorrect password; out of range; router issues	Verify Wi-Fi password; move oven closer to router; restart router; re-pair via app.
Barcode scanner not working	Barcode unclear; scanner obstructed	Ensure barcode is clean and well-lit; clear any debris from scanner window.
Food not cooking evenly	Overcrowding; incorrect rack position	Avoid overcrowding the basket/tray; use recommended rack position; flip food halfway.
Steam function not working	Empty water reservoir; mineral buildup	Fill water reservoir with distilled water; clean reservoir if mineral buildup is present.

8. Specifications

Feature	Detail
Brand	Tovala
Model Name	Tovala Smart Oven Pro
Dimensions (D x W x H)	12.32" x 18.5" x 11.75"
Item Weight	22 pounds
Control Type	Touch Control
Special Features	Barcode Scanner, Programmable, WiFi Connected
Included Components	Air fry basket, sheet tray, oven mitt, recipes, drip tray, & Tovala meal credits.
Power Source	AC adapter
Material	Stainless Steel

9. Warranty and Support

The Tovala Smart Oven Pro comes with a**1-year warranty** from the date of purchase, covering manufacturing defects. For warranty claims, technical support, or general inquiries, please visit the official Tovala website or contact their

customer service.

You can also find additional information and support resources on theTovala Store on Amazon.

© 2024 Tovala. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BGMDK564

More documents and user manuals: **https://manuals.plus/**