DIERYA T68-C

DIERYA T68SE 60% Gaming Mechanical Keyboard User Manual

Model: T68-C

1. Introduction

The DIERYA T68SE is a compact 60% mechanical gaming keyboard designed for efficiency and performance. Featuring 68 keys, it includes dedicated arrow keys and a "Del" key, optimizing space without sacrificing essential functionality. Its wired Type-C connection ensures stable and responsive input, making it ideal for both gaming and typing. This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your T68SE keyboard.

2. What's in the Box

Upon unboxing your DIERYA T68SE keyboard, please verify that all components are present:

- DIERYA T68SE 60% Mechanical Keyboard
- USB-C Cable
- Keycap Puller
- User Manual (this document)

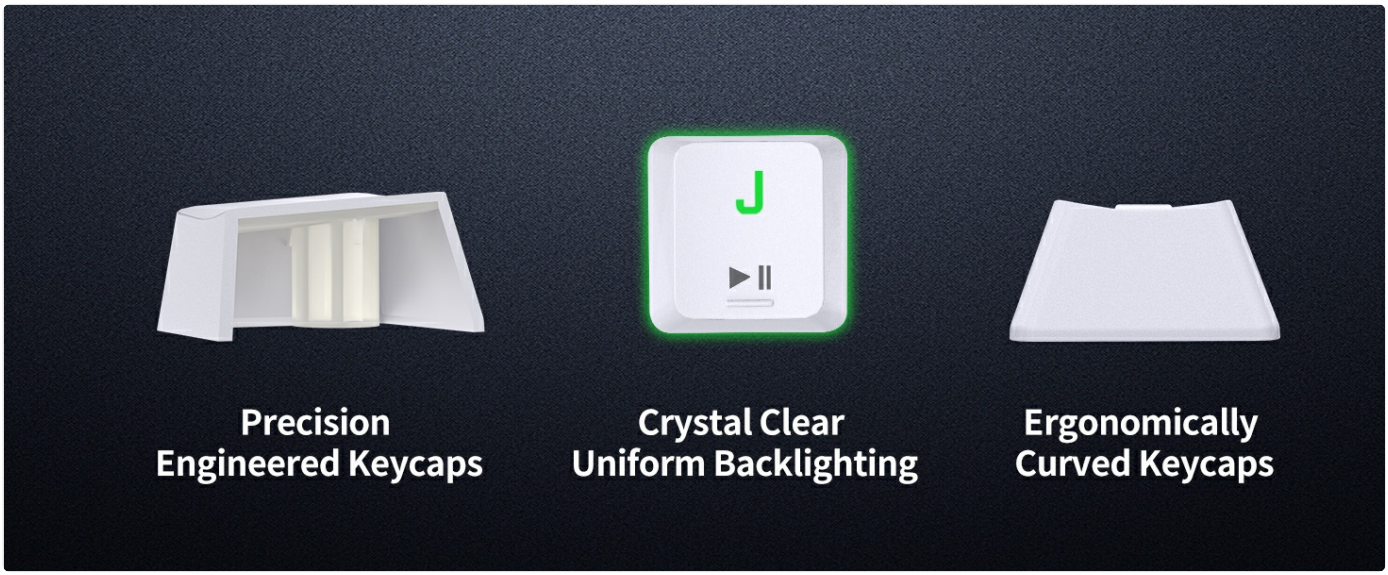


Image: Contents of the DIERYA T68SE keyboard package.

3. Features

- **Mini Portable 60% Layout:** The T68SE is a 68-key mechanical keyboard with a compact size, incorporating separate arrow keys and a "Del" key. This design saves desk space while retaining essential keyboard functions. The Type-C connection ensures stable data transmission.



Image: The compact 60% layout of the T68SE keyboard.

- **Linear Red Switches:** Equipped with quiet mechanical switches that provide a linear, smooth, and soft top-to-bottom feedback. These switches are suitable for quiet office environments and responsive gaming.



Image: Detailed view of the mechanical red switches.

- **Full Anti-Ghosting:** All 68 keys feature anti-ghosting, allowing simultaneous key presses to be registered accurately. This enhances gaming and typing efficiency. Full-size keyboard functionality can be accessed via the auxiliary Fn key.
- **Classic Blue LED Backlight:** The keyboard offers various static and dynamic blue lighting effects. Users can switch between 19 built-in lighting modes and adjust brightness and speed using dedicated key combinations.



Image: Backlight control key combinations.

- **Compatibility:** Compatible with Windows 11/10/8/7/XP, Vista, and Linux. Mac OS is partially compatible.

4. Setup

Setting up your DIERYA T68SE keyboard is a straightforward plug-and-play process:

1. **Connect the USB-C Cable:** Locate the USB-C port on the back of the keyboard. Insert the smaller USB-C end of the provided cable into this port.



Image: Detachable Type-C cable connection.

2. **Connect to Computer:** Insert the standard USB-A end of the cable into an available USB port on your computer (PC, laptop, or compatible gaming console).
3. **Driver Installation (Automatic):** Your operating system should automatically detect and install the necessary drivers. No manual driver installation is typically required.
4. **Initial Test:** Once connected, the keyboard's backlight should illuminate. Test typing and key responsiveness to ensure proper functionality.

*Note: If keys are only activating function commands upon initial setup, press the**Spacebar** to toggle off the function lock setting.*

5. Operating Instructions

The DIERYA T68SE keyboard offers various functions accessible via the **Fn** key. Below are common operations:

5.1 Backlight Control

- **Switch Light Modes:** Press **Fn + Backspace** to cycle through different static and dynamic lighting effects. Alternatively, press **Fn + ** to switch light modes.
- **Adjust Brightness:** Press **Fn + Up Arrow** to increase brightness and **Fn + Down Arrow** to decrease brightness.
- **Adjust Light Speed:** Press **Fn + Left Arrow** to decrease light speed and **Fn + Right Arrow** to increase light speed.
- **Light Effects Movement:** For some light effects, press **Fn + [** and **Fn +]** to move the effect left or right.

5.2 Function Keys (Fn Combinations)

The compact 60% layout utilizes the **Fn** key to access multimedia controls and other functions typically found on a full-size keyboard. Refer to the keycaps for specific Fn combinations (e.g., Fn + F1-F12 for multimedia, Fn + Win for Windows key lock).



Image: Function profiles and key combinations.

5.3 Keycap Design

- **Precision Engineered Keycaps:** Designed for durability and consistent performance.
- **Crystal Clear Uniform Backlighting:** Ensures even light distribution through the keycaps.
- **Ergonomically Curved Keycaps:** Provides a comfortable typing experience.



Image: Keycap design features.

6. Maintenance

Proper maintenance can extend the lifespan of your DIERYA T68SE keyboard:

- **Regular Cleaning:** Use a can of compressed air to remove dust and debris from between the keycaps. For surface cleaning, wipe the keycaps and keyboard frame with a soft, slightly damp cloth. Avoid excessive moisture.
- **Keycap Removal:** If deeper cleaning is required or if you wish to replace keycaps, use the provided keycap puller. Gently pull the keycap straight up to remove it. When reattaching, align the keycap with the switch stem and press down firmly until it clicks into place.
- **Avoid Liquid Spills:** Keep liquids away from the keyboard to prevent damage to the internal components. In case of a spill, immediately disconnect the keyboard and allow it to dry completely before reconnecting.
- **Cable Care:** Avoid bending or crimping the USB-C cable excessively to prevent internal wire damage.

7. Troubleshooting

If you encounter issues with your DIERYA T68SE keyboard, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Keyboard not responding / No power	Loose cable connection, faulty USB port, driver issue.	◦ Ensure the USB-C cable is securely connected to both the keyboard and the computer. ◦ Try connecting the keyboard to a different USB port on your computer. ◦ Restart your computer. ◦ Test the keyboard on another computer to rule out system-specific issues.
Keys not registering / Ghosting	Software conflict, physical debris under keycap, function lock enabled.	◦ Ensure no other keyboard software is interfering. ◦ Use compressed air to clean under the affected keycaps. ◦ If keys are only activating function commands, press the **Spacebar** to toggle off the function lock setting.
Backlight not working or stuck	Backlight turned off, brightness set to minimum, software glitch.	◦ Press **Fn + Backspace** or **Fn + ** to cycle through backlight modes and ensure it's not off. ◦ Press **Fn + Up Arrow** multiple times to increase brightness. ◦ Disconnect and reconnect the keyboard.

If the issue persists after attempting these solutions, please contact DIERYA customer support for further assistance.

8. Specifications

Attribute	Detail

Attribute	Detail
Model Number	T68-C
Product Dimensions	11.41 x 3.89 x 1.37 inches
Item Weight	1.68 pounds
Manufacturer	TMKB
Connectivity Technology	USB-C Wired
Keyboard Description	Gaming Mechanical Keyboard
Number of Keys	68
Switch Type	Linear Red Switch
Backlighting	Classic Blue LED (19 modes)
Compatibility	Windows 11/10/8/7/XP, Vista, Linux (Mac OS partially compatible)

9. Warranty and Support

DIERYA is committed to providing high-quality products and customer satisfaction. Your DIERYA T68SE keyboard comes with the following:

- **1 Year Quality Warranty:** Covers manufacturing defects and ensures product quality for one year from the date of purchase.
- **30 Days Replacement:** Allows for product replacement within 30 days of purchase if issues arise.
- **24 Hour Customer Support:** Dedicated support team available to assist with any inquiries or problems you may encounter.

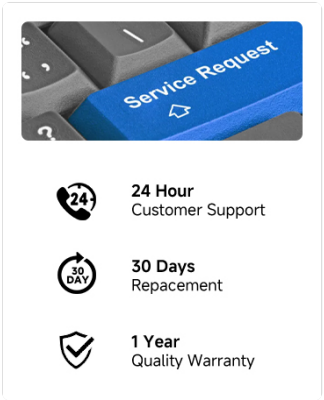


Image: DIERYA customer service and warranty information.

For support, please visit the official DIERYA website or contact their customer service team directly. Keep your purchase receipt as proof of purchase for warranty claims.

© 2023 DIERYA. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question