Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

JVC SI55UR

JVC 55-inch UHD 4K Roku TV User Manual

Model: SI55UR

Brand: JVC

1. Important Safety Instructions

Read all instructions before operating the TV. Keep these instructions for future reference. Follow all warnings and instructions marked on the product.

- **Power Source:** Operate the TV only from the type of power source indicated on the marking label.
- **Ventilation:** Slots and openings in the cabinet are provided for ventilation. Do not block or cover these openings.
- **Water and Moisture:** Do not use this product near water.
- **Cleaning:** Unplug the TV from the wall outlet before cleaning. Use a damp cloth for cleaning. Do not use liquid or aerosol cleaners.
- **Attachments:** Do not use attachments not recommended by the product manufacturer.
- **Lightning:** For added protection during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

2. What's in the Box

Verify that all components are present before proceeding with the setup.

- JVC 55-inch UHD 4K Roku TV
- Remote Control
- User Manual (this document)
- TV Stand (2 pieces)
- Screws for TV Stand
- Batteries (2x AAA for remote)



Image: The JVC 55-inch UHD 4K Roku TV, showcasing its sleek design, integrated Roku streaming, LED display, and 4K resolution capabilities. The image also displays the included stand.

3. Setup

3.1 Attaching the TV Stand

1. Carefully place the TV screen-down on a soft, clean surface to prevent damage.
2. Align each stand piece with the corresponding screw holes on the bottom of the TV.
3. Secure each stand piece using the provided screws. Ensure they are tightened firmly.

3.2 Mounting the TV (Optional)

If you plan to wall-mount your TV, refer to the instructions provided with your wall-mount kit.
Note: Wall mount kit sold separately.

3.3 Connecting Power

1. Plug the power cord into the AC IN port on the back of the TV.
2. Plug the other end of the power cord into a wall outlet.

3.4 Initial Setup Wizard

Upon first power-on, the TV will guide you through the initial setup process, including:

- Language selection

- Network connection (Wi-Fi)
- Roku account setup or sign-in
- Channel scan (for antenna/cable connections)

4. Operating Your TV

4.1 Remote Control Functions

The remote control provides access to all TV functions. Insert the two AAA batteries into the remote control, observing polarity.

- **Power:** Turns the TV on or off.
- **Home:** Returns to the Roku Home screen.
- **Directional Pad:** Navigates menus and selects items.
- **OK/Select:** Confirms selections.
- **Back:** Returns to the previous screen.
- **Volume Up/Down:** Adjusts volume.
- **Mute:** Mutes or unmutes sound.
- **Channel Up/Down:** Changes channels (for antenna/cable).
- **Playback Controls:** Play, Pause, Fast Forward, Rewind.
- **Shortcut Buttons:** Direct access to popular streaming services (e.g., Netflix, Prime Video, YouTube).

4.2 Navigating the Roku TV Interface

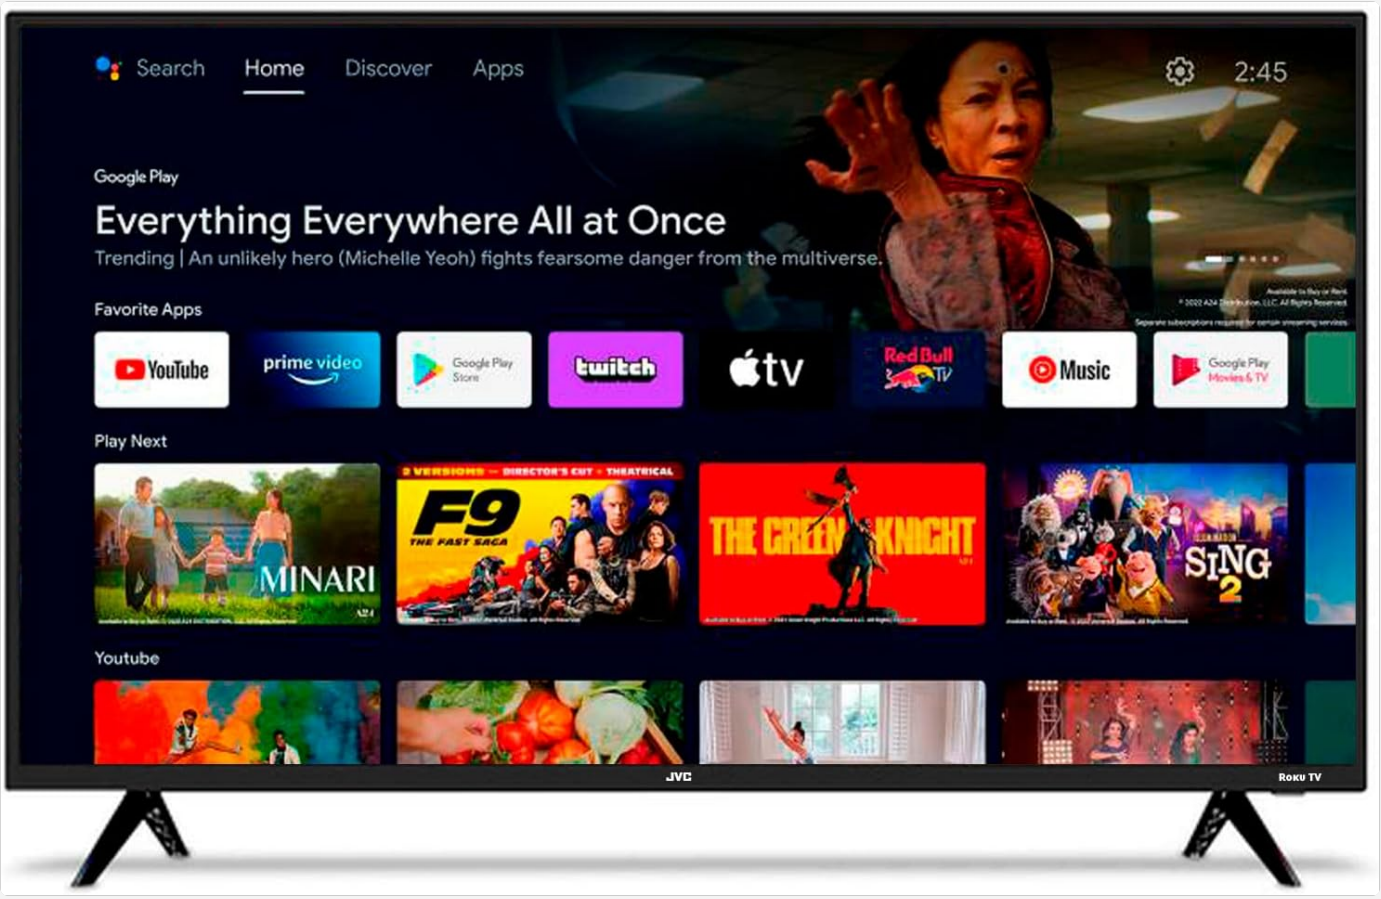


Image: The JVC Roku TV home screen, showing a grid of popular streaming applications like YouTube, Prime Video, Google Play, Twitch, Apple TV, Red Bull TV, and Music, along with content recommendations.

The Roku TV home screen provides easy access to streaming channels, input sources, and settings. Use the directional pad on your remote to navigate.

- **Streaming Channels:** Access thousands of free and paid streaming channels.
- **Live TV:** If an antenna is connected, access live broadcast TV.
- **Inputs:** Switch between HDMI, USB, and other connected devices.
- **Settings:** Adjust picture, sound, network, and system settings.

5. Connecting External Devices

Your JVC Roku TV offers multiple ports for connecting external devices.

- **HDMI Ports (x4):** Connect Blu-ray players, game consoles, cable/satellite boxes, and other HDMI-enabled devices.
- **USB Port (x1):** Connect USB drives for media playback (photos, videos, music).
- **AV Input (x1):** Connect older devices using composite video and stereo audio cables.
- **Antenna/Cable Input:** Connect an antenna for over-the-air broadcasts or a cable TV connection.
- **Optical Digital Audio Out:** Connect to a soundbar or AV receiver for enhanced audio.
- **Headphone Jack:** Connect headphones for private listening.

To switch inputs, press the **Home** button on your remote, then navigate to the desired input source on the home screen.

6. Maintenance and Care

6.1 Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, lint-free cloth to gently wipe the screen. For stubborn marks, lightly dampen the cloth with water or a screen cleaner specifically designed for TVs.
- Wipe the cabinet and stand with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.

6.2 General Care

- Avoid exposing the TV to direct sunlight or heat sources.
- Do not place heavy objects on top of the TV.
- Ensure adequate ventilation around the TV.
- Unplug the TV during lightning storms or when unused for extended periods.


7. Troubleshooting

Before contacting support, try these common solutions.

Problem	Possible Cause / Solution
No power	Check if the power cord is securely plugged into the TV and the wall outlet. Try a different outlet.
No picture, but sound is present	Ensure the correct input source is selected. Check cable connections to external devices.
No sound, but picture is present	Check volume level and mute setting. Ensure audio cables are connected correctly.
Remote control not working	Replace batteries. Ensure no obstructions between remote and TV.
Cannot connect to Wi-Fi	Check Wi-Fi password. Restart your router. Move TV closer to router.
Picture quality is poor	Check source resolution. Adjust picture settings (brightness, contrast, sharpness).

8. Specifications

Feature	Detail
Model Name	SI55UR
Screen Size	55 inches
Display Technology	LED
Resolution	3840 x 2160 (4K UHD)
Refresh Rate	60 Hz
Operating System	Roku TV
Connectivity	Wi-Fi, 4x HDMI, 1x USB, 1x AV Input
Audio Output	2 x 10W
Aspect Ratio	16:9
Dimensions (W x D x H)	134 x 15 x 83 cm (approx.)
Weight	17 kg (approx.)
Included Accessories	Remote Control, User Manual, TV Stand, Batteries

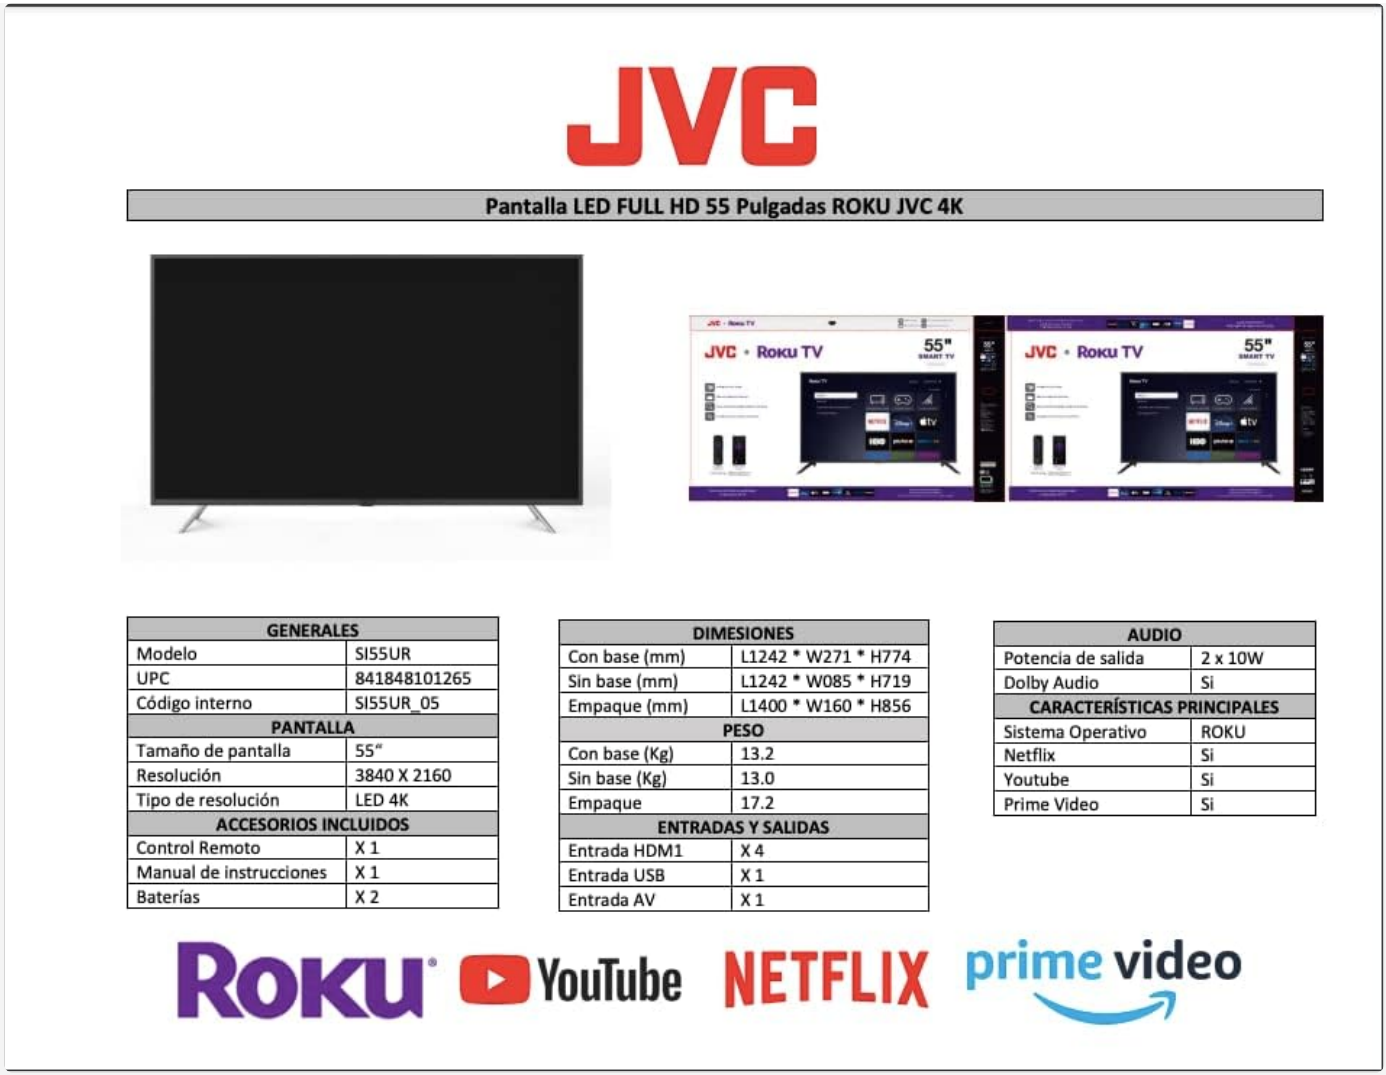

GENERALES	
Modelo	SI55UR
UPC	841848101265
Código interno	SI55UR_05
PANTALLA	
Tamaño de pantalla	55"
Resolución	3840 X 2160
Tipo de resolución	LED 4K
ACCESORIOS INCLUIDOS	
Control Remoto	X 1
Manual de instrucciones	X 1
Baterías	X 2

DIMESIONES	
Con base (mm)	L1242 * W271 * H774
Sin base (mm)	L1242 * W085 * H719
Empaque (mm)	L1400 * W160 * H856
PESO	
Con base (Kg)	13.2
Sin base (Kg)	13.0
Empaque	17.2
ENTRADAS Y SALIDAS	
Entrada HDM1	X 4
Entrada USB	X 1
Entrada AV	X 1

AUDIO	
Potencia de salida	2 x 10W
Dolby Audio	Si
CARACTERÍSTICAS PRINCIPALES	
Sistema Operativo	ROKU
Netflix	Si
Youtube	Si
Prime Video	Si

Image: A table detailing the general, display, audio, input/output, and accessory specifications for the JVC 55-inch Full HD Roku TV 4K, including model number SI55UR, resolution, and connectivity options.

9. Warranty and Support

9.1 Warranty Information

This JVC product is covered by a limited warranty. Please refer to the warranty card included with your product for specific terms and conditions, including warranty period and coverage details. Keep your purchase receipt as proof of purchase.

9.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact JVC customer support. Contact information can typically be found on the JVC official website or on the warranty card.
When contacting support, please have your TV's model number (SI55UR) and serial number ready. The serial number is usually located on a sticker on the back of the TV.

© 2024 JVC. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BHBLY6X5

More documents and user manuals: **https://manuals.plus/**