Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Sluban M38-B1103

Sluban M38-B1103 Building Blocks TV Set Instruction Manual

Model: M38-B1103 | Brand: Sluban

Introduction

Thank you for choosing the Sluban M38-B1103 Building Blocks TV Set. This instruction manual provides detailed guidance on assembling, operating, and maintaining your building block toy. Please read this manual carefully before beginning assembly to ensure a correct and enjoyable experience.
This set is designed to enhance building skills and creativity. It contains approximately 375 pieces made from non-toxic PVC plastic, ensuring a safe play environment.

Safety Information

- **Choking Hazard:** This toy contains small parts and is not suitable for children under 3 years old. Adult supervision is recommended.
- **Material Safety:** All components are made from non-toxic PVC plastic.
- **Proper Use:** Use the building blocks as intended. Do not attempt to modify or force pieces together.

Package Contents

Your Sluban M38-B1103 Building Blocks TV Set package should contain the following:

- Approximately 375 building block pieces.
- One instruction manual (this document).
- Character figures and accessories (as depicted on the packaging).

Setup and Assembly

Follow these steps to assemble your Sluban Building Blocks TV Set. Refer to the images for visual guidance.

Step 1: Prepare the Base

Begin by sorting the building blocks by color and shape. Identify the base pieces for the TV set. Connect them firmly

to form the foundation.

Step 2: Construct the TV Casing

Assemble the side and top panels of the TV casing using the white and pink blocks. Ensure all connections are secure.



Image: Initial assembly of the TV casing, showing the pink and white block structure.

Step 3: Install the Internal Scene and Figures

Assemble the internal scene elements, including the background panel and the platform for the character figures. Place the character (e.g., princess figure) and the cat figure onto the platform.



Image: The completed front view of the TV set, displaying the assembled internal scene with figures.

Step 4: Attach the Antenna and Control Knobs

Securely attach the antenna to the top of the TV set. Add the decorative control knobs to the side of the TV casing.



Image: A slightly different angle of the assembled TV set, highlighting the antenna and side details.

Step 5: Integrate the Rotating Mechanism

Assemble the rotating mechanism at the back of the TV set. This mechanism allows you to change the background scene. Ensure it is properly aligned and can turn smoothly.



Image: The rear of the TV set, illustrating the manual rotating wheel and the interchangeable background panel.

Operating Instructions

Once assembled, the Sluban Building Blocks TV Set offers interactive play features:

- **Changing the Scene:** Locate the rotating wheel at the back of the TV set (refer to Step 5 image). Gently turn this wheel to rotate the internal background scene, creating different environments for your figures.
- **Figure Placement:** The character and cat figures can be repositioned on their platform within the TV screen area for varied play scenarios.

Maintenance

- **Cleaning:** To clean the building blocks, wipe them with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the assembled set or individual blocks in a cool, dry place away from direct sunlight to prevent discoloration or damage.
- **Disassembly:** If disassembling, do so carefully to avoid damaging the connection points of the blocks.

Troubleshooting

- **Missing Pieces:** Carefully check the packaging and surrounding area. If pieces are genuinely missing, contact Sluban customer support.
- **Blocks Not Connecting:** Ensure you are using the correct blocks for each step and applying firm, even pressure. Some connections may require a gentle push.
- **Rotating Mechanism Sticking:** Check for any misaligned blocks or debris obstructing the mechanism. Ensure all parts are correctly assembled as per Step 5.

Specifications

Brand	Sluban
Model Number	M38-B1103
Material	PVC Plastic
Number of Pieces	375
Color	Multicolor
Educational Objective	Building Skills
Special Feature	Non-toxic
Product Dimensions (L x W x H)	12 x 24 x 22 cm (4.7 x 9.4 x 8.7 inches)
Item Weight	250 grams (0.55 lbs)
Recommended Age	Child (Max manufacturer age: 24 months)

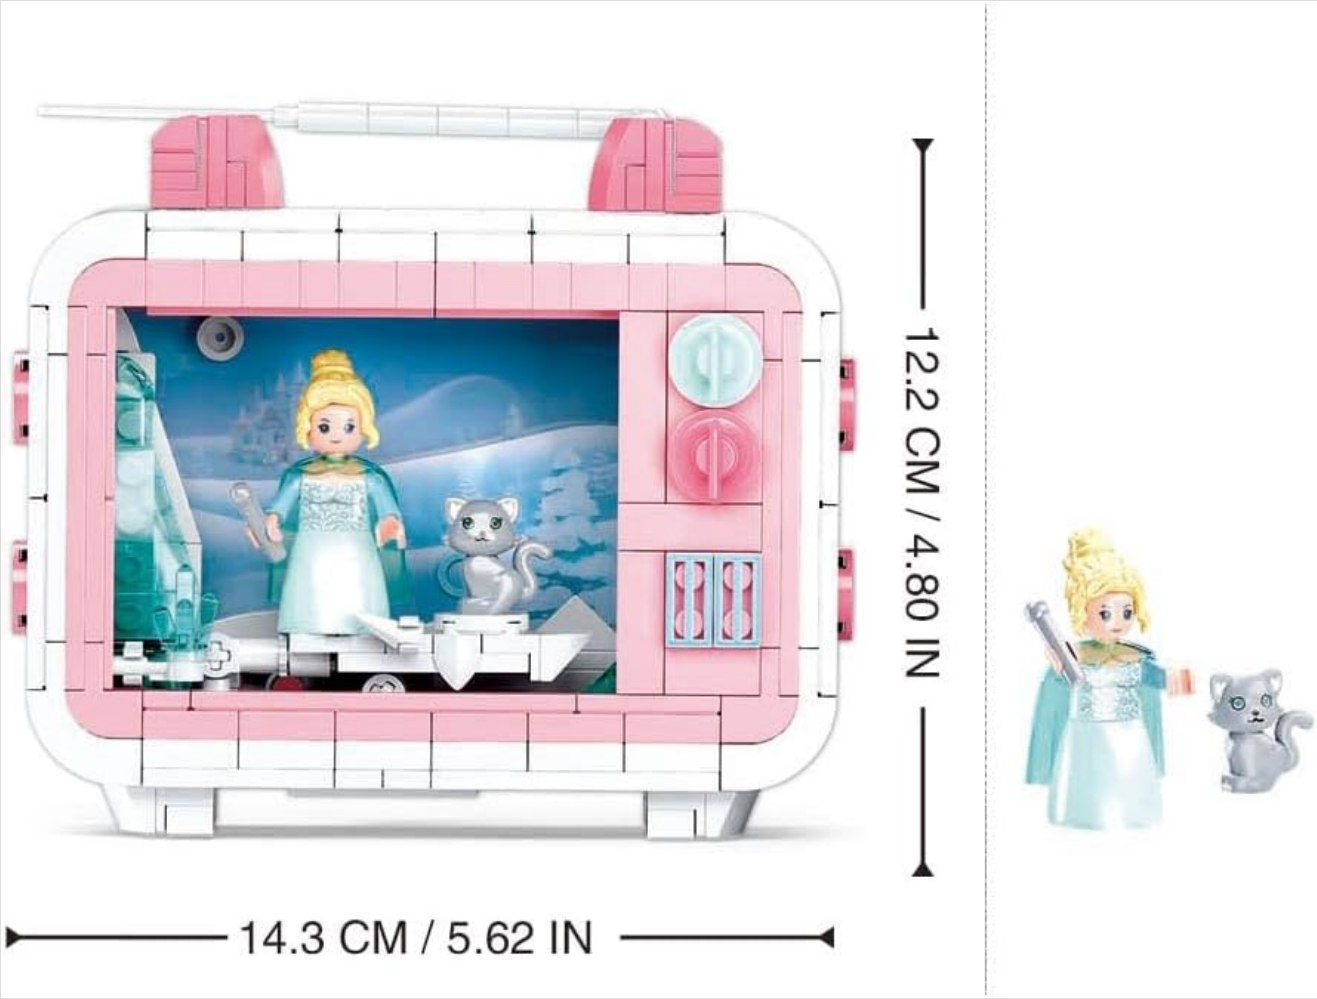


Image: Dimensional diagram of the assembled TV set, indicating height and width.

Warranty and Support

Warranty: This product comes with no explicit warranty as per manufacturer specifications.
Customer Support: For any questions regarding assembly, missing parts, or product information, please refer to

the contact information provided on the product packaging or the official Sluban website.

© 2024 Sluban. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BHDZ33P7

More documents and user manuals: **https://manuals.plus/**