OSOTEK OSOTEK H200

OSOTEK H200 Cordless Wet Dry Vacuum Cleaner & Mop & Wash 3 in 1 User Manual

Model: OSOTEK H200 | Brand: OSOTEK

Product Overview

The OSOTEK H200 is a versatile 3-in-1 cordless wet dry vacuum cleaner designed for efficient cleaning of hardwood and hard floors. It combines vacuuming, mopping, and washing functions, making it ideal for tackling pet hair and sticky messes. Key features include a long battery life, intelligent self-cleaning system, an intuitive LCD display, voice prompts for guidance, an ultra-wide brush roller, and an LED light for improved visibility.



Figure 1: OSOTEK H200 Cordless Wet Dry Vacuum Cleaner with Charging Dock.

Key Features:

- **3-in-1 Functionality:** Vacuums, mops, and washes simultaneously.
- **Cordless Design:** Offers freedom of movement without being tethered to an outlet.
- **Long Battery Life:** Equipped with a 4000mAh battery providing up to 35 minutes of runtime.
- **Self-Cleaning System:** One-touch intelligent self-cleaning for easy maintenance of the roller brush.
- **LCD Display:** Provides real-time information on cleaning modes, water levels, and battery status.
- **Voice Prompt:** Offers helpful audio guidance during operation.
- **Ultra-Wide Brush Roller:** Designed for efficient cleaning of large areas.
- **LED Light:** Illuminates dark areas for thorough cleaning under furniture and in corners.

Setup

1. Unpacking and Assembly:

Carefully remove all components from the packaging. Ensure all parts listed in the packing list are present. Assemble the handle to the main body of the vacuum cleaner by aligning the connection points and pushing firmly until it clicks into place.

2. Initial Charging:

Before first use, fully charge the OSOTEK H200. Place the vacuum cleaner on its charging dock. The LCD display will indicate the charging status. A full charge typically takes approximately 4-5 hours. Ensure the charging dock is connected to a power outlet.

3. Filling the Clean Water Tank:

Locate the clean water tank (750ml capacity). Remove the tank from the main unit. Open the cap and fill the tank with clean tap water. For enhanced cleaning, a small amount of compatible floor cleaning solution can be added, following the solution manufacturer's instructions. Do not overfill. Securely close the cap and reinsert the tank into the vacuum cleaner until it clicks.



Figure 2: Illustration of the Clean Water Tank and Used Water Tank.

Operating Instructions

1. Power On/Off:

Press the power button located on the handle to turn the vacuum cleaner on or off. The LCD display will activate upon power-on.

2. Selecting Cleaning Modes:

The OSOTEK H200 features multiple cleaning modes suitable for various floor types and mess levels. Use the mode selection button on the handle to cycle through available modes (e.g., Auto, Super, Vac). The LCD display will show the currently selected mode.



Figure 3: Smart LCD Display for Easier Operation.

3. Cleaning Operation:

Hold the handle firmly and tilt the vacuum cleaner back to engage the brush roller. Guide the vacuum cleaner across the floor, moving it forward and backward to clean. The LED light on the brush head illuminates the cleaning path, making dirt and debris more visible, especially in dimly lit areas or under furniture.



Figure 4: Easy Cleaning Under Furniture with the flexible design.

The ultra-wide brush roller and edge-to-edge cleaning design ensure comprehensive coverage, reaching close to baseboards and into corners.



Figure 5: Perfect Edge to Edge Cleaning capability.

The vacuum is effective on various hard floor types and can handle different types of messes, from bread crumbs to pet hair and sticky spills.

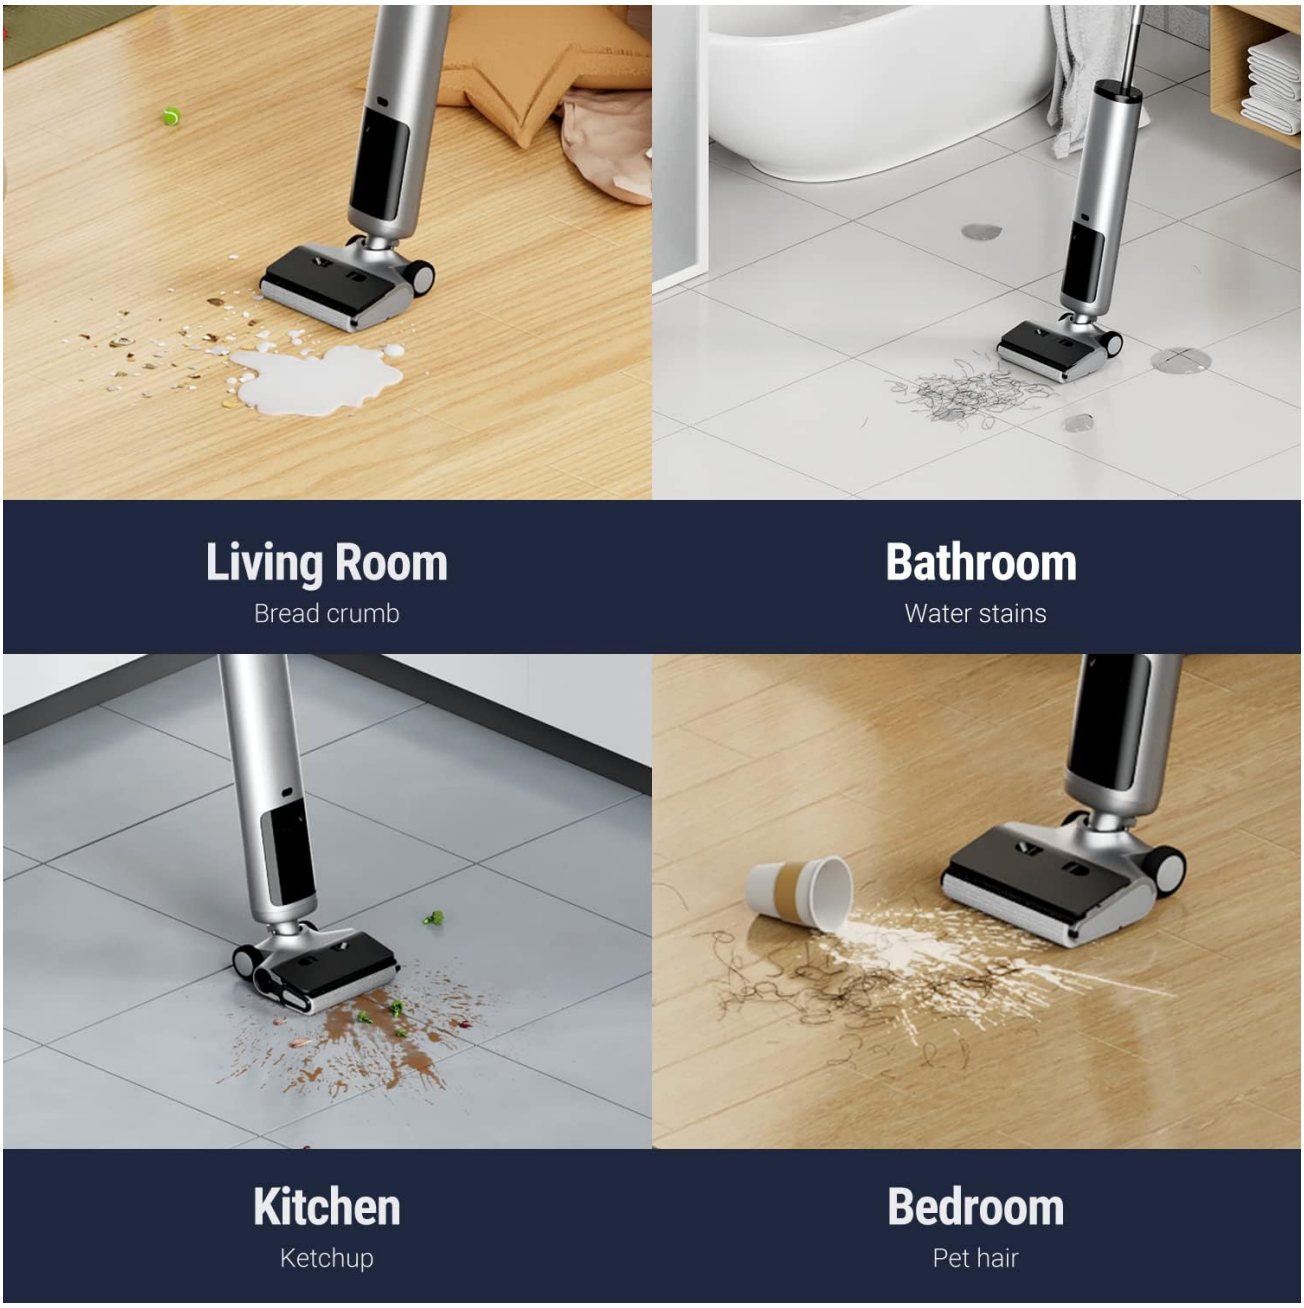


Figure 6: Versatile cleaning for various messes and rooms.

4. Voice Prompts:

The device provides voice prompts for important notifications such as low battery, full dirty water tank, or when self-cleaning is initiated. Pay attention to these prompts for optimal performance.

Your browser does not support the video tag.

Video 1: Demonstration of the OSOTEK H200 Wet Dry Vacuum Cleaner effectively cleaning various messes, highlighting its ease of use and powerful cleaning capabilities.

Maintenance

1. Self-Cleaning Cycle:

After each use, it is recommended to run the self-cleaning cycle. Place the vacuum cleaner on its charging dock and

press the self-clean button (refer to the user manual for exact button location if not on handle). The device will automatically clean the brush roller and internal pathways. Ensure there is enough clean water in the tank and the dirty water tank is not full before starting the cycle.



Figure 7: Innovative Self-cleaning System in action.

2. Emptying the Dirty Water Tank:

The dirty water tank (640ml capacity) should be emptied after each cleaning session or when the voice prompt indicates it is full. Remove the tank, open the lid, and dispose of the dirty water and solid waste. Rinse the tank thoroughly with clean water.



Figure 8: Separating solid and liquid waste from the dirty water tank.

3. Cleaning the Brush Roller:

Even with self-cleaning, periodic manual inspection and cleaning of the brush roller are recommended. Remove the brush roller cover and then the roller itself. Remove any tangled hair or debris. Rinse the roller under running water and allow it to air dry completely before reinserting. The brush roller is designed to be efficient and easy to clean.



Figure 9: Efficient Ultrarange Roller Brush for powerful cleaning.

4. Cleaning the HEPA Filter:

The HEPA filter should be cleaned regularly to maintain suction performance. Remove the filter from its housing. Tap it gently to remove loose dust, or rinse it under running water if heavily soiled. Ensure the filter is completely dry before reinstallation to prevent mold or damage.

Troubleshooting

Problem	Possible Cause	Solution
Vacuum not turning on.	Low battery; not properly charged.	Ensure the device is fully charged on the charging dock. Check power connection to the dock.

Problem	Possible Cause	Solution
Poor suction or cleaning performance.	Dirty water tank full; clean water tank empty; brush roller tangled/dirty; filter clogged.	Empty dirty water tank. Refill clean water tank. Clean brush roller. Clean or replace HEPA filter.
Voice prompt alerts.	Indicates specific operational status or issue.	Listen to the prompt and follow the instructions provided (e.g., "Dirty water tank full," "Please charge").
Water leakage.	Water tanks not properly installed; seals damaged.	Ensure both clean and dirty water tanks are securely in place. Inspect seals for damage and contact support if necessary.

For issues not listed above, please refer to the official OSOTEK user manual PDF or contact customer support.

Specifications

Feature	Detail
Brand	OSOTEK
Model Name	OSOTEK H200
Special Feature	Wet, Dry
Filter Type	HEPA Filter
Included Components	Brush
Cordless	Yes
Runtime	35 minutes
Recommended Uses	Hard Floor
Form Factor	Stick
Color	Black
Battery Description	4000mAh battery with up to 35 minutes of battery life
Noise Level	75 dB
Clean Water Tank Capacity	750ml (approx.)
Dirty Water Tank Capacity	640ml (approx.)
Product Dimensions	9.85 x 9.85 x 43.3 inches
Item Weight	21.6 pounds

Warranty and Support

For warranty information, product registration, or technical support, please refer to the official OSOTEK website or contact their customer service directly. The product may come with a limited manufacturer's warranty. Keep your purchase receipt as proof of purchase.

Additional resources:

- Download Official User Manual (PDF)
- Visit the OSOTEK Store on Amazon

© 2024 OSOTEK. All rights reserved.