Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

WantJoin Boba Cooker

WantJoin 5L Commercial Boba Maker Machine Instruction Manual

Model: Boba Cooker (5L, 110V)

1. Introduction

Welcome to the instruction manual for your WantJoin 5L Commercial Boba Maker Machine. This appliance is designed for efficient and consistent preparation of tapioca pearls and other dessert ingredients, suitable for commercial and home use. Please read this manual thoroughly before operation to ensure safe and optimal performance.

2. Important Safety Instructions

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off",

then remove plug from wall outlet.

- Do not use the appliance for other than intended use.

3. Product Overview and Components

The WantJoin Boba Maker Machine is designed for ease of use and efficient cooking. Familiarize yourself with its main parts:



Figure 3.1: WantJoin 5L Commercial Boba Maker Machine



Figure 3.2: Product Detail Components

- **Main Unit:** The primary housing containing the heating element and control panel.
- **Inner Pot:** Non-stick cooking pot for ingredients.
- **Lid:** Covers the inner pot during cooking.
- **Control Panel:** Touch interface for program selection and operation.
- **Overflow Valve:** Prevents excessive air pressure during cooking.
- **Silicone Sealing Ring:** Ensures a tight seal for efficient cooking.
- **Steam Water Container:** Collects condensation.

4. Specifications

Feature	Specification
Brand	WantJoin
Model Number	Boba Cooker
Capacity	5 Liters (approx. 11 Pounds)
Voltage	110 Volts
Wattage	900 Watts
Material	Plastic (exterior), Non-stick (inner pot)
Product Dimensions	15.9"D x 15.9"W x 11.4"H
Item Weight	8.93 pounds
Control Method	Touch
Number of Settings	5 (pre-programmed)
Dishwasher Safe	No



Figure 4.1: Product Information and Dimensions

5. Setup

5.1 Unpacking

- Carefully remove all packaging materials from the box.
- Ensure all components listed in Section 3 are present and undamaged.
- Retain packaging for future storage or transport.

5.2 Placement

- Place the Boba Maker on a stable, flat, heat-resistant surface.
- Ensure adequate ventilation around the appliance. Do not place it directly against a wall or in an enclosed cabinet.
- Keep away from water sources and direct heat.

5.3 Initial Cleaning

- Before first use, wash the inner pot, lid, and any removable accessories with warm, soapy water.
- Rinse thoroughly and dry completely.
- Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

6. Operating Instructions

6.1 Control Panel Overview

The intelligent control panel allows for easy selection of cooking programs:



Figure 6.1: Intelligent Control Program Panel

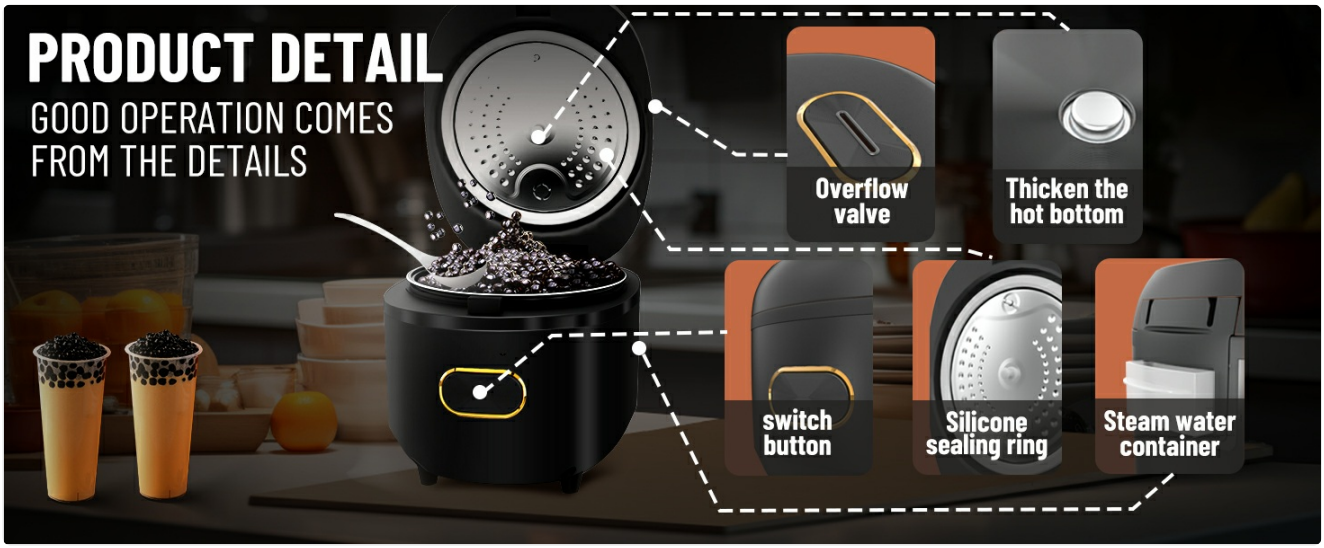


Figure 6.2: LED Programs Display with Cooking Times

- **Menu Button:** Cycles through available cooking programs.
- **Start/Cancel Button:** Initiates or stops a cooking cycle.
- **+/- Buttons:** Adjusts cooking time or other parameters (if applicable for selected program).
- **Program Indicators:** Lights up to show the selected program (e.g., Tapioca Boba, Amber Pearl, Sago, Pudding, Taro Ball).
- **Keep Warm:** Activates the automatic keep warm function after cooking.

6.2 Cooking Tapioca Pearls (Boba)

This machine is optimized for cooking tapioca pearls. Follow these steps for best results:

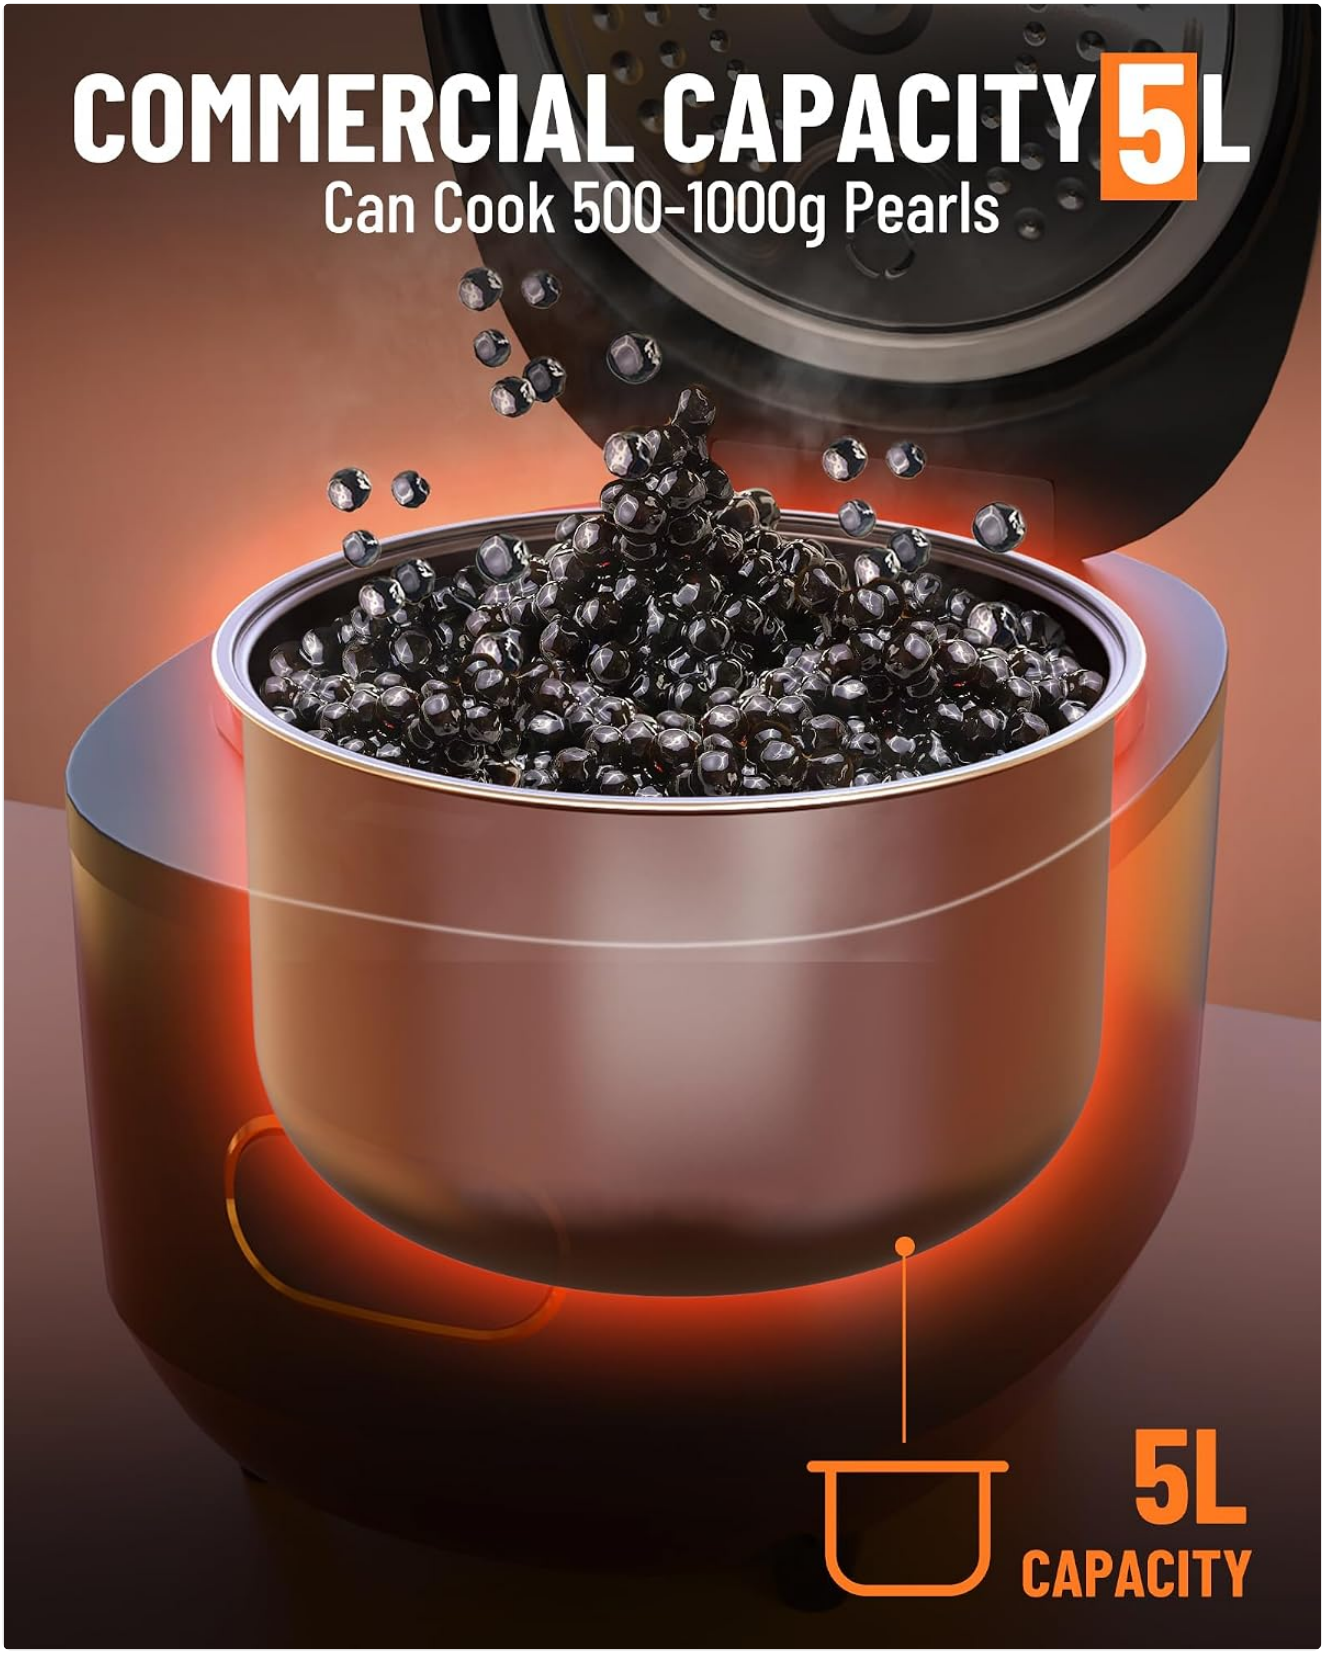


Figure 6.3: Commercial Capacity for Pearl Cooking

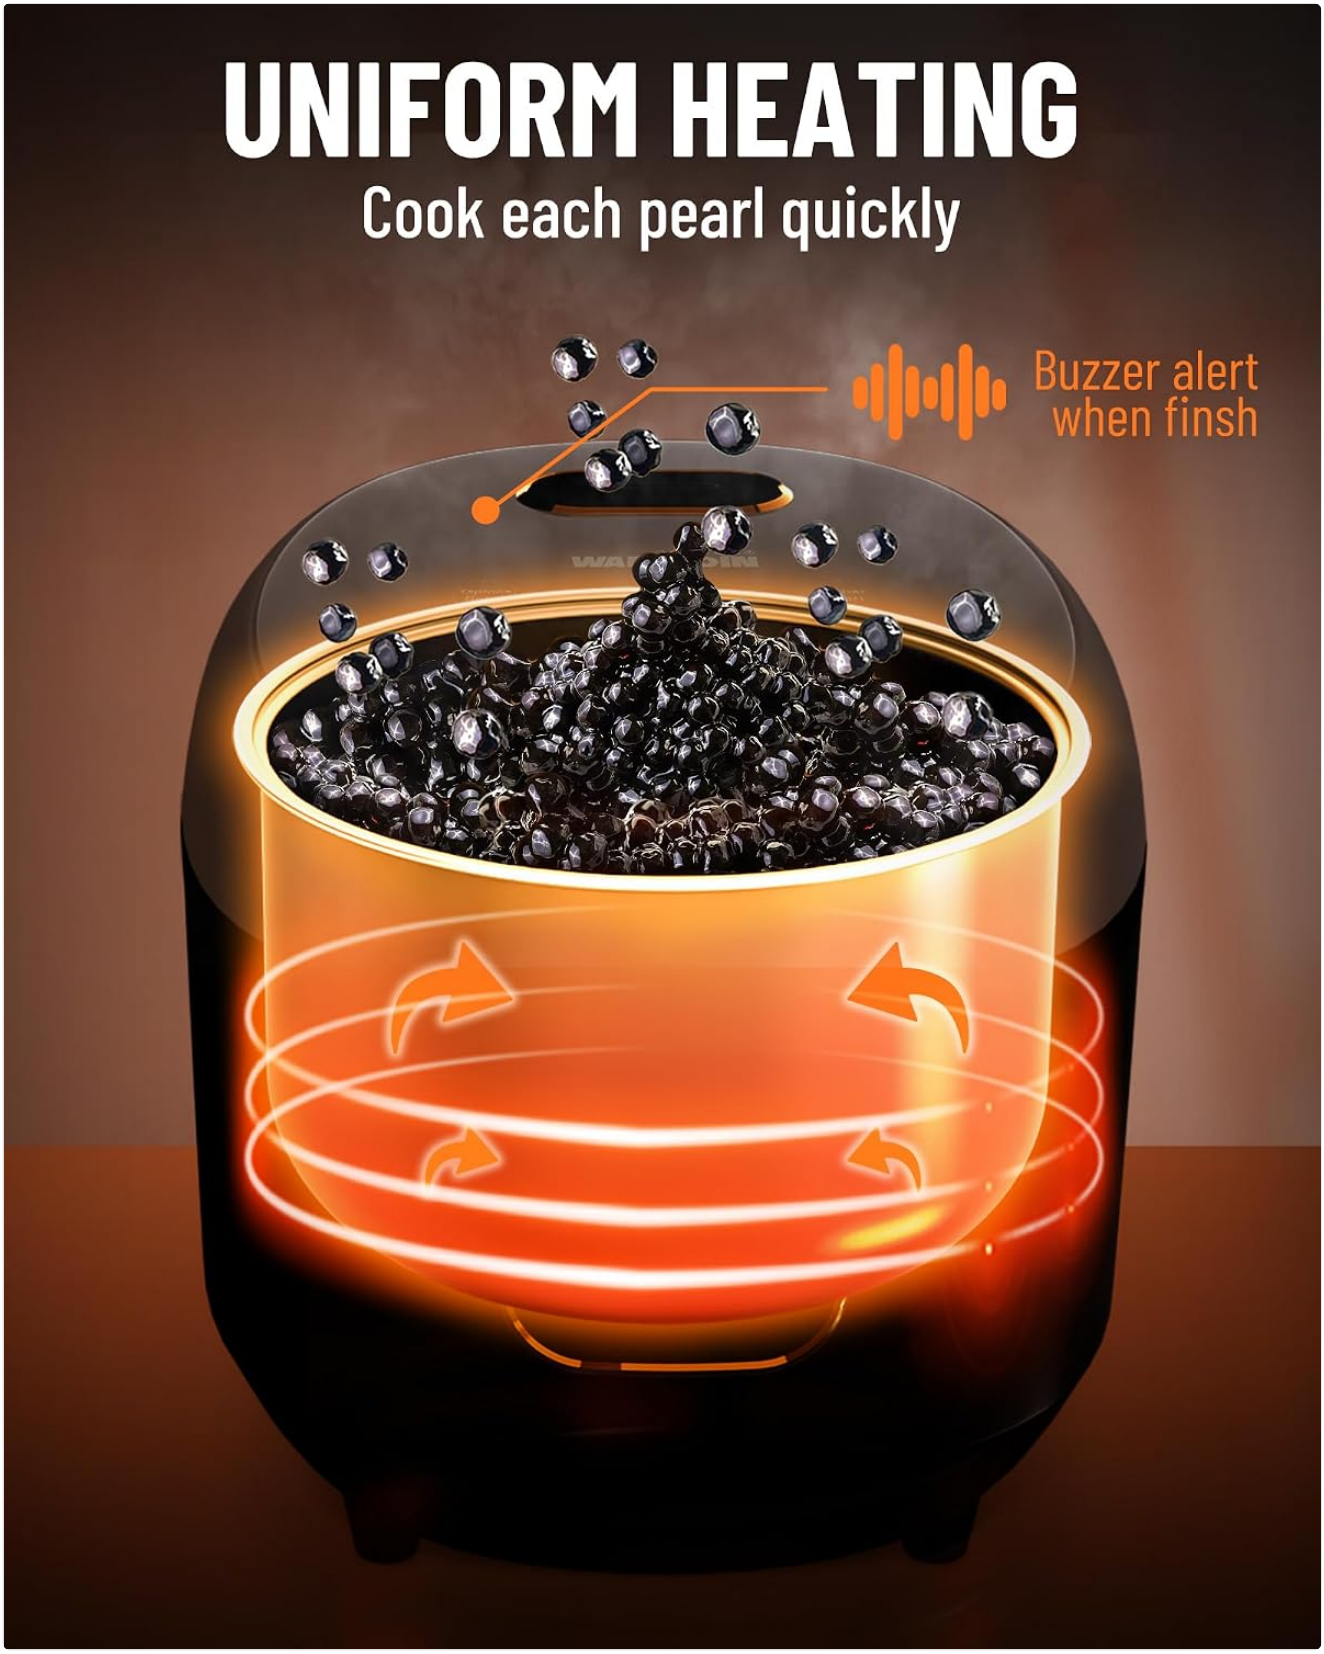


Figure 6.4: Uniform Heating for Optimal Pearl Texture

1. **Add Water:** Fill the inner pot with the appropriate amount of water according to your tapioca pearl package instructions. A common ratio is 6-8 parts water to 1 part pearls.
2. **Add Pearls:** Once the water is boiling (or as per recipe), add the desired quantity of tapioca pearls (0.5-1KG recommended for 5L capacity). Stir gently to prevent sticking.
3. **Select Program:** Close the lid. Press the "Menu" button until "Tapioca Boba" is selected. The display will show the default cooking time (e.g., 10 minutes cook, 1 minute braise).
4. **Start Cooking:** Press the "Start/Cancel" button to begin the cooking cycle. The machine will heat and cook the pearls with stereo circulation heating for even results.

5. **Buzzer Alert:** A buzzer will sound when the cooking cycle is complete.
6. **Keep Warm:** The machine will automatically switch to the "Keep Warm" function for up to 9 hours, maintaining the pearls at an optimal serving temperature.
7. **Serve:** Carefully open the lid, stir the pearls, and serve as desired.

6.3 Using Other Programs

The WantJoin Boba Maker can also prepare other ingredients:



Figure 6.5: Versatile Cooking for Various Ingredients

- **Amber Pearl:** Select this program for cooking amber pearls. Default time: 15 minutes cook, 20 minutes braise.

- **Sago:** Use this program for sago. Default time: 18 minutes cook, 18 minutes braise.
- **Pudding** / **Grass Jelly:** Select for preparing pudding or grass jelly. Default time: 8 minutes cook, 1 minute braise.
- **Taro Ball:** Use this program for taro balls. Default time: 22 minutes cook, 22 minutes braise.

Always refer to the specific ingredient's packaging for recommended water ratios and cooking adjustments. Use the +/- buttons to modify cooking times if needed before starting the program.

6.4 Keep Warm Function

After any cooking program completes, the machine will automatically enter a "Keep Warm" mode. This function maintains the temperature of the cooked ingredients for up to 9 hours, ensuring they remain ready for serving without overcooking.



Figure 6.6: 9-Hour Keep Warm Feature

7. Maintenance and Cleaning

Regular cleaning ensures the longevity and hygienic operation of your Boba Maker.

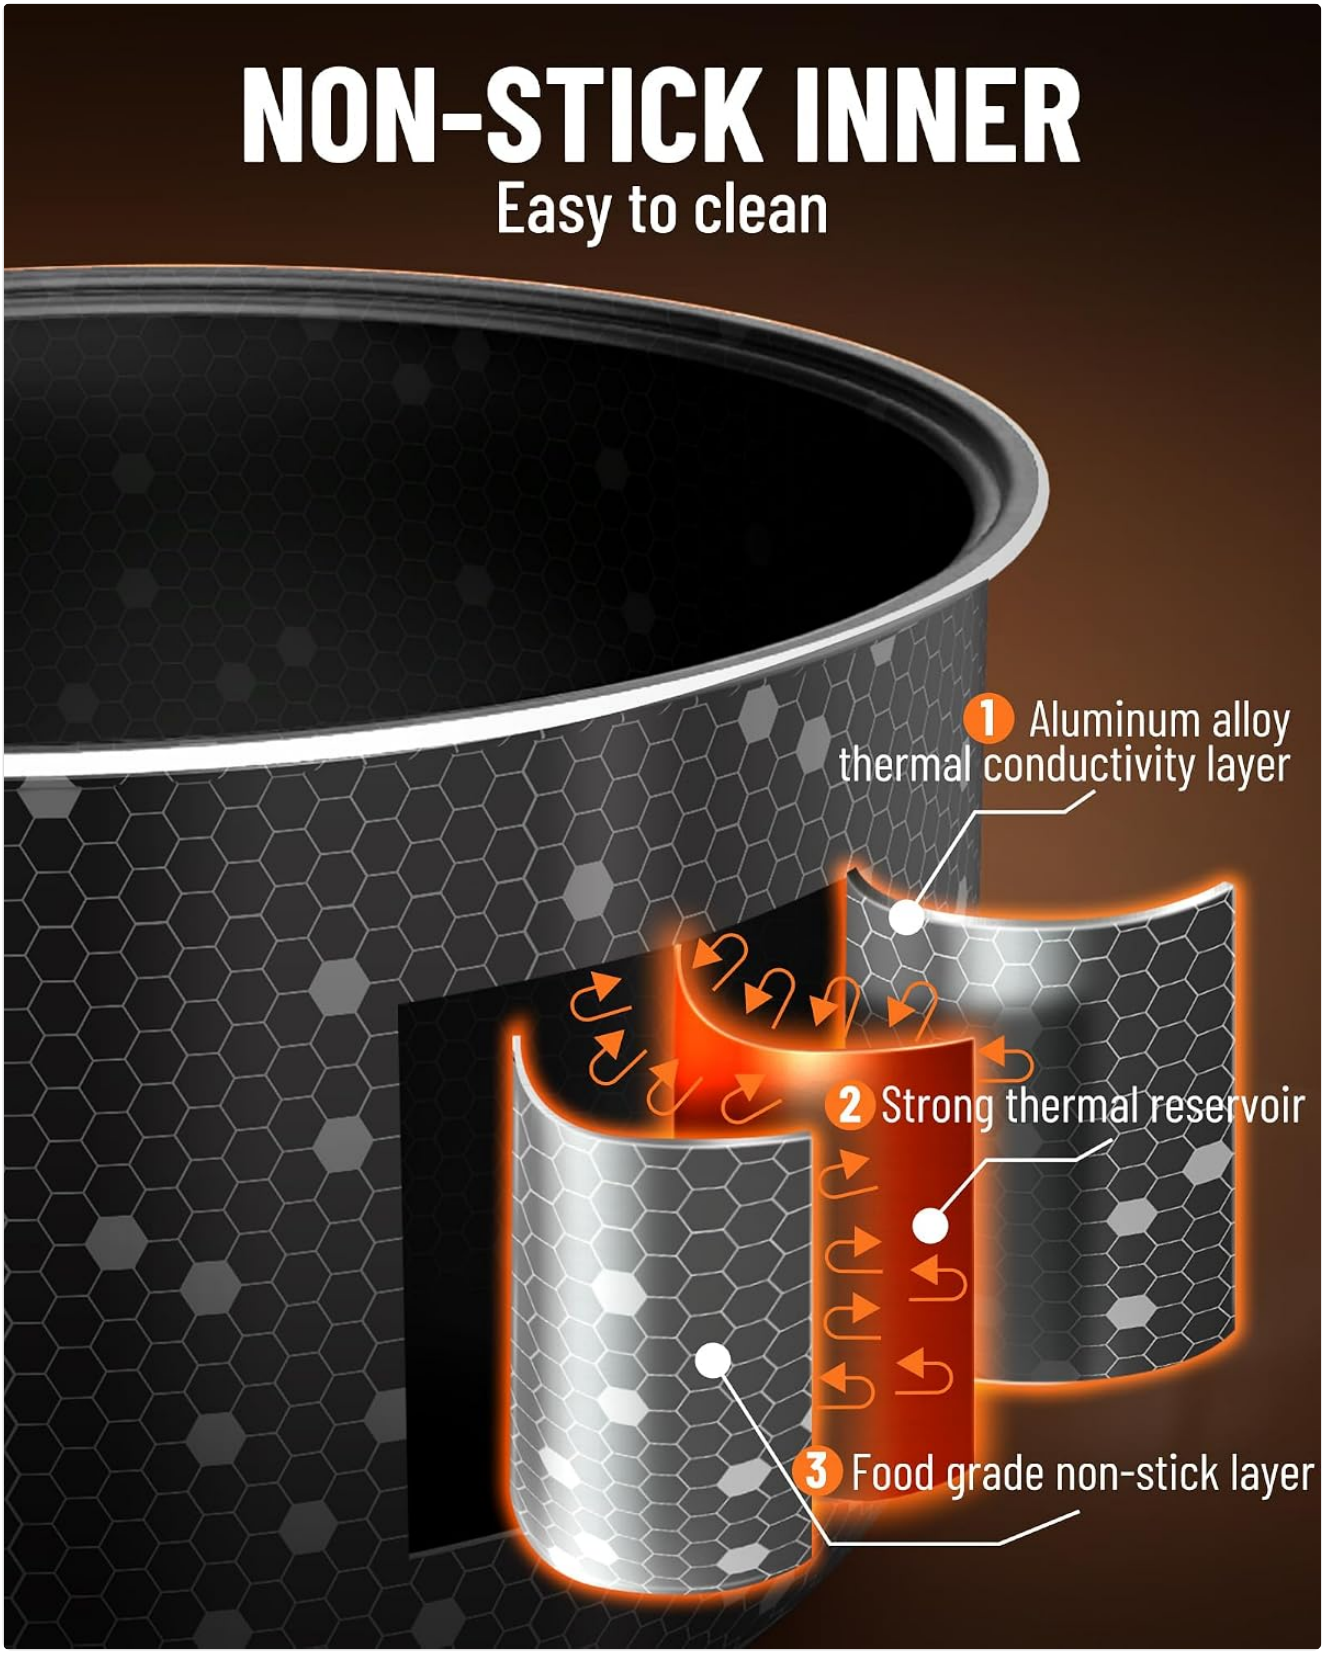


Figure 7.1: Non-Stick Inner Pot for Easy Cleaning

7.1 Daily Cleaning

- **Unplug:** Always unplug the appliance and allow it to cool completely before cleaning.
- **Inner Pot:** Remove the inner pot. Wash it with warm, soapy water using a soft sponge or cloth. The non-stick coating prevents pearls from sticking, making cleaning easier. Rinse thoroughly and dry.
- **Lid:** Wash the lid with warm, soapy water, rinse, and dry. Pay attention to the silicone sealing ring and overflow valve area.
- **Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or immerse the

main unit in water.

- **Steam Water Container:** Empty and clean the steam water container regularly.

7.2 Important Cleaning Notes

- **NOT Dishwasher Safe:** The inner pot and other components are NOT dishwasher safe. Hand wash only.
- Do not use metal scouring pads or harsh chemicals, as these can damage the non-stick coating and exterior finish.
- Ensure all parts are completely dry before reassembling or storing the appliance.

8. Troubleshooting

If you encounter any issues with your WantJoin Boba Maker, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; damaged cord.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Inspect the power cord for damage.
Pearls are sticking to the pot.	Insufficient water; not stirred initially; damaged non-stick coating.	Ensure proper water-to-pearl ratio. Stir pearls immediately after adding to boiling water. Avoid using metal utensils that can scratch the non-stick surface.
Pearls are too hard or too soft.	Incorrect cooking time; incorrect water ratio.	Adjust cooking time using the +/- buttons based on pearl type and desired texture. Verify water-to-pearl ratio.
Buzzer alert does not sound.	Malfunction.	Contact customer support if the buzzer consistently fails to sound after cooking completion.
Lid does not seal properly.	Silicone sealing ring is dirty or improperly seated.	Clean the silicone sealing ring and ensure it is correctly positioned in the lid.

If the problem persists after attempting these solutions, please contact customer support.

9. Customer Support

For any questions, concerns, or assistance with your WantJoin Boba Maker Machine, please contact our customer support team. While specific warranty details are not provided in this manual, WantJoin is committed to excellent after-sales service.
Please visit the official WantJoin website or refer to your purchase documentation for contact information and warranty details.



Figure 9.1: Multi-Scenario Application

© 2023 WantJoin. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BJ8JZPQF

More documents and user manuals: **https://manuals.plus/**