Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TOLEBLID ProSteel Deluxe Home Safe-2025

TOLEBLID ProSteel Deluxe Home Safe-2025 Instruction Manual

Model: ProSteel Deluxe Home Safe-2025 | Brand: TOLEBLID

Introduction

Thank you for choosing the TOLEBLID ProSteel Deluxe Home Safe-2025. This safe is designed to provide secure storage for your firearms and valuables, featuring advanced biometric technology, robust anti-theft construction, and fireproof capabilities. Please read this manual thoroughly before installation and operation to ensure proper use and maximum security.

This manual provides essential information on setting up, operating, and maintaining your safe. Adhering to these instructions will help ensure the longevity and optimal performance of your product.

Safety Information

- Always keep firearms unloaded before storing them in the safe.
- Ensure the safe is securely mounted to prevent unauthorized removal.
- Store ammunition separately from firearms, if possible, or in a secure compartment within the safe.
- Keep all keys, passwords, and biometric access information confidential and out of reach of children and unauthorized individuals.
- Never store flammable liquids or hazardous materials inside the safe.
- Regularly check the battery level to ensure continuous operation of the electronic lock.



Image: The TOLEBLID safe helps keep firearms and other sensitive items away from children and unauthorized access, promoting a safer home environment.

Product Features

- **Capacity:** Stores up to 8 rifles, accommodating firearms up to 57 inches long, including those with scopes.
- **Dimensions:** Interior dimensions of 57.08" (H) x 13.38" (D) x 13.77" (W).
- **Heavy-Duty Construction:** Weighs 112 pounds with a 78mm ultra-thick alloy steel door, 5*30mm high-strength solid core lock bolts, and pry-resistant concealed hinges for enhanced security.
- **Fireproof Protection:** Rated fireproof for up to 1 hour at 1700°F, providing critical protection for contents during a fire.
- **Interior Design:** Features a removable and adjustable shelf, soft foam barrel rests, and a carpeted floor to protect firearms from scratches. Includes an inner lock box for additional secure storage.
- **Advanced Biometric System:** Equipped with a semiconductor fingerprint reader for fast and accurate access, capable of storing up to 100 unique fingerprints.
- **Multiple Unlocking Methods:** Offers four ways to access the safe: biometric fingerprint, digital keypad password, emergency keys, and an external battery box for power failure.
- **Anti-Theft Alarm System:** Activates an alarm if an incorrect password is entered 3 times or an incorrect fingerprint 5 times, or if the safe is moved while locked.
- **Silent Mode:** Option to enable silent mode for discreet access.



Image: Detailed view of the safe's interior, highlighting the inner lock box, removable shelf, LED lights, biometric digital panel, and solid locking bolts.



Image: The TOLEBLID gun safe is shown with a fire background, illustrating its fireproof capability for 1 hour up to 1700°F.



Image: The safe's dimensions (57.1" H, 13.75" D, 13.28" W) and capacity for 7-8 rifles with scopes or shotguns, weighing 112 pounds.

Setup & Installation

The TOLEBLID ProSteel Deluxe Home Safe-2025 is designed for easy installation. It is highly recommended to secure the safe to a floor or wall to prevent theft and tipping.

Unpacking and Placement

1. Carefully remove the safe from its packaging. Retain packaging materials for future transport if needed.
2. Place the safe in its desired location. Consider a discreet area, such as a closet, that is easily accessible to authorized users but out of sight from others.
3. Ensure the surface is level and capable of supporting the safe's weight (112 pounds) plus its contents.

Mounting the Safe

The safe features pre-punched mounting holes on the back and bottom for secure attachment.

1. Open the safe door using the emergency key (refer to Operating Instructions for initial access).
2. Locate the pre-drilled holes on the back panel and/or bottom of the safe.
3. Position the safe against the desired wall or floor. Mark the drilling points through the holes onto the mounting surface.
4. Move the safe away and drill pilot holes at the marked locations using an appropriate drill bit for your wall/floor material.
5. Reposition the safe and align the holes. Insert the provided bolts through the safe's holes and into the drilled holes.
6. Tighten the bolts securely. Do not overtighten.

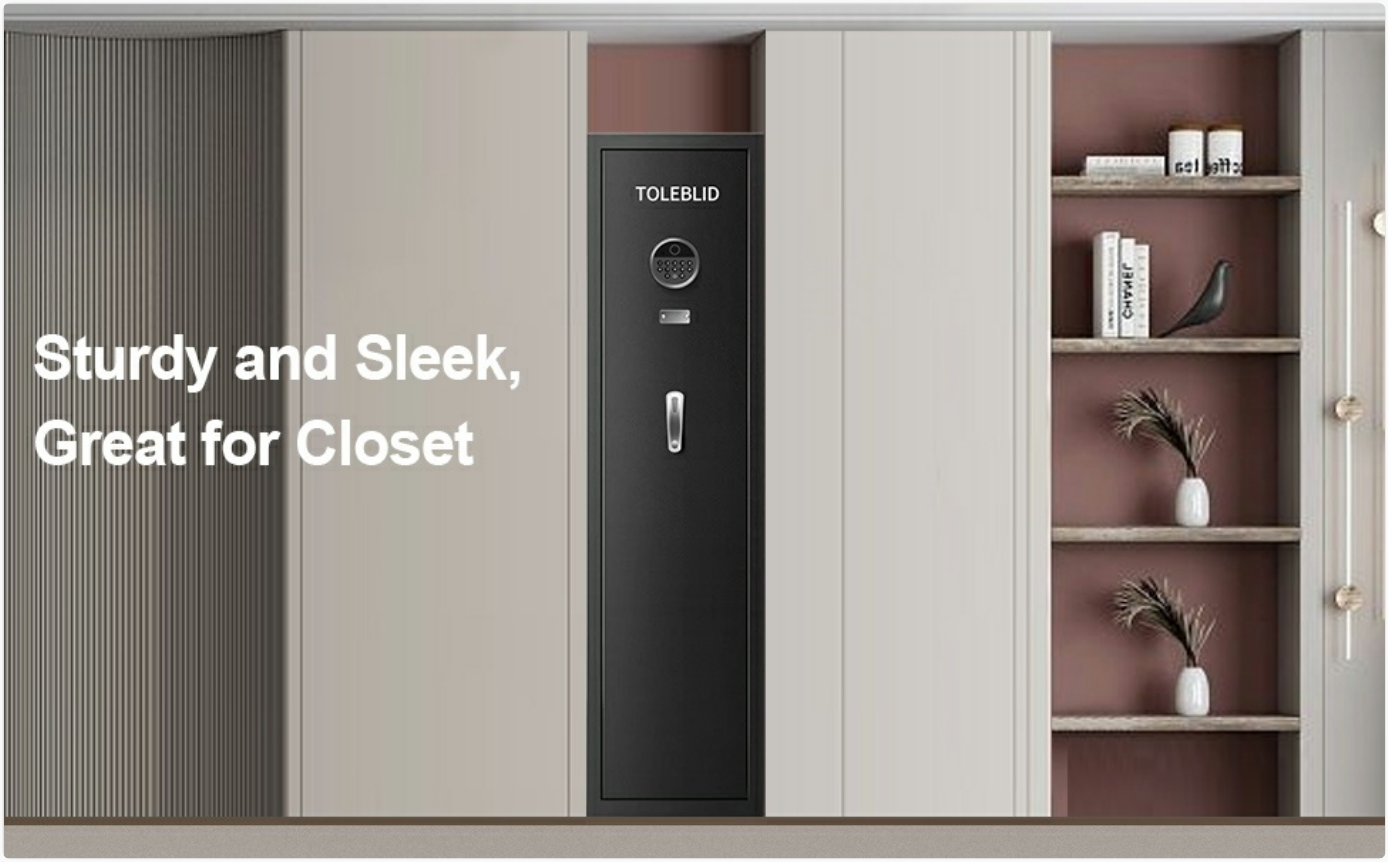


Image: The TOLEBLID safe is shown neatly integrated into a closet space, demonstrating its suitability for discreet home placement.

Operating Instructions

Initial Access (Emergency Key)

1. Locate the emergency keyhole, usually concealed behind the digital keypad or a small cover.
2. Insert the emergency key and turn it.
3. Turn the handle to open the safe door.

Installing Batteries

The electronic lock requires batteries for operation. The battery compartment is typically located on the inside of the safe door or behind the keypad.

1. Open the safe door using the emergency key.
2. Locate the battery compartment.
3. Insert the required number of new batteries (e.g., AA batteries) according to the polarity markings.

4. Close the battery compartment.

Setting Up Passwords and Fingerprints

Refer to the specific instructions provided with your safe for detailed steps on programming your unique password and fingerprints. Generally, this involves pressing a program button inside the safe, entering a new code, or scanning a fingerprint multiple times.

- The safe supports 3-8 digit passwords.
- Up to 100 fingerprints can be registered.



Image: Illustration showing the three quick access methods: fingerprint password, digital password (3-8 digits), and manual keys.



Image: Close-up of the biometric scanner and keypad, highlighting features like storage for up to 100 fingerprints, a larger scanner, and a 99.99% recognition rate.

Unlocking the Safe

- **Biometric (Fingerprint):** Place a registered finger on the scanner. The light will turn green, indicating successful recognition. Turn the handle to open.
- **Keypad (Password):** Enter your programmed digital password followed by the '#' key. The light will turn green. Turn the handle to open.
- **Emergency Key:** As described in "Initial Access."

Your browser does not support the video tag.

Video: An official product video demonstrating the features and operation of the TOLEBLID gun safe, including its locking mechanism and interior layout.

Silent Mode

To enable or disable silent mode, refer to your safe's specific programming instructions. This feature allows for quiet

operation of the keypad and alarm system.

Maintenance

- **Cleaning:** Wipe the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Battery Check:** Replace batteries annually or when the low battery indicator appears. Use the external battery box if the internal batteries are depleted and you need to access the safe.
- **Lock Mechanism:** Do not lubricate the lock mechanism. If the lock feels stiff, contact customer support.
- **Interior:** Keep the interior dry and free of moisture to prevent rust or damage to contents.

Troubleshooting

Problem	Possible Cause	Solution
Safe does not open with fingerprint/password.	Incorrect fingerprint/password entered; low batteries.	Ensure correct input. Replace batteries or use the external battery box. Use emergency key if necessary.
Alarm sounds unexpectedly.	Multiple incorrect entries; safe moved while locked.	Enter correct code/fingerprint to disarm. Avoid moving the safe when locked.
Keypad/biometric scanner is unresponsive.	Dead batteries; connection issue.	Replace batteries. If issue persists, use emergency key and contact customer support.



Image: Visual representation of the safe's smart alarm system, indicating that the safe will beep and lock the keypad after three consecutive wrong code inputs.

Specifications

Feature	Detail
Brand	TOLEBLID
Model Number	ProSteel Deluxe Home Safe-2025
Product Dimensions (D x W x H)	13.75"D x 13.28"W x 57.1"H
Lock Type	Electronic, Key
Material	Alloy Steel

Feature	Detail
Capacity	Up to 8 rifles, 112 pounds
Special Feature	Durability, Fireproof, Biometric Access, Alarm System, Silent Mode
Mounting Type	Wall Mount, Floor Mount
Included Components	Safe, Mounting Bolts, Keys, External Battery Box
UPC	742686771415

Warranty and Support

For warranty information or technical assistance, please refer to the documentation included with your purchase or contact TOLEBLID customer support directly. You can often find support contact details on the manufacturer's official website or through your retailer.

For customer support, please visit the product page on Amazon and look for the 'Customer Support' section.

© 2023 TOLEBLID. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BK6C4DR2

More documents and user manuals: **https://manuals.plus/**