ECONTROLLY WC-L03SE

ECONTROLLY WC-L03SE KTDZ00 Remote Control User Manual

Replacement Remote Control for Toshiba WH-L11SE Air Conditioners

1. Introduction

This manual provides instructions for the ECONTROLLY WC-L03SE KTDZ00 replacement remote control, designed to operate Toshiba WH-L11SE series air conditioners. This remote control requires no programming and is ready for use once batteries are installed.

2. Setup: Battery Installation

The remote control is powered by two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back of the remote control with the battery compartment.

Once batteries are installed, the remote control is ready for immediate use with compatible Toshiba WH-L11SE air conditioners.

3. Operating Instructions

This section describes the primary functions of the buttons on your ECONTROLLY WC-L03SE remote control.



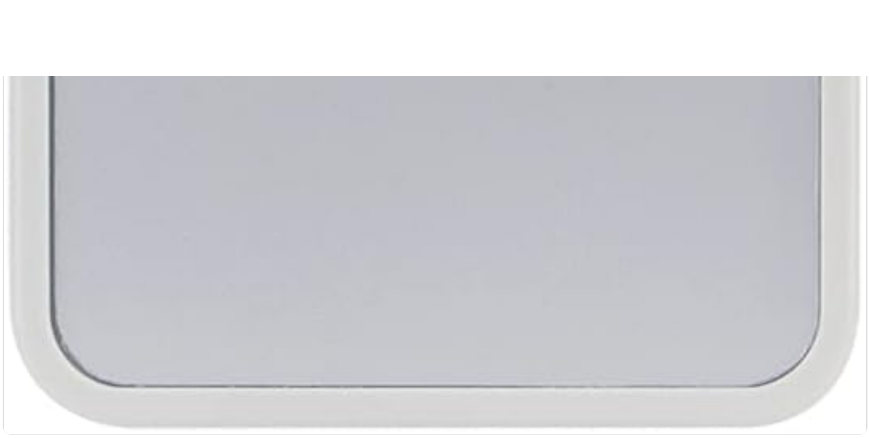


Image: Front view of the remote control, displaying all buttons and the LCD screen.

POWER (Red Button): Turns the air conditioner ON or OFF.

TEMP ▲/▼: Adjusts the temperature setting up or down.

FAN: Cycles through fan speed settings (e.g., Auto, Low, Medium, High).

MODE: Selects the operating mode (e.g., Cool, Heat, Dry, Fan, Auto).

PRESET: Recalls a previously saved preferred setting.

ONE-TOUCH: Activates a pre-programmed comfort setting with a single press.

QUIET: Reduces the air conditioner's operating noise level.

COMFORT SLEEP: Activates a specialized mode for comfortable sleep, often adjusting temperature gradually.

SWING: Controls the vertical swing of the air conditioner's louvers.

FIX: Stops the louver swing at a desired position.

HI-POWER: Activates maximum cooling or heating for rapid temperature change.

ECO: Engages energy-saving mode.

TIMER ON/OFF: Sets the time for the air conditioner to turn ON or OFF automatically.

CLR (Clear): Clears timer settings.

SET: Confirms timer or other settings.

SLEEP: Activates sleep mode, similar to Comfort Sleep.

CHK (Check): Used for system checks or error code display.

FILTER: Indicates when the air filter needs cleaning or resetting the filter indicator.

CLOCK: Sets the current time on the remote's display.



Image: Angled view of the remote control.

4. Maintenance

4.1. Battery Replacement

Replace batteries when the remote's display becomes dim or the air conditioner no longer responds reliably to commands. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

4.2. Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

5. Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Remote control not working.	• Dead or incorrectly installed batteries. • Obstruction between remote and air conditioner. • Remote control is too far from the air conditioner.	• Replace batteries with new AAA alkaline batteries, ensuring correct polarity. • Remove any objects blocking the signal path. • Move closer to the air conditioner and ensure direct line of sight to its receiver.
Air conditioner responds intermittently.	• Low battery power. • Infrared sensor on air conditioner is dirty or blocked.	• Replace batteries. • Clean the infrared sensor on the air conditioner unit.

6. Specifications

Model Number: WC-L03SE

Brand: ECONTROLLY

Compatible Devices: Toshiba WH-L11SE Air Conditioners

Power Source: 2 x AAA Batteries (not included)

Product Dimensions: 7 x 2 x 0.65 inches

Item Weight: 3 ounces

Color: White

Special Feature: Ergonomic design

7. Warranty and Support

This product is a replacement remote control. For specific warranty information, please refer to the terms provided by the seller at the time of purchase. If you encounter any issues or require further assistance, please contact the seller or manufacturer directly through your purchase platform.
For general inquiries or support regarding your Toshiba air conditioner, please refer to the original air conditioner's user manual or contact Toshiba customer service.

© 2023 ECONTROLLY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question