Bewinner

Bewinner Portable MP4/MP3 Player User Manual

Model: Zunatesfxm6ir3wn7409-11

1. Introduction

Thank you for purchasing the Bewinner Portable MP4/MP3 Player. This device is designed to provide high-quality audio and video playback in a compact and durable form factor. This manual will guide you through the features, setup, operation, and maintenance of your new player to ensure an optimal user experience.



Image 1.1: Front view of the Bewinner Portable MP4/MP3 Player.

2. Key Features

- **Lossless Sound Quality:** Supports a wide range of audio formats including MP3, WMA, FLAC, APE, AAC, OGG, and ACELP for superior audio fidelity.
- **Expandable Storage:** Supports memory cards up to 64GB, allowing for extensive music and video libraries. *(Note: Memory card is not included. An original MYMAHDI memory card is recommended for best performance.)*
- **User-Friendly Interface:** Easy navigation with playlists, shuffle playback, and sleep shutdown functions.
- **Long Battery Life:** Provides up to 8 hours of continuous use on a full charge. The battery fully charges in approximately 2 hours.
- **Premium Construction:** Crafted from durable aluminum alloy for enhanced longevity and a sleek design.

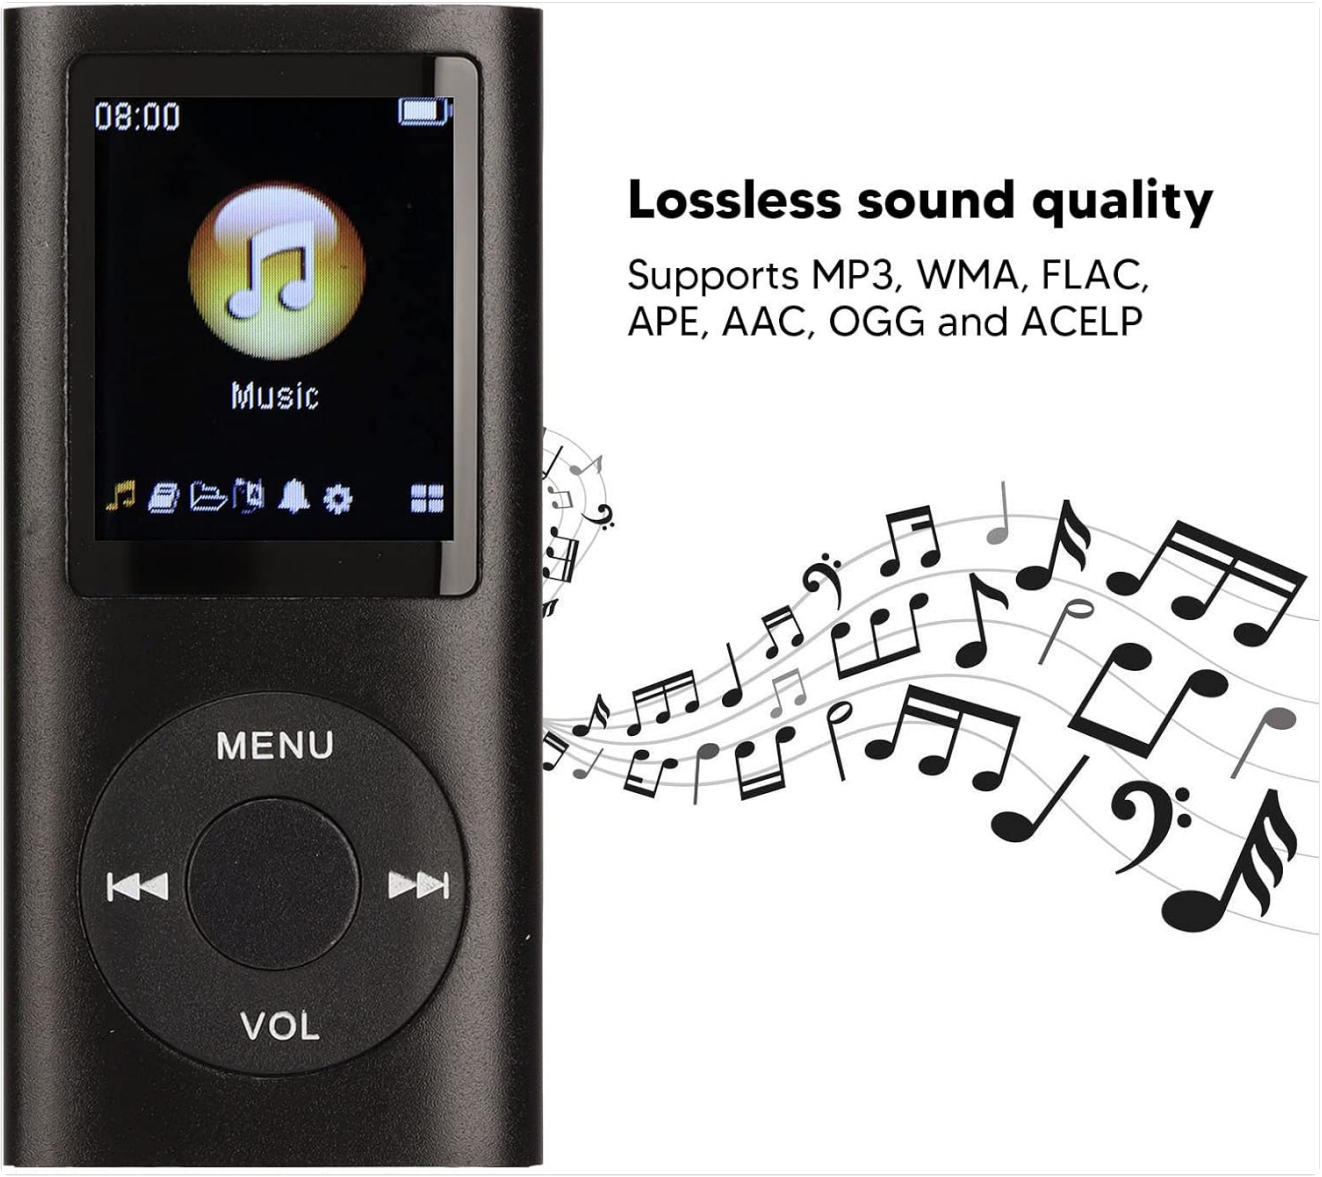


Image 2.1: The player's display showing music playback, emphasizing its lossless sound quality capabilities.



Image 2.2: Visual representation of the player's long-lasting battery, indicating up to 8 hours of use.

3. Package Contents

Please check the package contents upon unboxing to ensure all items are present:

- 1 x Bewinner MP4/MP3 Player
- 1 x USB Charging Cable
- 1 x Earphone



Image 3.1: The Bewinner MP4/MP3 Player shown alongside its included USB charging cable and earphones.

4. Setup

4.1. Charging the Device

Before first use, fully charge the player. Connect the included USB charging cable to the player's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status. A full charge takes approximately 2 hours.

4.2. Inserting a Memory Card (Optional)

The player supports external memory cards up to 64GB for expanded storage. Locate the memory card slot on the side of the device. Gently insert a compatible memory card (e.g., microSD) into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.



Image 4.1: The player's side view, indicating the memory card slot for large memory expansion.

4.3. Connecting to a Computer

To transfer files (music, videos, photos), connect the player to your computer using the USB charging cable. The player will appear as a removable disk drive on your computer. You can then drag and drop files directly into the player's storage or the inserted memory card.



Image 4.2: Close-up view of the player's ports, including the USB charging port and headphone jack.

5. Operating Instructions

5.1. Power On/Off

To power on the device, press and hold the Power button (usually located on the side or top) for a few seconds until the screen lights up. To power off, press and hold the Power button again until the device shuts down.

5.2. Navigation

Use the directional buttons (Up, Down, Left, Right) and the 'MENU' button to navigate through the menus and select options. The 'VOL' button controls the volume.



Image 5.1: Detailed view of the player's control buttons, including MENU, VOL, and navigation keys.

5.3. Playing Music/Videos

1. From the main menu, select 'Music' or 'Video'.
2. Browse through your files or folders.
3. Select a file to begin playback.
4. Use the navigation buttons for playback controls (play/pause, next/previous track, fast forward/rewind).

5.4. Volume Control

Press the 'VOL' button and then use the Up/Down navigation buttons to adjust the volume level.

5.5. Playback Modes

The player supports various playback modes, including:

- **Shuffle:** Plays tracks in a random order.
- **Repeat:** Repeats the current track or the entire playlist.

- **Playlists:** Create and manage custom playlists for your favorite songs.

5.6. Sleep Shutdown

The device features a sleep shutdown function, allowing you to set a timer for the player to automatically turn off. Refer to the device's settings menu for this option.

6. Maintenance

6.1. Cleaning

Wipe the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the screen or casing.

6.2. Storage

Store the player in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Avoid dropping the device or exposing it to strong impacts.

6.3. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. If storing the device for an extended period, charge it to about 50% before storage and recharge every few months.

7. Troubleshooting

7.1. Device Does Not Turn On

- Ensure the battery is charged. Connect the player to a power source and allow it to charge for at least 15 minutes before attempting to power on again.
- If the device is unresponsive, try performing a hard reset (if applicable, refer to specific model instructions or hold the power button for an extended period, e.g., 10-15 seconds).

7.2. Cannot Connect to Computer / Files Not Transferring

- Ensure the USB cable is securely connected to both the player and the computer.
- Try a different USB port on your computer.
- Ensure the player is powered on when connected to the computer.
- Check if your computer's operating system recognizes new hardware. You may need to update USB drivers.

7.3. No Sound / Poor Sound Quality

- Check the volume level on the player.
- Ensure the earphones are properly plugged into the headphone jack.
- Try using a different pair of earphones to rule out faulty earphones.
- Ensure the audio files are not corrupted and are in a supported format.

7.4. Memory Card Not Recognized

- Ensure the memory card is inserted correctly and fully into the slot.
- Try reinserting the memory card.
- Test the memory card in another compatible device to check if it's faulty.

- Ensure the memory card is formatted correctly (e.g., FAT32).

8. Specifications

Feature	Detail
Product Type	MP4 Player
Material	Aluminum Alloy
Built-in Battery	200mAh Lithium Battery
Screen Size	1.8 inches
Memory Storage Capacity	4 GB (Internal), supports up to 64GB via external memory card
Supported Media Types	MP3, WMA, FLAC, APE, AAC, OGG Vorbis, ACELP, AVI, MP4
Connectivity Technology	USB (for charging and data transfer)
Compatible Devices	Personal Computer
Color	Black
Item Model Number	Zunatesfxm6ir3wn7409-11
Package Dimensions	16.7 x 8.3 x 2.2 cm
Item Weight	70 grams

9. Warranty and Support

For warranty information and technical support, please refer to the documentation provided with your purchase or contact Bewinner customer service through the retailer's platform where the product was purchased. Keep your purchase receipt as proof of purchase for warranty claims.

© 2023 Bewinner. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question