Je Joue 81693

Je Joue Juno Flex Vibrator Instruction Manual

Introduction

Thank you for choosing the Je Joue Juno Flex vibrator. This manual provides essential information for the safe and effective use, care, and maintenance of your device. Please read it thoroughly before first use and retain it for future reference.



Image: The Je Joue Juno Flex vibrator in black, illustrating its flexible shaft and control buttons.

Safety Information

Please observe the following safety precautions to prevent injury or damage to the device:

- Read all instructions before using the device.
- This product is intended for adult use only.
- Do not use the device if it appears damaged or if the silicone is torn.
- Consult a healthcare professional before use if you are pregnant, have a pacemaker, or have any medical conditions.
- Use only water-based lubricants with this device. Oil-based lubricants can damage the silicone material.
- Clean the device thoroughly before and after each use as described in the Maintenance section.
- Do not submerge the device in water while it is charging.
- Keep out of reach of children.

What's in the Box

Upon unpacking, please ensure all items are present:

- Je Joue Juno Flex Vibrator
- USB Charging Cable
- Instruction Manual



Image: The Je Joue Juno Flex vibrator, its packaging, USB charging cable, and user manual.

Features Overview

The Je Joue Juno Flex is designed with several key features for an enhanced experience:

- **BodyFlex Technology:** Allows the shaft to bend and adapt to your body.
- **Powerful Motor:** Delivers deep, rumbly vibrations.
- **Multiple Settings:** 5 speeds and 7 patterns for varied sensations.
- **USB Rechargeable:** Convenient and eco-friendly charging.

- **100% Waterproof:** Suitable for use in baths or showers and easy cleaning.
- **Body-Safe Silicone:** Smooth, soft, and hygienic material.

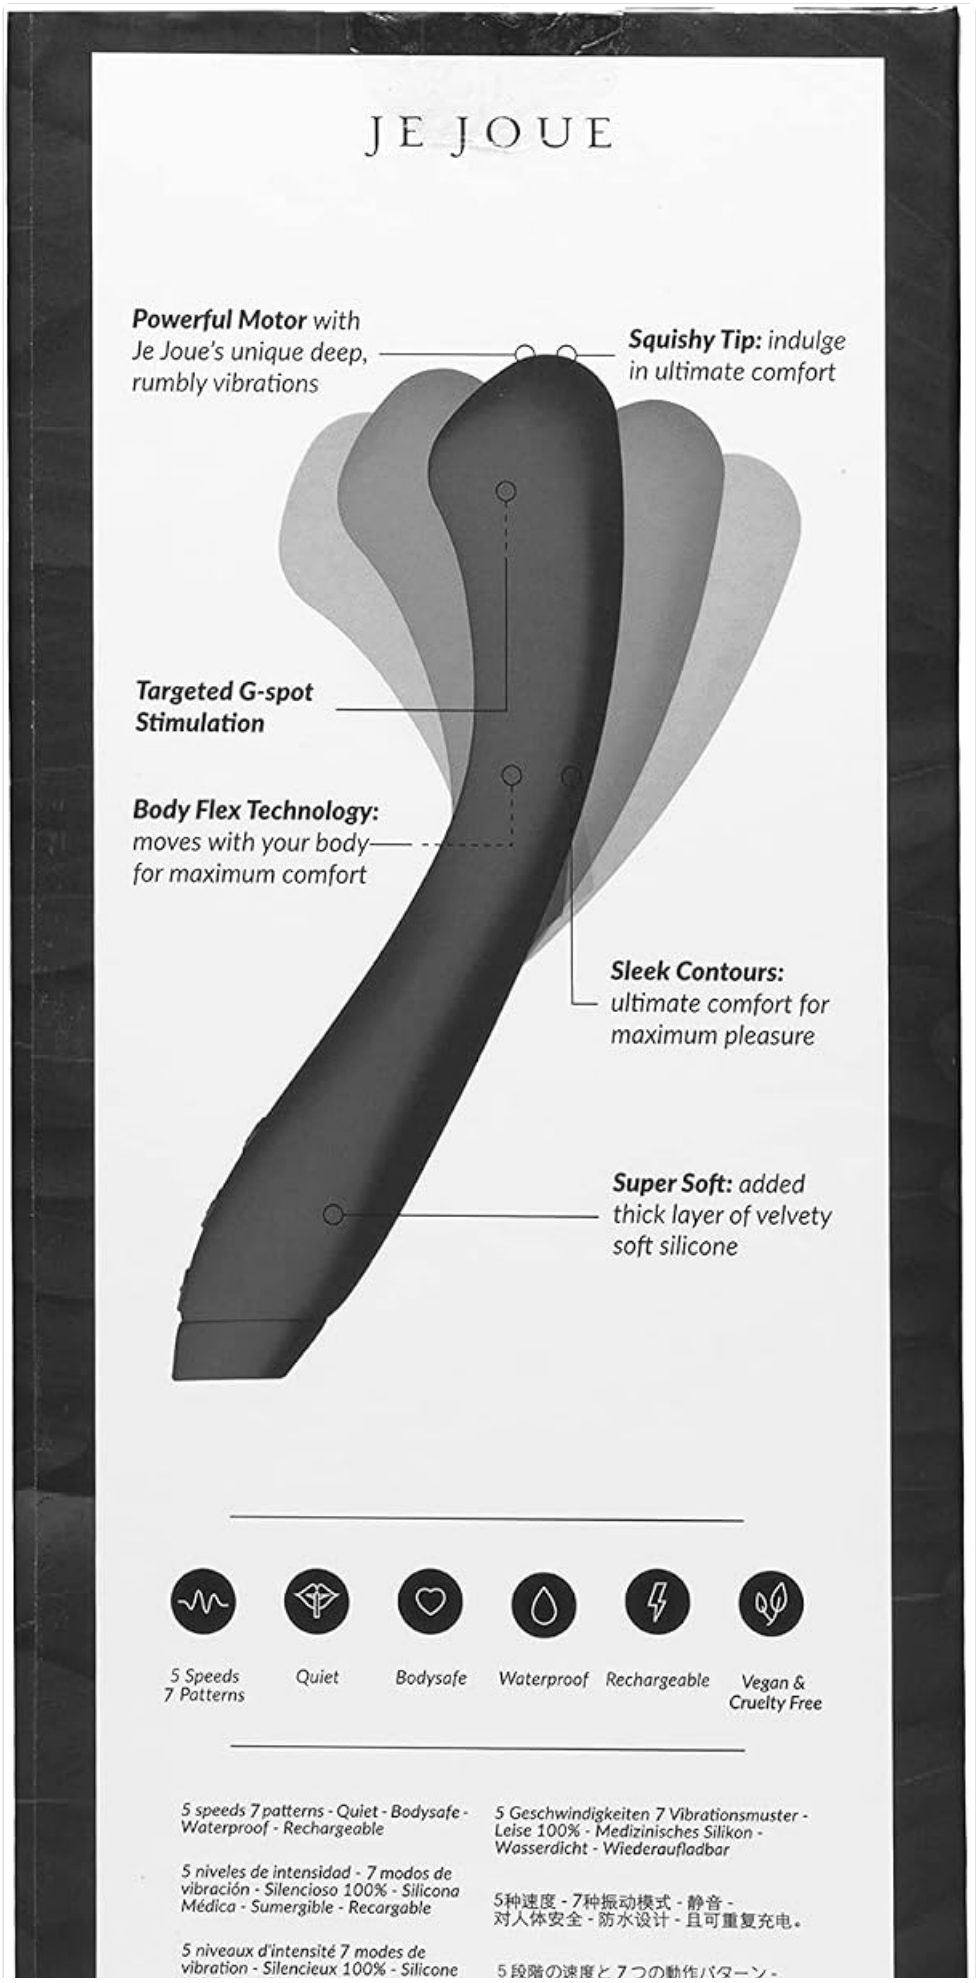




Image: A diagram highlighting the key features of the Juno Flex, including its flexible design, powerful motor, and soft silicone.

Setup and Charging

Initial Charge

Before first use, fully charge your Juno Flex vibrator. This typically takes 2-3 hours.

1. Locate the charging port at the base of the vibrator. It is usually covered by a small, discreet silicone cap.
2. Insert the small end of the USB charging cable into the charging port.
3. Connect the larger end of the USB cable to a USB power source (e.g., computer USB port, wall adapter, or power bank).
4. The indicator light on the device will illuminate or flash to show it is charging. It will typically become solid or turn off when fully charged.
5. Once fully charged, disconnect the cable and ensure the charging port is securely sealed with its silicone cap to maintain waterproofing.

Operating Instructions

The Juno Flex features intuitive controls for easy operation.

Power On/Off

- To turn on: Press and hold the power button (usually marked with a circle or wave symbol) for 2-3 seconds. The device will start on its lowest speed setting.
- To turn off: Press and hold the power button for 2-3 seconds until the vibrations stop.

Adjusting Speeds and Patterns

- **Changing Speed:** While the device is on, press the '+' button to increase the vibration speed. Press the '-' button to decrease the speed. There are 5 distinct speeds.
- **Changing Pattern:** Press the pattern button (often marked with a wave or loop symbol) to cycle through the 7 available vibration patterns.

Maintenance and Care

Proper care ensures the longevity and hygiene of your Je Joue Juno Flex.

Cleaning

1. Always clean the device before and after each use.

2. Wash the silicone surface with warm water and a mild, toy-safe soap or a specialized toy cleaner.
3. Rinse thoroughly with clean water.
4. Pat dry with a lint-free cloth or allow to air dry completely before storing.

Storage

- Store the device in a clean, dry place, away from direct sunlight and extreme temperatures.
- Keep it separate from other toys made of different materials to prevent material degradation.

Troubleshooting

If you encounter any issues with your Juno Flex, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided USB cable.
Vibrations are weak.	Low battery.	Recharge the device.
Device stops working unexpectedly.	Battery depleted or internal error.	Charge the device. If the problem persists after charging, contact customer support.
Buttons are unresponsive.	Temporary software glitch.	Ensure the device is charged. Try turning it off and on again.

Specifications

Feature	Detail
Model Name	Juno Flex
Model Number	81693
Brand	Je Joue
Material	Body-safe Silicone
Power Source	Rechargeable Lithium Ion Battery
Charging	USB Rechargeable
Vibration Settings	5 Speeds, 7 Patterns
Waterproof	100% Waterproof

Disposal Information

This product contains a rechargeable lithium-ion battery. Do not dispose of the device with general household waste. Please follow local regulations for the recycling of electronic devices and batteries to protect the environment.

Contact Support

If you have any questions, require assistance, or experience issues not covered in this manual, please contact Je Joue customer support through their official website or your retailer.

© 2023 Je Joue. All rights reserved.