Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

WANAI B110black

WANAI 5.0 Cubic Feet Deep Chest Freezer Instruction Manual

Model: B110black

Brand: WANAI

1. Safety Instructions

Please read all instructions carefully before using your new chest freezer. Retain this manual for future reference.

- **Proper Placement:** Ensure the freezer is placed on a firm, level surface away from direct sunlight, heat sources (stoves, heaters), and moisture. Allow adequate ventilation space around the unit.
- **Electrical Safety:** Connect the freezer to a grounded electrical outlet. Do not use extension cords or ungrounded adapters.
- **Ventilation:** Do not block any ventilation openings on the appliance.
- **Flammable Materials:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **Child Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Refer to the EnergyGuide label for estimated yearly energy cost and electricity use.



Figure 1: WANAI 5.0 Cubic Feet Deep Chest Freezer

2. Product Overview

Key Features:

- **Large Capacity:** 5.0 cubic feet of compact storage space.
- **Adjustable Thermostat:** 7-grade temperature control. Levels 1-2 for fresh-keeping (32°F to 50°F), Levels 3-7 for deep freezing (32°F to -11.2°F).
- **Energy Saving & Low Noise:** High-efficiency compressor for quick cooling with minimal noise.
- **Modern Design:** Features adjustable leveling legs for stability and a top-open door that remains open from 45 to 90-degree angles for easy access.
- **Removable Storage Basket:** Includes a hanging movable freezer organizer for convenient storage of smaller items.

Components:

- Chest Freezer Unit
- Removable Storage Basket
- Side Handle (integrated)
- Power Cord



Figure 2: Product Dimensions (17.51"D x 26.18"W x 30.31"H)



Figure 3: Multifunction Features

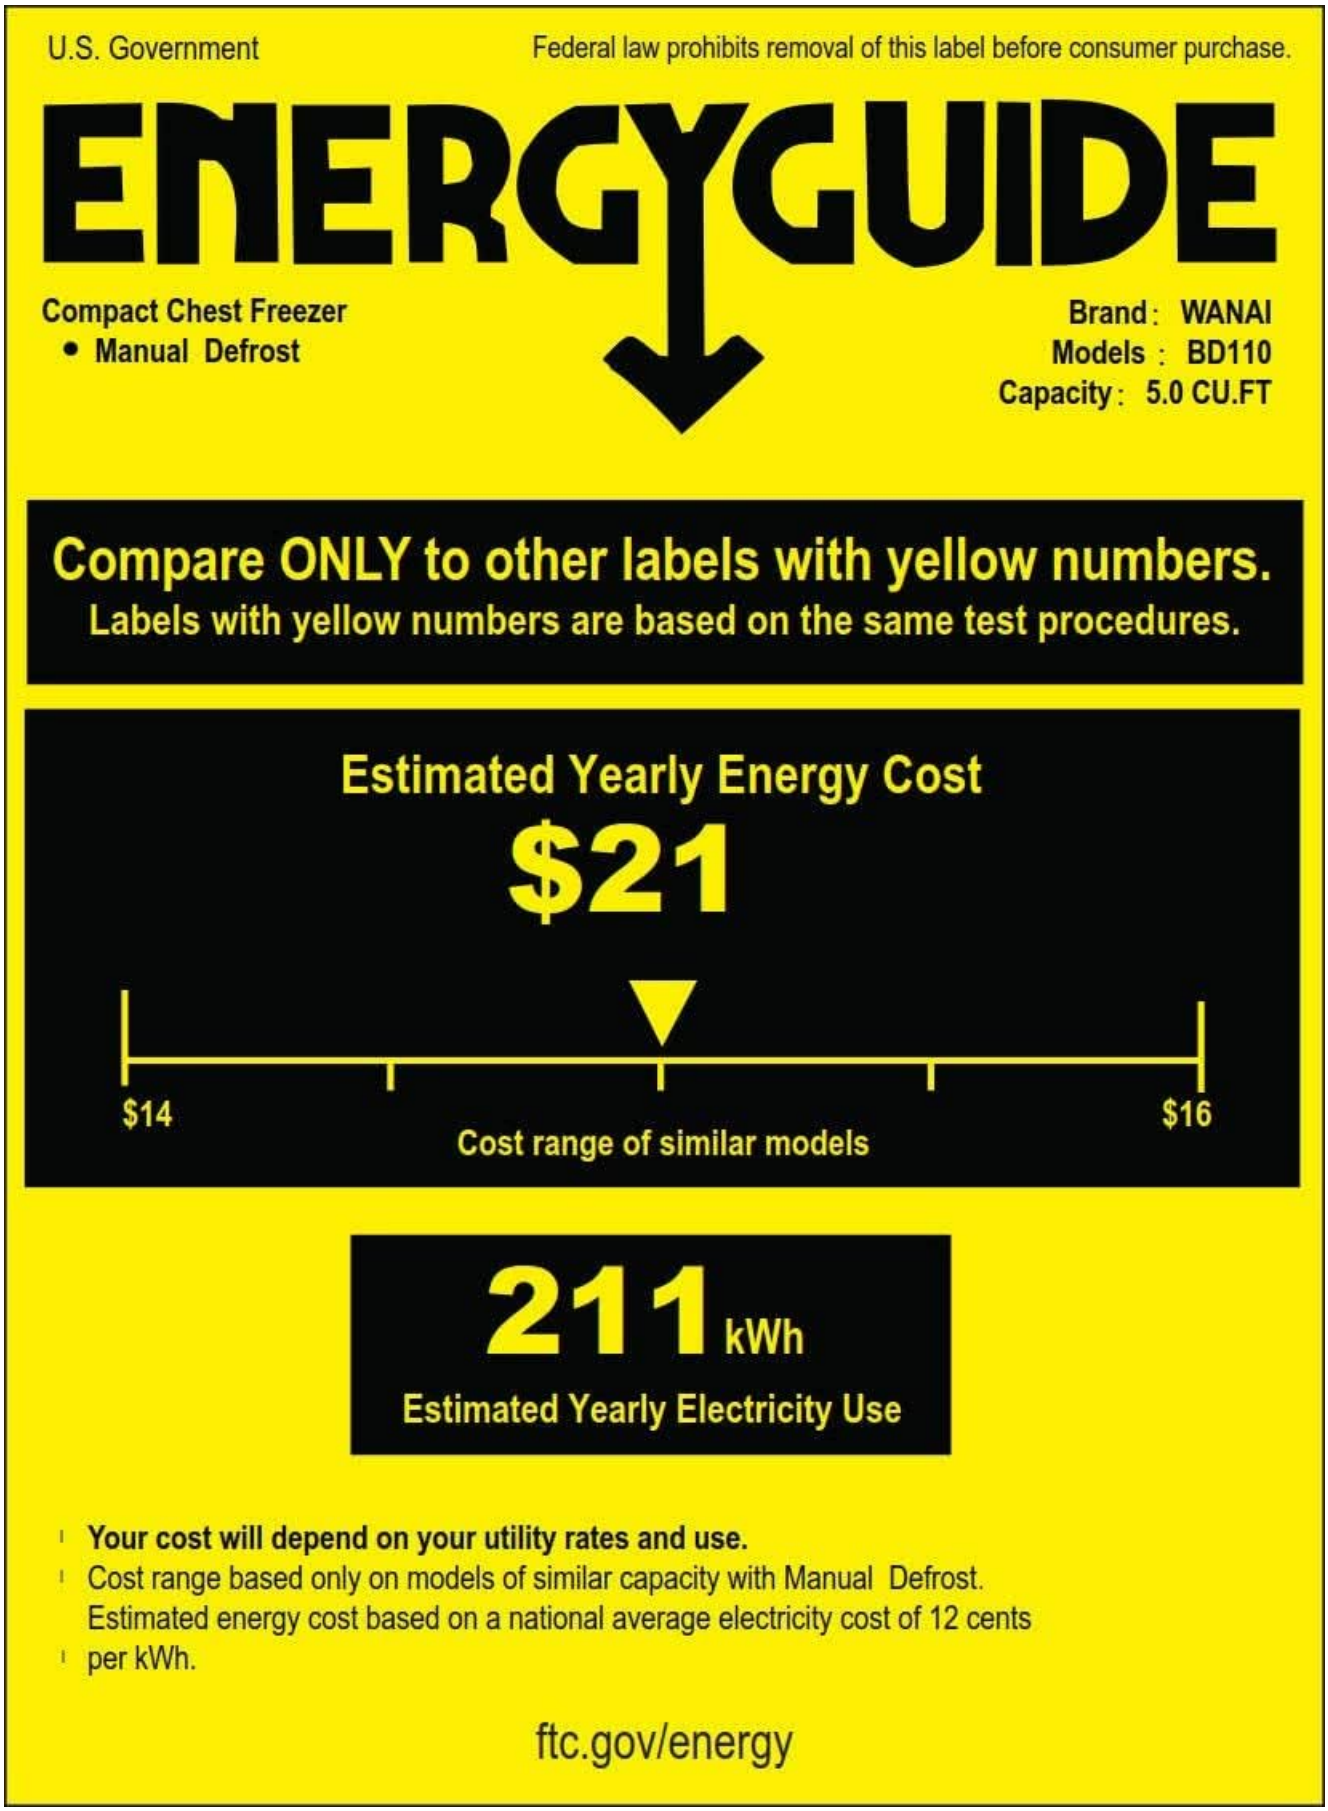


Figure 4: Removable Storage Basket



Figure 5: Door Opening Angle



Figure 6: Embedded Handle



Figure 7: Quiet Operation

3. Setup

Unpacking:

- Carefully remove the freezer from its packaging.
- Remove all packing materials, including any tape or protective film.
- Inspect the freezer for any shipping damage. If damaged, do not plug it in and contact customer service.

Placement:

- Place the freezer on a flat, stable surface that can support its weight when full.
- Ensure there is adequate space around the freezer for proper ventilation (at least 4 inches from walls).
- Avoid placing the freezer near heat sources (e.g., oven, radiator) or in direct sunlight.

Initial Power-On:

After placing the freezer in its desired location, allow it to stand upright for at least 24 hours before plugging it into a power outlet. This allows the refrigerant to settle, preventing potential damage to the cooling system.

Video 1: Overview of the 5.0 Cubic Feet Deep Chest Freezer, demonstrating its size and features. This video is provided by the seller.

4. Operating Instructions

Temperature Control:

The freezer features an adjustable 7-grade temperature control dial located on the front of the unit. Rotate the dial to select your desired temperature setting:

- **Levels 1-2:** Ideal for fresh-keeping, maintaining temperatures from 32°F (0°C) to 50°F (10°C).
- **Levels 3-7:** For deep freezing, maintaining temperatures from 32°F (0°C) down to -11.2°F (-24°C). Higher numbers indicate colder settings.



Figure 8: Temperature Control Dial

Usage Tips:

- **Loading Food:** Do not overload the freezer. Allow space for air circulation around items for efficient freezing.
- **Storage Basket:** Use the removable storage basket for smaller, frequently accessed items to prevent them from getting lost at the bottom of the freezer.
- **Minimize Door Openings:** To maintain optimal temperature and energy efficiency, avoid opening the freezer

door frequently or for extended periods.

5. Maintenance

Cleaning:

- **Interior:** Clean the interior of the freezer regularly with a solution of mild detergent and warm water. Rinse thoroughly and dry completely before closing the lid.
- **Exterior:** Wipe the exterior surfaces with a soft cloth and mild detergent. Avoid abrasive cleaners or solvents.

Defrosting:

This chest freezer requires manual defrosting. Defrost when the frost layer reaches about 1/4 inch (6 mm) thick.

1. Unplug the freezer from the power outlet.
2. Remove all food items and store them in another freezer or cooler.
3. Open the drain outlet located at the bottom of the freezer to allow water to escape. Place a shallow pan or towel underneath to collect the water.
4. Allow the frost to melt naturally. You can speed up the process by placing bowls of hot water inside the freezer (do not use sharp objects to chip away ice).
5. Once defrosted, clean and dry the interior thoroughly.
6. Close the drain outlet, plug the freezer back in, and return food items once the temperature has stabilized.

6. Troubleshooting

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Freezer does not operate	No power to the unit; Power cord unplugged; Circuit breaker tripped.	Check power supply; Ensure cord is securely plugged in; Reset circuit breaker.
Temperature is not cold enough	Temperature control set too warm; Door opened too frequently; Excessive frost build-up.	Adjust thermostat to a colder setting; Minimize door openings; Defrost the freezer.
Excessive noise	Freezer is not level; Objects vibrating inside.	Adjust leveling legs; Ensure items inside are stable and not touching walls.
Door does not close properly	Gasket is dirty or damaged; Freezer is not level; Food packages blocking the door.	Clean or replace gasket; Adjust leveling legs; Rearrange food items.

7. Specifications

- **Brand Name:** WANAI
- **Model Info:** B110black
- **Item Weight:** 45 pounds
- **Product Dimensions:** 17.5 x 26.2 x 30.3 inches
- **Capacity:** 5 Cubic Feet
- **Installation Type:** Freestanding
- **Voltage:** 120 Volts
- **Wattage:** 70 watts
- **Door Hinges:** Top
- **Door Material Type:** Stainless Steel
- **Shelves:** 1 (removable basket)
- **Included Components:** Basket, Side Handle

8. Warranty and Support

WANAI is committed to providing excellent customer service. Our 24-hour online customer service is available to resolve any post-sales issues or product-related questions you may have.

Please feel free to contact us for assistance. We are dedicated to providing you with a satisfactory solution.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BKPL5C6B

More documents and user manuals: **https://manuals.plus/**