Vpcok Direct 005529

Vpcok Direct Electric Milk Frother Model 005529 User Manual

Your guide to perfect milk frothing and heating.

1. Introduction

Thank you for choosing the Vpcok Direct Electric Milk Frother Model 005529. This appliance is designed to effortlessly create rich, creamy froth for your coffee, lattes, cappuccinos, and other milk-based beverages, as well as heat milk. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image 1.1: The Vpcok Direct Electric Milk Frother 005529, a sleek black cylindrical device with a power button, shown next to a cup of frothed coffee.

2. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before use.
- Do not immerse the base unit in water or other liquids.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- Avoid contact with moving parts.

- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use only with cold milk.
- Do not overfill the milk frother beyond the maximum fill lines.
- Ensure the whisk is correctly inserted before operation.

3. Product Overview and Specifications

3.1 Components

- Frother Jug (with non-stick interior)
- Power Base
- Lid
- Frothing Whisk

3.2 Specifications

Brand	Vpcok Direct
Model Number	005529
Power	800 W
Heating Capacity (Max)	250 ml
Frothing Capacity (Max)	110 ml
Frothing Capacity (Min)	60 ml
Dimensions (L x W x H)	13.3 x 13.3 x 12.2 cm
Weight	810 g
Materials	304 Stainless Steel, High-Temperature-Resistant PP, Food-Grade PC



Image 3.1: Diagram illustrating the safety materials used in the Vpcok Direct Milk Frother, including high-temperature resistant PP, 304 stainless steel, food-grade PC, and an anti-spill silicone ring.

4. Setup

1. **Unpack:** Carefully remove all packaging materials and inspect the frother for any damage.
2. **Initial Cleaning:** Before first use, clean the interior of the frother jug and the whisk with warm soapy water. Rinse thoroughly and dry. Wipe the exterior of the frother jug and the power base with a damp cloth. Do not immerse the power base in water.
3. **Placement:** Place the power base on a dry, flat, stable, and heat-resistant surface, away from water sources.
4. **Connect Power:** Plug the power cord into a suitable electrical outlet.

5. Operating Instructions

The Vpcok Direct Milk Frother features a single button for three different functions: Hot Frothing, Heating Milk, and Cold Frothing.



Image 5.1: Visual guide to the single-button operation of the Vpcok Direct Milk Frother, showing how short presses and long presses activate different modes indicated by LED light colors.

5.1 Fill Level Guidelines

Always observe the internal fill lines to prevent overflow or insufficient frothing/heating.

- **MAX-250ml:** Maximum capacity for heating milk (without frothing).
- **MAX-110ml:** Maximum capacity for milk frothing.
- **MIN-60ml:** Minimum capacity for milk frothing.

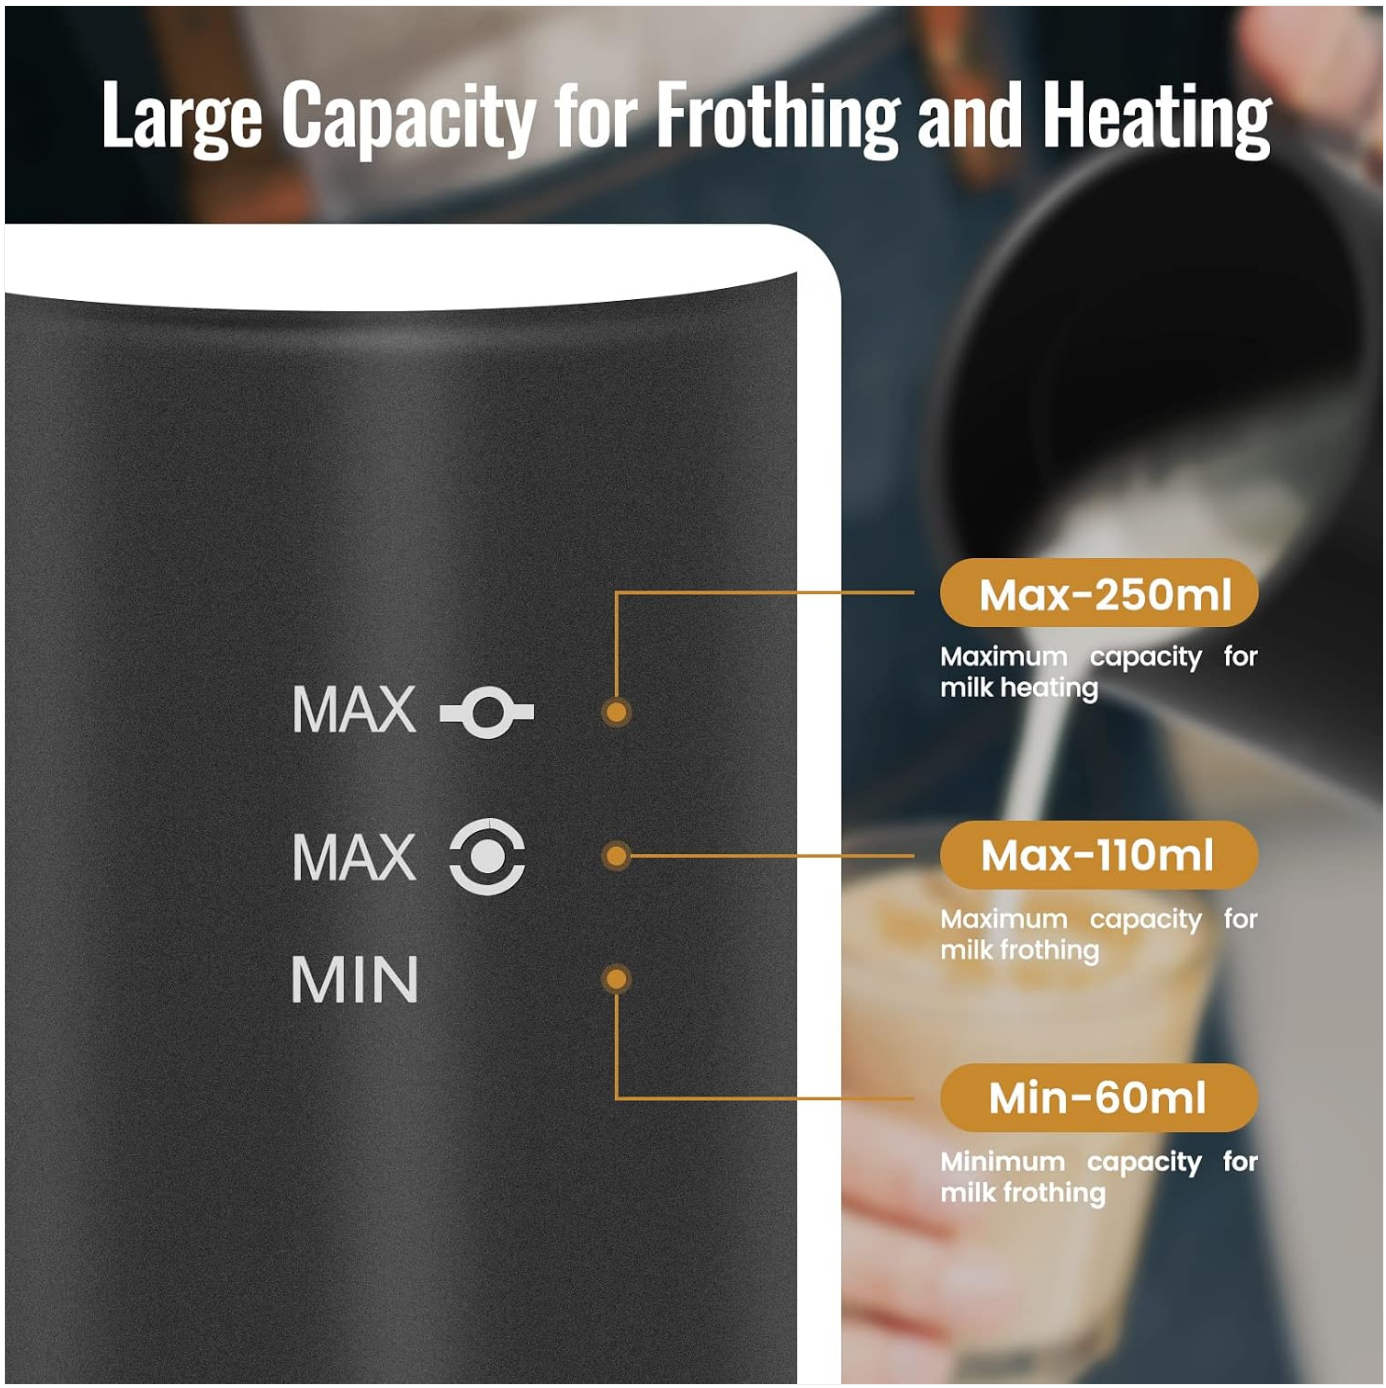


Image 5.2: Close-up view of the internal capacity markings on the Vpcok Direct Milk Frother, indicating maximum levels for heating (250ml) and frothing (110ml), and a minimum level for frothing (60ml).

5.2 Hot Frothing Mode

1. Ensure the frothing whisk is correctly inserted at the bottom of the jug.
2. Pour cold milk into the frother jug, ensuring it is between the MIN (60ml) and MAX (110ml) frothing lines.
3. Place the lid on the frother.
4. Short press the power button once. The indicator light will flash red slowly, indicating hot frothing is in progress.
5. The frother will automatically stop when the process is complete.

5.3 Heating Milk Mode (No Froth)

1. Remove the frothing whisk from the jug if you do not desire froth.
2. Pour cold milk into the frother jug, ensuring it is below the MAX (250ml) heating line.
3. Place the lid on the frother.

4. Short press the power button twice. The indicator light will flash purple slowly, indicating milk heating is in progress.
5. The frother will automatically stop when the process is complete.

5.4 Cold Frothing Mode

1. Ensure the frothing whisk is correctly inserted at the bottom of the jug.
2. Pour cold milk into the frother jug, ensuring it is between the MIN (60ml) and MAX (110ml) frothing lines.
3. Place the lid on the frother.
4. Long press the power button for 2 seconds. The indicator light will flash blue slowly, indicating cold frothing is in progress.
5. The frother will automatically stop when the process is complete.

6. Cleaning and Maintenance

Regular cleaning ensures optimal performance and extends the life of your milk frother. The non-stick interior makes cleaning easy.



Image 6.1: An image demonstrating the easy cleaning process of the Vpcok Direct Milk Frother, showing water being poured into the non-stick interior for rinsing.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Cool Down:** Allow the frother to cool down completely after use.
3. **Remove Whisk:** Carefully remove the frothing whisk from the jug.
4. **Clean Jug Interior:** Rinse the interior of the frother jug with warm water immediately after use. If milk residue is present, use a soft sponge or cloth with a small amount of mild dish soap. The non-stick coating allows for quick and easy cleaning. Avoid abrasive cleaners or scouring pads that could damage the non-stick surface.
5. **Clean Whisk:** Wash the whisk with warm soapy water and rinse thoroughly.
6. **Clean Lid:** Wash the lid with warm soapy water and rinse.
7. **Clean Exterior:** Wipe the exterior of the frother jug and the power base with a damp cloth. Do not immerse the power base in water.
8. **Dry:** Ensure all parts are completely dry before storing or next use.

7. Troubleshooting

If you encounter issues with your Vpcok Direct Milk Frother, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Frother does not start.	Not plugged in; power outage; frother not correctly placed on base.	Ensure the frother is securely plugged into a working outlet. Check if the frother jug is correctly seated on the power base.
Milk is not frothing or froth is poor.	Incorrect milk type; milk level too high/low; whisk not inserted; milk too warm.	Use cold, fresh milk (full-fat milk generally froths best). Ensure milk is between MIN and MAX frothing lines (60-110ml). Verify the frothing whisk is properly installed. Ensure milk is cold before starting.
Milk is not heating.	Incorrect mode selected; milk level too high.	Ensure "Heating Milk Mode" (purple light) is selected by pressing the button twice. Do not exceed the MAX 250ml heating line.
Milk overflows.	Overfilled milk.	Do not exceed the MAX fill lines for frothing (110ml) or heating (250ml).

8. Warranty and Support

The Vpcok Direct Electric Milk Frother Model 005529 comes with a standard manufacturer's warranty. For detailed warranty information, product support, or to report any issues, please refer to the contact information provided with your purchase or visit the official Vpcok Direct website. Please have your model number (005529) and purchase date ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question