Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Voltas WTT85DGRG

Voltas Beko 8.5 kg Semi Automatic Top Load Washing Machine User Manual

Model: WTT85DGRG

1. Introduction

This manual provides comprehensive instructions for the safe and efficient operation of your Voltas Beko 8.5 kg Semi Automatic Top Load Washing Machine, model WTT85DGRG. Please read this manual thoroughly before using the appliance and retain it for future reference. Proper use and maintenance will ensure the longevity and optimal performance of your washing machine.

2. Safety Instructions

Always adhere to the following safety guidelines to prevent injury or damage to the appliance:

- Ensure the washing machine is installed on a stable, level surface to prevent vibration and noise.
- Do not operate the machine with a damaged power cord or plug. Contact authorized service personnel for repairs.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances such as gasoline, kerosene, or paint thinner.
- Always unplug the machine from the power outlet before cleaning, maintenance, or if it will be unused for an extended period.
- Do not immerse the electrical parts of the machine in water.
- Ensure the water inlet hose is securely connected to prevent leaks.

3. Product Overview

Familiarize yourself with the main components of your washing machine.



Figure 3.1: Top view of the washing machine, showing the wash and spin tub lids with a decorative floral pattern.



Figure 3.2: Side profile of the washing machine, highlighting its compact design.



Figure 3.3: Rear view of the washing machine, showing the power cord and water drainage hose connections.



Figure 3.4: Front view of the washing machine, displaying the control panel and the main body.

4. Installation Guide

Follow these steps for proper installation of your washing machine:

1. **Unpacking:** Carefully remove all packaging materials. Check for any damage during transit.
2. **Placement:** Place the machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and operation. Avoid direct sunlight or damp environments.
3. **Leveling:** Adjust the leveling feet at the bottom of the machine to ensure it is perfectly stable and does not wobble.
4. **Water Inlet Connection:** Connect the provided inlet hose to the water tap and the inlet valve on the washing machine. Ensure connections are tight to prevent leaks.
5. **Drainage:** Position the drain hose to allow for proper water discharge. Ensure the hose is not kinked or blocked.
6. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the machine.

5. Operating Instructions

Your Voltas Beko semi-automatic washing machine offers various settings for different fabric types and soil levels.

5.1 Control Panel Overview

The control panel typically features dials for wash timer, wash program selection, and spin timer.



Figure 5.1: The control panel features push buttons and dials for selecting wash cycles and settings.

5.2 Washing Procedure

1. **Load Laundry:** Open the wash tub lid and place clothes loosely inside. Do not overload the tub.
2. **Add Detergent:** Add the appropriate amount of detergent to the wash tub.
3. **Fill Water:** Fill the wash tub with water to the desired level, considering the load size.
4. **Select Wash Program:** Turn the 'Wash Program' dial to select a suitable cycle (e.g., Normal, Heavy Duty, Delicates, Eco, Bulky).
5. **Set Wash Timer:** Turn the 'Wash Timer' dial to the desired washing duration.
6. **Start Washing:** The machine will begin the wash cycle.
7. **Drain Water:** Once the wash cycle is complete, turn the 'Drain' knob or select the drain function to empty the water.
8. **Rinse:** For rinsing, you can either perform a deep rinse by refilling the tub with fresh water and running a short wash cycle, or use the shower rinse function if available.
9. **Spin Drying:** Transfer the washed clothes to the spin tub. Distribute them evenly. Close the spin tub lid securely. Set the 'Spin Timer' to the desired duration. The machine features a 1300 RPM spin speed for efficient water extraction.



Figure 5.2: The 1300 RPM spin speed effectively extracts more water from clothes, leading to shorter drying times and energy savings. This is ideal for heavy fabrics like towels and bedding.

6. Maintenance and Care

Regular maintenance ensures your washing machine operates efficiently and extends its lifespan.

- **Cleaning the Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Lint Filter:** Regularly clean the lint filter located inside the wash tub. Remove accumulated lint to maintain washing efficiency.
- **Cleaning the Wash Tub:** Periodically clean the wash tub by running an empty cycle with hot water and a washing machine cleaner or vinegar.
- **Drain Hose:** Ensure the drain hose is free from blockages.
- **Storage:** If storing the machine for an extended period, drain all water, clean the tubs, and leave the lids slightly ajar to prevent mildew.

7. Troubleshooting

Refer to this section for solutions to common issues. If the problem persists, contact customer service.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Power outage; Lid not closed properly	Check power connection; Restore power; Ensure lids are fully closed

Problem	Possible Cause	Solution
Water does not fill	Water tap closed; Water supply cut off; Inlet hose kinked	Open water tap; Check water supply; Straighten inlet hose
Water does not drain	Drain hose kinked or blocked; Drain pump filter clogged	Clear drain hose; Clean drain pump filter
Excessive vibration/noise	Machine not level; Overloaded tub; Uneven load distribution	Adjust leveling feet; Reduce load size; Redistribute clothes evenly
Spin tub not working	Spin tub lid not closed; Overloaded spin tub; Safety switch engaged	Close spin tub lid securely; Reduce load; Check for obstructions

8. Technical Specifications

Key specifications for the Voltas Beko WTT85DGRG washing machine:

- **Model:** WTT85DGRG
- **Type:** Semi Automatic Top Load
- **Capacity:** 8.5 kg
- **Product Dimensions (D x W x H):** 48D x 83W x 100.5H Centimeters
- **Max Rotational Speed:** 1300 RPM
- **Operation Mode:** Semi Automatic
- **Controls Type:** Push Button, Dial
- **Cycle Options:** Normal, Heavy Duty, Delicates, Eco, Bulky
- **Special Feature:** High Efficiency
- **Material:** Plastic/Enamel-coated Steel
- **Included Components:** Inlet Hose, Manual

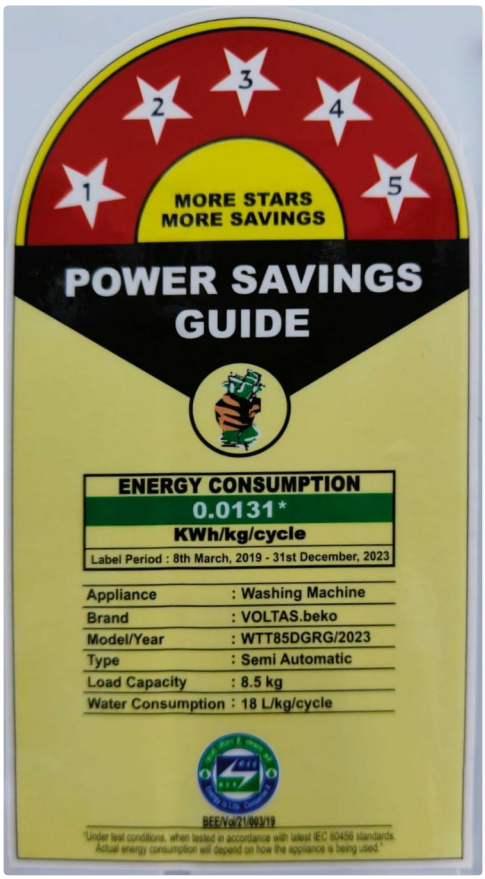


Figure 8.1: Power Savings Guide indicating energy consumption and other details for the WTT85DGRG model.

9. Warranty and Support

For warranty information, please refer to the warranty card included with your purchase or contact Voltas Beko customer service. Keep your purchase receipt as proof of purchase for warranty claims.

For technical assistance, service requests, or to purchase genuine spare parts, please contact Voltas Beko customer support through their official website or designated service centers. Provide your model number (WTT85DGRG) and serial number when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BKWNVDBB

More documents and user manuals: **https://manuals.plus/**