FULLJA 32860b33-db69-45f0-9243-ca87518c7dfd

FULLJA 11-inch 2K WiFi Digital Picture Frame User Manual

Model: 32860b33-db69-45f0-9243-ca87518c7dfd

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your FULLJA 11-inch 2K WiFi Digital Picture Frame. This device allows you to display photos and videos with its ultra-HD IPS touch screen, share media wirelessly via an app or email, and utilize features such as a motion sensor and 16GB of internal storage.

SETUP

1. Unpacking and Initial Power On

Carefully remove the digital picture frame from its packaging. Connect the power adapter to the frame and then to a power outlet. The frame should power on automatically. If it does not, press the power button located on the back or side of the frame.

2. Wi-Fi Connection

1. On the frame's touch screen, navigate to the 'Settings' menu.

2. Select 'Wi-Fi' and choose your preferred network from the list.

3. Enter your Wi-Fi password and confirm the connection. Ensure a stable internet connection for optimal performance.

3. App Installation and Frame Pairing

1. Download the free 'VPhoto' app from your smartphone's app store (compatible with Android and iOS).

2. Open the VPhoto app and create an account or log in.

3. On your digital picture frame, locate the 'Bind Code' or 'Connection Code' in the settings. This code is essential for pairing your frame with the app.

4. In the VPhoto app, follow the instructions to add a new device and enter the bind code displayed on your frame. This will link your smartphone to the digital picture frame, enabling remote photo and video sharing.

Note: If you encounter issues obtaining a connection code or pairing, ensure your frame has a stable Wi-Fi connection and try restarting both the frame and the app. If the issue persists, refer to the Troubleshooting

The FULLJA digital picture frame showcasing a family image, alongside a smartphone demonstrating the VPhoto application for easy photo sharing.

OPERATING INSTRUCTIONS

1. Sharing Photos and Videos

Once your frame is connected to Wi-Fi and paired with the VPhoto app, you can share media instantly.

- **Via VPhoto App:** Open the VPhoto app on your smartphone, select the photos or videos you wish to share, and send them directly to your connected frame. You can also invite family and friends to share their media to your frame.

- **Via Email:** The frame has a unique email address. You can send photos and short videos directly to this email address, and they will appear on your frame. Consult your frame's settings for its specific email address.

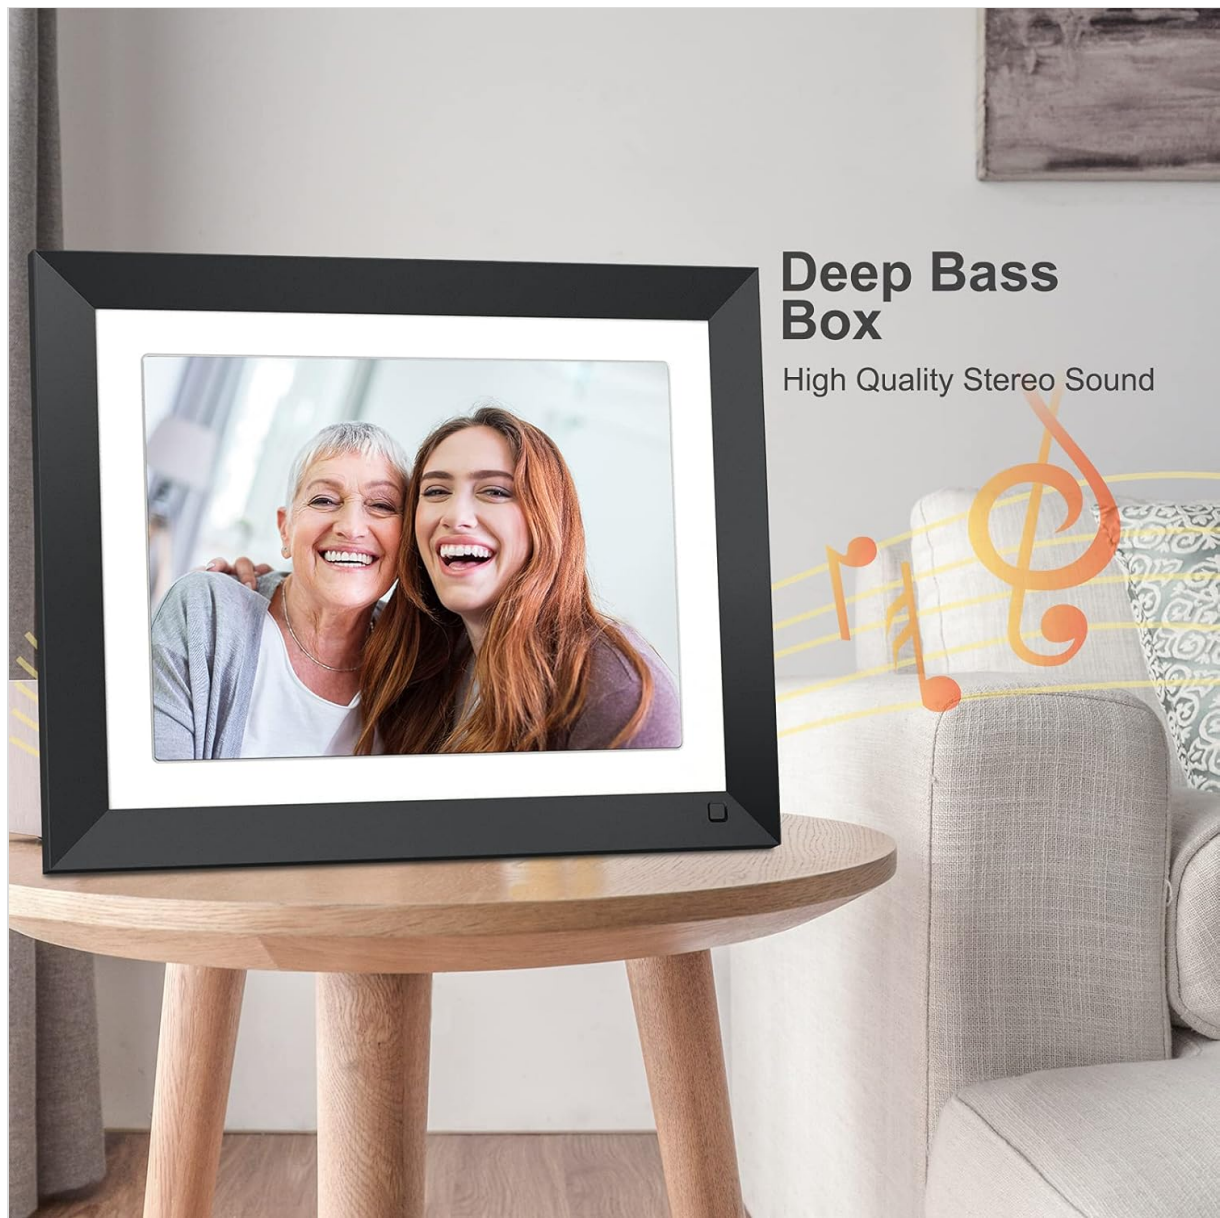Share Photos&Videos
Via App or Email

This image demonstrates the ease of sharing photos and videos to the FULLJA digital frame using the VPhoto app or email, connecting loved ones instantly.

2. Display Modes and Media Playback

The frame supports various display options for your media.

- **Slideshow:** Photos can be displayed in a continuous slideshow. You can customize transition effects and display intervals in the settings.
- **Video Playback:** The frame supports FHD1080P video playback. Videos will play automatically or can be selected manually.
- **Background Music:** You can set background music to play during photo slideshows. The frame features a deep bass box for high-quality stereo sound.

The frame is equipped with a deep bass box for high-quality stereo sound, enhancing the experience of video playback or background music.

3. Storage Management

The frame comes with 16GB of internal storage, capable of holding over 40,000 photos. Additional storage options are available:

- **TF Card Slot:** Insert a TF (MicroSD) card (up to 32GB) into the designated slot for expanded storage.
- **USB Port:** Connect a USB drive to the USB port to view or transfer media.

4. Motion Sensor Functionality

The integrated motion sensor helps conserve energy. When enabled, the frame will automatically turn on its display when motion is detected nearby and turn off after a period of inactivity. You can adjust the motion sensor settings in the system menu.

Motion Sensor
More Energy-Saving

The frame features a motion sensor that activates the display when movement is detected, contributing to energy efficiency.

5. Touch Screen Operation

The 11-inch 2K IPS display is a touch screen, allowing for intuitive navigation through menus, photos, and settings. Tap to select, swipe to scroll, and pinch to zoom (if supported by the current view).

11" 2K IPS Touch Screen
2176*1600 FHD Display

Experience vibrant visuals on the 11-inch 2K IPS touch screen with a resolution of 2176x1600, offering clear and detailed image display.

6. Additional Features

The frame includes several utility features:

- **Alarm Clock:** Set alarms directly from the frame's interface.
- **Calendar:** View the current date and manage calendar functions.
- **Weather Display:** Receive local weather updates when connected to Wi-Fi.

The digital frame integrates multiple functions including Wi-Fi connectivity, photo and video display, alarm, music playback, weather updates, and a calendar.

MAINTENANCE

Cleaning and Care

- To clean the screen, gently wipe it with a soft, lint-free cloth. Avoid using abrasive cleaners or chemical sprays directly on the screen.
- For the frame's exterior, use a dry, soft cloth.
- Ensure the frame is unplugged before cleaning.
- Avoid exposing the frame to extreme temperatures, direct sunlight for prolonged periods, or high humidity.

TROUBLESHOOTING

Common Issues and Solutions

- **Frame not powering on:** Ensure the power adapter is securely connected to both the frame and a working power outlet. Try a different outlet if necessary. If the issue persists, perform a hard reset by

unplugging the frame, waiting 10 seconds, and plugging it back in.

- **Wi-Fi connection issues / Frame not connecting to app:**
    - Verify your Wi-Fi network is active and the password is correct.
    - Ensure the frame is within range of your Wi-Fi router.
    - Restart your Wi-Fi router and the digital picture frame.
    - If the Wi-Fi goes dormant after sleep mode, try toggling Wi-Fi off and on in the frame's settings. If this doesn't work, a full power cycle (unplugging and replugging) may be necessary.
    - For app connection issues, ensure you have the correct bind code from the frame's settings and that the VPhoto app is updated to the latest version.

- **Screen freezing or black screen:** If the screen becomes unresponsive or displays a black screen, try restarting the frame by holding down the power button until it shuts off, then power it back on. If a soft restart fails, perform a hard reset by unplugging the power adapter for a few seconds and then reconnecting it.

- **Photos/Videos not displaying correctly:** Ensure the media files are in supported formats. The clarity of displayed images and videos is dependent on the quality of the original uploaded file. Low-resolution source files will appear low-resolution on the frame.

- **Sound function unclear:** To utilize the sound function for videos or background music, ensure the volume is adjusted in the frame's settings. For videos, sound will typically play automatically. For background music during slideshows, enable this option in the slideshow settings and select your desired audio files.

SPECIFICATIONS

Technical Specifications

Feature	Detail
Product Dimensions	9.84 x 12.2 x 0.99 inches
Item Weight	3.06 pounds
Model Number	32860b33-db69-45f0-9243-ca87518c7dfd
Brand	FULLJA
Color	Black
Resolution	2176x1600 (2K)
Compatible Devices	Android, iPhone
Screen Size	11 Inches
Internal Storage	16GB
External Storage	TF Card (Max 32GB), USB

WARRANTY AND SUPPORT

Warranty Information

Please refer to the product packaging or the manufacturer's official website for specific warranty details

and terms. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact FULLJA customer support. Contact information is typically available on the product packaging, the manufacturer's website, or through your purchase platform. When contacting support, please have your product model number and purchase details ready.

Related Documents - 32860b33-db69-45f0-9243-ca87518c7dfd

FULLJA Digital Photo Frame User Manual	[FULLJA Digital Photo Frame User Manual: Setup, Features, and Troubleshooting](#) Comprehensive user manual for the FULLJA Digital Photo Frame. Learn about setup, features, Wi-Fi connectivity, app integration, media playback, settings, troubleshooting, and technical specifications.
FULLJA Digital Photo Frame User Manual	[FULLJA Digital Photo Frame User Manual - Features, Setup, and Troubleshooting](#) Comprehensive user manual for the FULLJA Digital Photo Frame (JT101M). Learn about setup, features, Wi-Fi connection, app usage, media playback, settings, troubleshooting, and technical specifications.
FULLJA Digital Photo Frame User Manual	[FULLJA Digital Photo Frame User Manual: Setup, Features, and Troubleshooting](#) Comprehensive user manual for the FULLJA Digital Photo Frame. Learn about setup, features, Wi-Fi connectivity, app integration, media playback, settings, troubleshooting, and technical specifications.
FULLJA Digital Photo Frame User Manual	[FULLJA Digital Photo Frame User Manual - Features, Setup, and Troubleshooting](#) Comprehensive user manual for the FULLJA Digital Photo Frame (JT101M). Learn about setup, features, Wi-Fi connection, app usage, media playback, settings, troubleshooting, and technical specifications.
Solventum document	[Solventum Supply Interruption: 3M™ Avagard™ D Hand Antiseptic](#) Notice from Solventum regarding a supply interruption for 3M™ Avagard™ D Instant Hand Antiseptic with Moisturizers (Ethyl Alcohol 61% w/w), including product details, recovery dates, and substitutes.
MAUKASTA MAINONTAA JOULU 2025	[Karamello Joulukuvasto 2025: Herkulliset Yrityslahjat ja Joulukonvehdit](#) Tutustu Karamellon vuoden 2025 joulukuvastoon. Löydä laaja valikoima herkullisia makeisia, suklaata ja joululahjoja yrityksille ja henkilökunnalle. Räätälöitävät ratkaisut yrityslahjoihin.