Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

YING RAY A2-2022110435

YING RAY Replacement Remote Control User Manual

Model: A2-2022110435

Introduction

This user manual provides comprehensive instructions for the YING RAY Replacement Remote Control, designed specifically for various GREE Windows Air Conditioner models including YAW1F9, GWH28AAE-K3NNA2A, GWH24ACD-K3NNA1A, GWH07AAA-K3NNA2A, and GWH12ACB-K3NNA1A. Please read this manual carefully before using the remote control to ensure proper operation and longevity.

Important Note: This is not a universal remote control. Please verify your air conditioner model or existing remote control model before use to ensure compatibility.

Product Overview

The YING RAY Replacement Remote Control is designed to provide seamless control over your compatible GREE air conditioner. It features a clear display and intuitive button layout for easy operation.



Image: Front view of the YING RAY Replacement Remote Control alongside its included wall mount case. The remote features an LCD screen displaying temperature and mode, with various function buttons below.

Remote Control Components:

- **LCD Display:** Shows current settings, temperature, and mode.
- **On/Off Button:** Powers the air conditioner on or off.
- **Mode Button:** Cycles through operating modes (e.g., Cool, Fan, Dry, Heat).
- **Fan Button:** Adjusts fan speed.

- **Sleep Button:** Activates sleep mode for quiet operation and energy saving.
- **Temp Buttons (Up/Down Arrows):** Adjusts the desired temperature.
- **Swing Button:** Controls the louver swing function.
- **Turbo Button:** Activates rapid cooling/heating.
- **Timer Button:** Sets on/off timers.
- **I Feel Button:** Activates the "I Feel" function, sensing temperature at the remote's location.
- **X-Fan Button:** Activates the X-Fan (anti-mildew) function.
- **Light Button:** Controls the display light on the air conditioner unit.

Setup

1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

2. Initial Use

Once batteries are installed, the remote control is ready for use. Point the remote control directly at the air conditioner unit's receiver. No pairing or complex setup is typically required for this replacement remote.

Operating Instructions

Basic Operation

- **Power On/Off:** Press the `On/Off` button to turn the air conditioner on or off.
- **Adjusting Temperature:** Use the `Temp Up (▲)` and `Temp Down (▼)` buttons to set your desired temperature.
- **Changing Mode:** Press the `Mode` button repeatedly to cycle through available modes (e.g., Auto, Cool, Dry, Fan, Heat).
- **Adjusting Fan Speed:** Press the `Fan` button to select desired fan speed (e.g., Auto, Low, Medium, High).

Advanced Functions

- **Sleep Mode:** Press `Sleep` to activate a quiet, energy-saving mode, often with gradual temperature adjustments. Press again to deactivate.
- **Swing Function:** Press `Swing` to enable or disable the automatic vertical louver swing.
- **Turbo Mode:** Press `Turbo` for rapid cooling or heating to reach the set temperature quickly.
- **Timer Setting:** Press `Timer` to set a time for the unit to turn on or off. Refer to your air conditioner's main manual for detailed timer programming.
- **I Feel Function:** Press `I Feel` to activate the remote's built-in temperature sensor, allowing the unit to adjust cooling/heating based on the temperature at the remote's location.
- **X-Fan Function:** Press `X-Fan` to activate the anti-mildew function, which continues the fan operation for a short period after shutdown to dry the evaporator.
- **Light Control:** Press `Light` to turn the display light on the air conditioner unit on or off.

Temperature Display (Celsius/Fahrenheit)

This remote control supports displaying temperature in both Celsius (°C) and Fahrenheit (°F).

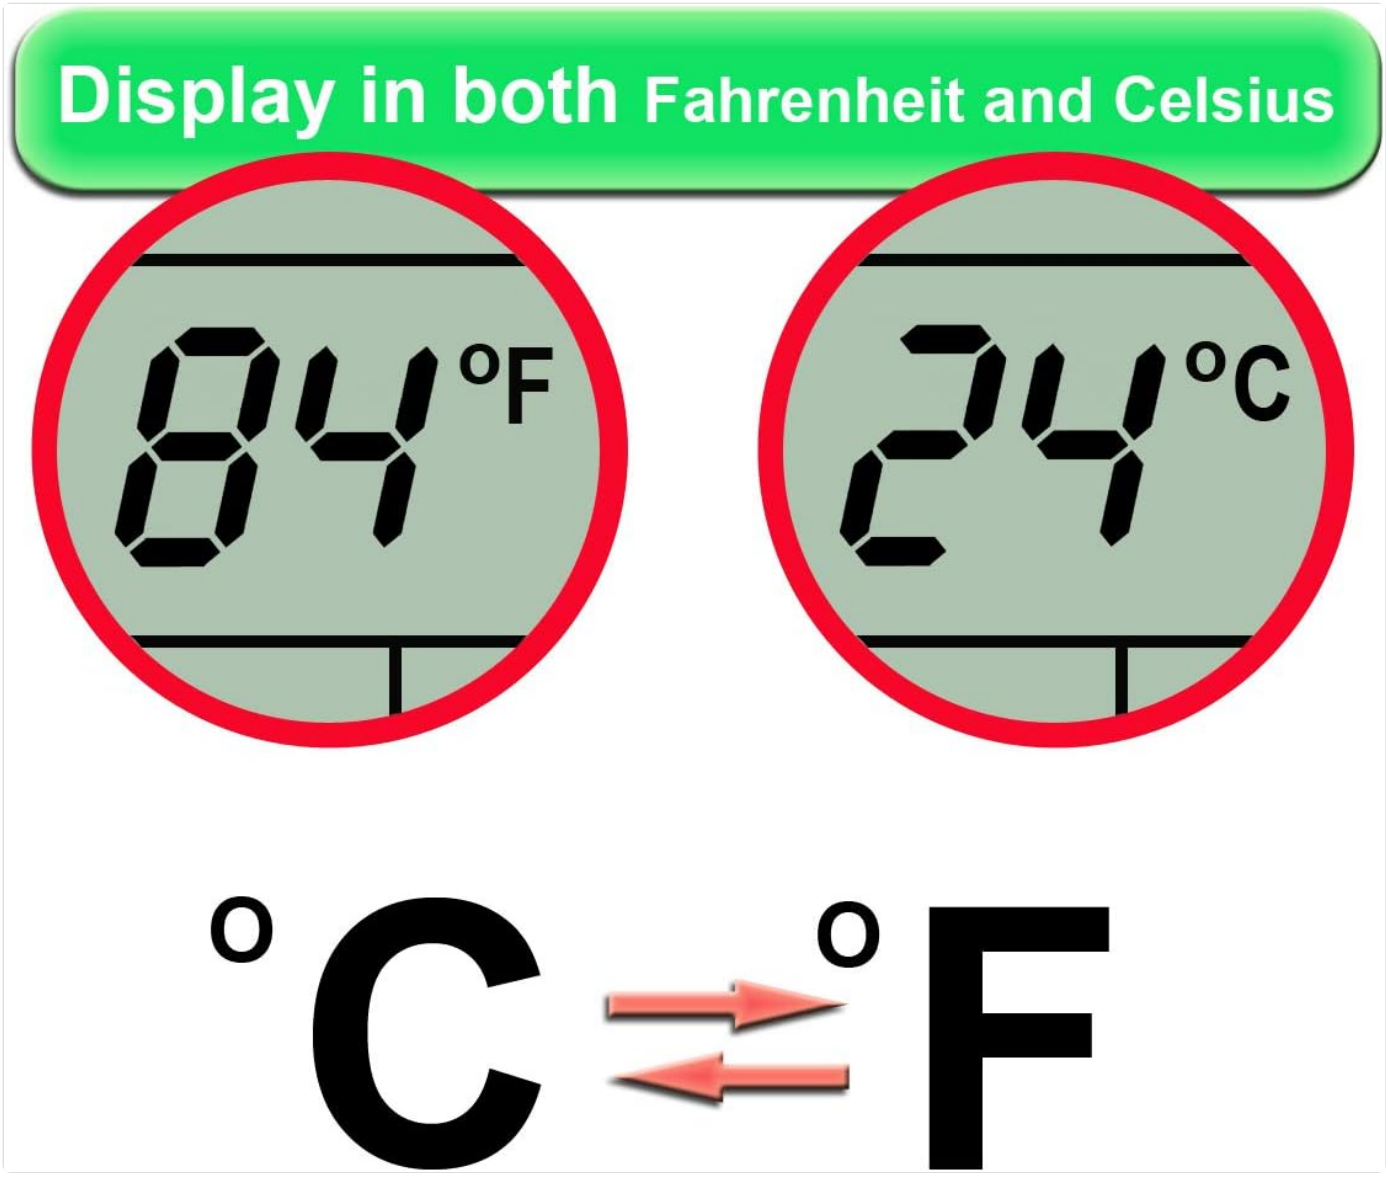


Image: Close-up of the remote control's LCD screen, illustrating the display of temperature in both Fahrenheit (84°F) and Celsius (24°C), with an arrow indicating conversion.

To switch between Celsius and Fahrenheit, typically there is a small button inside the battery compartment or a combination of buttons to press. Refer to your original air conditioner manual or try pressing the **Mode** and **Temp Down (▼)** buttons simultaneously for a few seconds.

Maintenance

Battery Replacement

Replace batteries when the display becomes dim or the remote control's range decreases. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these may damage the remote's surface or internal components.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

Troubleshooting

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly installed batteries. Obstruction between remote and AC unit. Remote out of range.	Replace batteries, ensuring correct polarity. Remove any obstructions. Move closer to the AC unit.
Display is dim or flickering.	Low battery power.	Replace batteries.
Air conditioner not responding to commands.	Incompatible remote model. AC unit power off or unplugged. AC unit receiver blocked.	Verify remote compatibility with your AC model. Ensure AC unit is powered on. Clear any obstructions from the AC unit's receiver.
Temperature display is incorrect (e.g., Celsius instead of Fahrenheit).	Display unit setting is incorrect.	Refer to "Temperature Display" section in Operating Instructions to switch units.

Specifications

- **Model Number:** A2-2022110435
- **Compatible Brands:** GREE
- **Compatible AC Models:** YAW1F9, GWH28AAE-K3NNA2A, GWH24ACD-K3NNA1A, GWH07AAA-K3NNA2A, GWH12ACB-K3NNA1A
- **Power Source:** 2 x AAA Batteries (not included)
- **Package Dimensions:** 0.39 x 0.2 x 0.08 inches
- **Item Weight:** 1.06 ounces
- **Manufacturer:** ZHUHAI YINGRAY TRADING CO., LTD.
- **Country of Origin:** China

Warranty and Support

This YING RAY Replacement Remote Control comes with a**1-year warranty** from the date of purchase, covering manufacturing defects.
For technical support, warranty claims, or further assistance, please contact the seller or manufacturer directly through the platform where the product was purchased. Please have your purchase details and product model number ready when contacting support.

© 2023 YING RAY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BLHT5V8G

More documents and user manuals: **https://manuals.plus/**