ZOOAOXO V300

ZOOAOXO V300 Voice Activated HD Audio Recorder User Manual

Model: V300

Introduction

This user manual provides comprehensive instructions for operating your ZOOAOXO V300 Voice Activated HD Audio Recorder. Please read this manual carefully before use to ensure proper functionality and to maximize your device's potential. Keep this manual for future reference.





Image: The ZOOAOXO V300 Voice Activated HD Audio Recorder, showcasing its compact design and display screen.

1. Setup

1.1 Package Contents

Verify that all items are present in the package:

- ZOOAOXO V300 Audio Recorder
- USB Charging Cable
- User Manual

1.2 Charging the Device

Before first use, fully charge the recorder. Connect the device to a computer's USB port or a USB wall adapter using the provided USB cable. The battery indicator on the screen will show charging status. A full charge typically takes a few

hours.

1.3 Powering On/Off

- To power on: Press and hold the Power button (usually the Play/Pause button) until the screen illuminates.
- To power off: Press and hold the Power button until the screen turns off.

2. Operating Instructions

2.1 Device Overview and Controls



Image: Front view of the ZOOAOXO V300 recorder with key buttons labeled: Return key, Recording key, and Confirm key.

- **Return Key (Square button)**: Press to return to the previous menu. Long press to delete files or access the menu.
- **Recording Key (Red circle button)**: Press to start recording. Press again to save the current recording.
- **Confirm Key (Play/Pause button)**: Press to confirm selections, pause, or play audio.
- **Navigation Buttons (Arrow keys)**: Use to navigate through menus and adjust settings.

2.2 Basic Recording

To start a recording:

1. Ensure the device is powered on.
2. Press the **Recording Key** (red circle button). The recording indicator will appear on the screen.
3. To save the recording, press the **Recording Key** again. The file will be saved automatically with a timestamp.

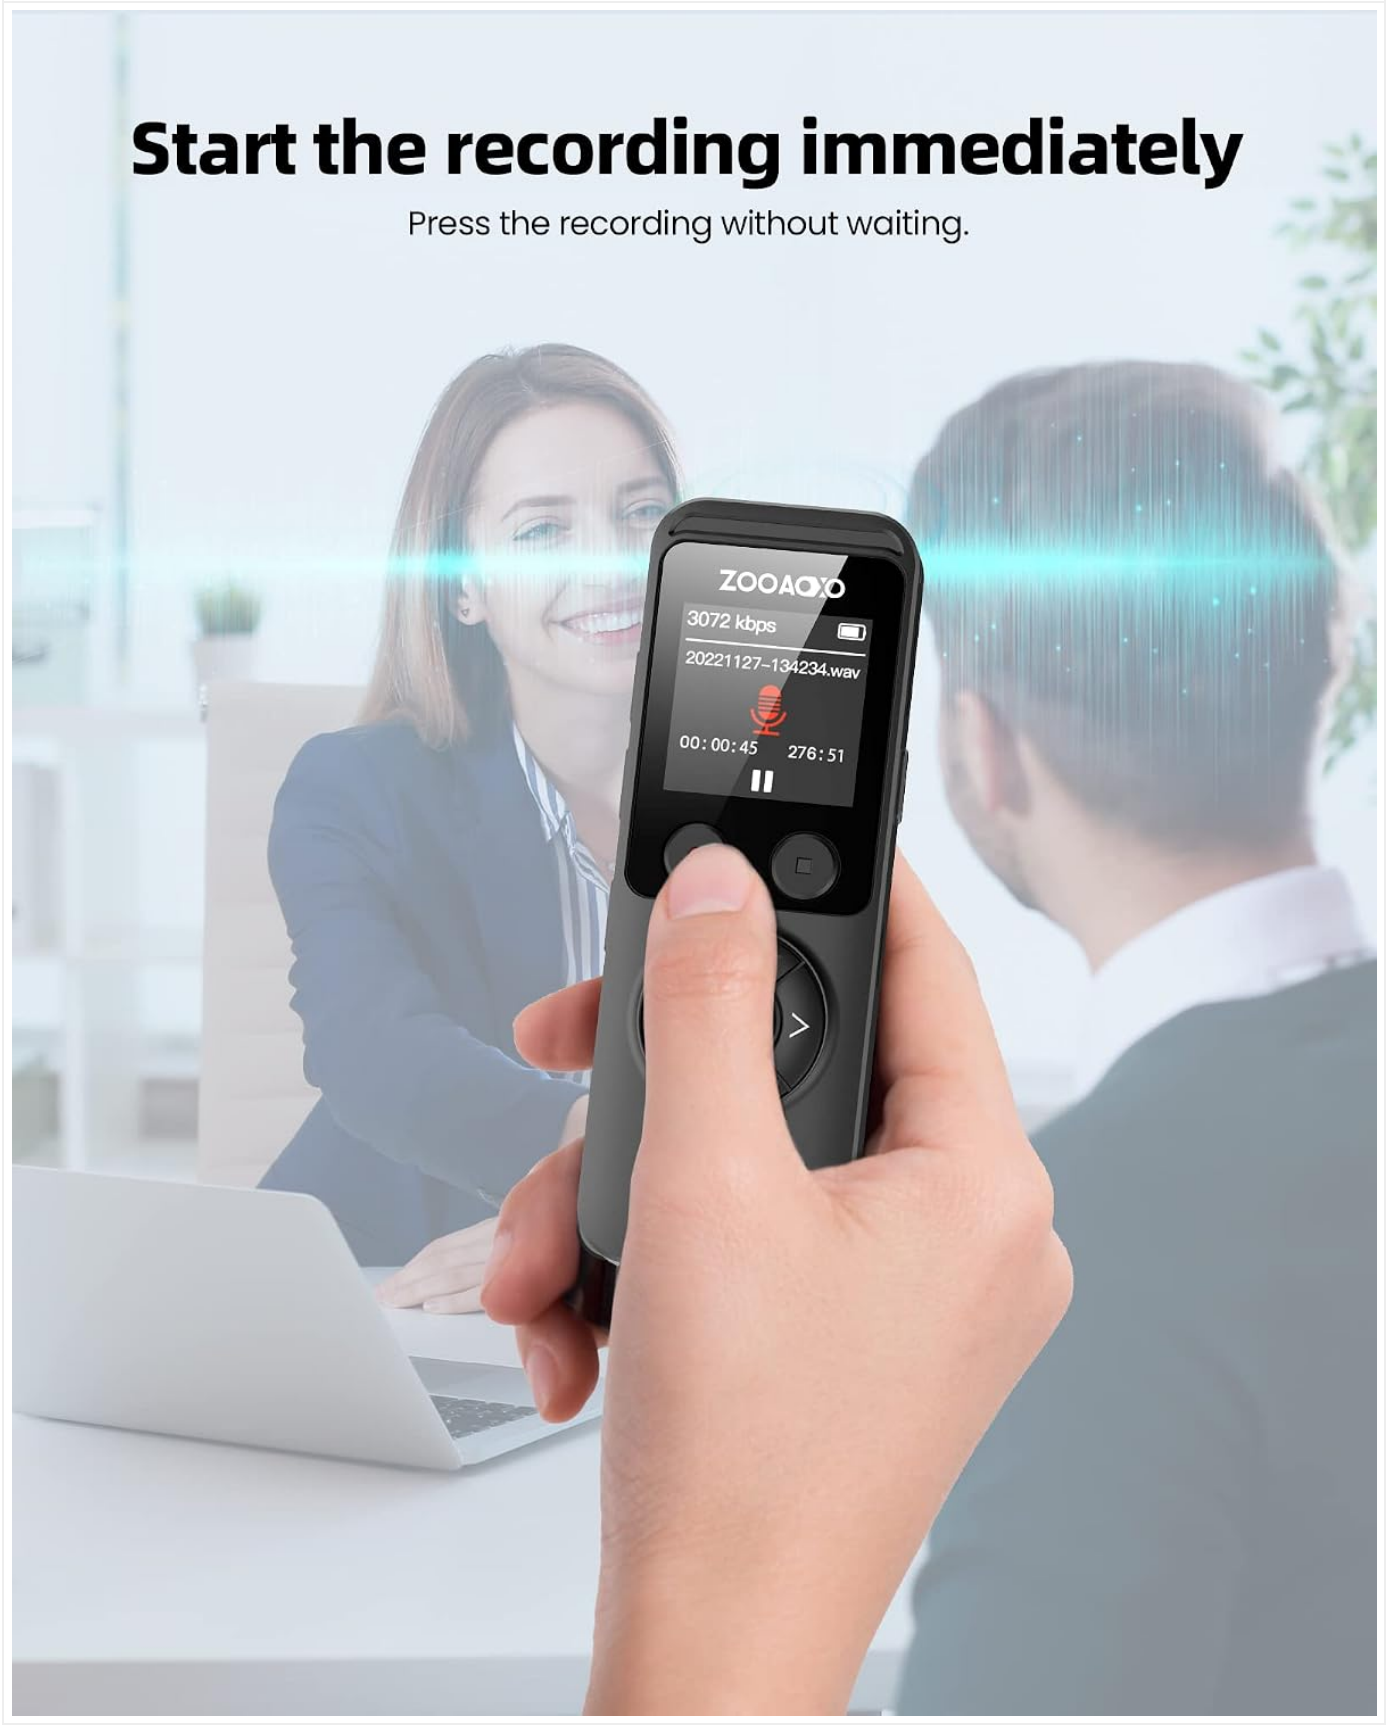


Image: A hand pressing the record button on the ZOOAOXO V300, illustrating immediate recording initiation.

2.3 Voice-Activated Recording (VOR)

The device can automatically start recording when sound is detected and pause when silence occurs, saving storage space.

1. Navigate to the settings menu.
2. Select "Voice Activated Recording" or "VOR" and enable it.
3. Adjust the sensitivity level as needed.
4. Start recording as usual; the device will now only record when sound is present.



Image: A visual representation of the voice-activated recording feature, showing sound waves triggering recording.

2.4 Timed Recording

Schedule recordings to start and stop automatically at specific times.

1. Access the settings menu.
2. Locate "Timed Recording" or "Schedule Recording."
3. Set the desired start time, end time, and frequency (e.g., once, daily, working days).
4. Confirm the settings. The device will initiate recording at the scheduled times.



Image: The ZOOAOXO V300 display showing options for setting start and finish times for scheduled recordings.

2.5 Playback and A-B Repeat

To play back recordings:

1. Navigate to the "Recordings" or "Files" folder.
2. Select the desired audio file using the navigation buttons.
3. Press the **Confirm Key** (Play/Pause button) to start playback.
4. To use A-B Repeat: During playback, press the A-B repeat button (if available, or a specific menu option) to mark the start point (A). Press it again to mark the end point (B). The device will loop playback between points A and B.



Image: A child wearing headphones, using the ZOOAOXO V300 with a visual representation of the A-B repeat function on the screen.

2.6 MP3 Player Functionality

The ZOOAOXO V300 can also function as an MP3 player.

1. Connect the device to your computer.
2. Transfer MP3 audio files to the designated "Music" folder on the device.
3. Disconnect the device safely.
4. On the recorder, navigate to the "Music" or "MP3" section.
5. Select and play your desired music files.

2.7 Bluetooth Connectivity

The device supports Bluetooth for connecting to headphones or for recording phone calls.

1. **Pairing with Bluetooth Headphones/Speakers**:
    - Go to the Bluetooth settings on your recorder.
    - Enable Bluetooth and search for available devices.

- Select your Bluetooth headphones/speaker from the list and pair.

2. **Bluetooth Call Recording**:
   - Ensure your phone is paired with the recorder via Bluetooth.
   - In the recorder's menu, select the Bluetooth call recording mode.
   - When a call is initiated or received on your phone, the recorder can capture the audio.



Image: The ZOOAOXO V300 recorder displayed next to a smartphone and a Bluetooth speaker, illustrating its Bluetooth call recording capability.

2.8 Recording Monitoring

Connect headphones to the 3.5mm jack to monitor audio in real-time during recording. This allows you to check sound quality and adjust your speaking volume or position for optimal results.



Image: A woman wearing headphones and using the ZOOAOXO V300, demonstrating the recording monitoring feature.

2.9 Recording Quality Settings

The ZOOAOXO V300 offers various recording quality options, including 512 kbps, 1536 kbps, and 3072 kbps. Higher bitrates result in better audio fidelity but consume more storage space.

1. Access the settings menu.
2. Select "Recording Quality" or "Bitrate."
3. Choose your desired setting (e.g., 3072 kbps for highest quality).

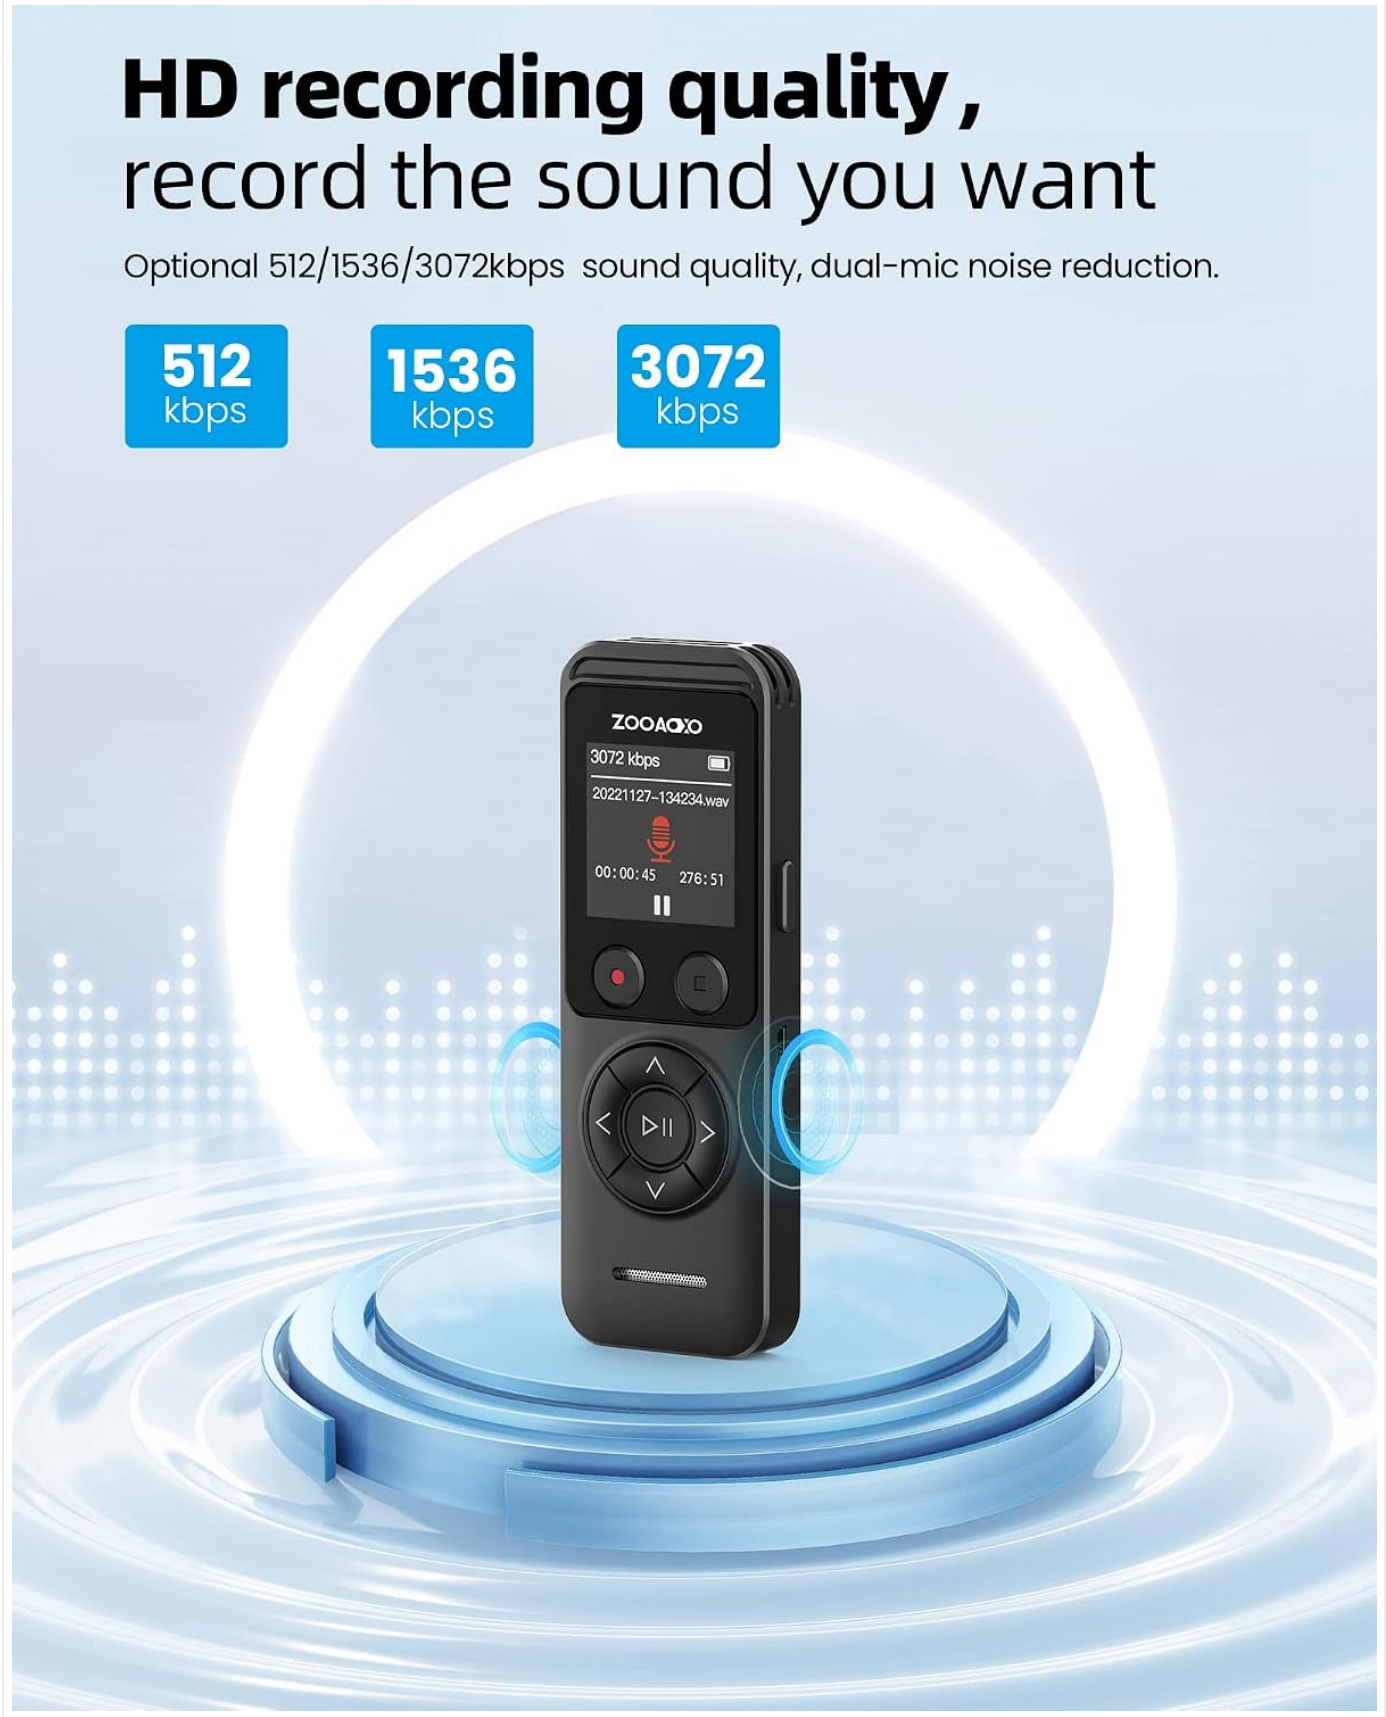


Image: The ZOOAOXO V300 displaying options for recording quality: 512 kbps, 1536 kbps, and 3072 kbps.

3. Maintenance

3.1 Cleaning

Wipe the device with a soft, dry cloth. Do not use liquid cleaners or solvents, as they may damage the device.

3.2 Battery Care

- Avoid fully discharging the battery frequently.
- Charge the device regularly, even if not in use, to maintain battery health.
- Do not expose the device to extreme temperatures.

3.3 Storage

Store the recorder in a cool, dry place away from direct sunlight and moisture when not in use.

4. Troubleshooting

Problem	Possible Cause	Solution
Device does not power on.	Low battery.	Charge the device for at least 30 minutes.
Poor recording quality.	Microphone obstructed, low bitrate setting, excessive background noise.	Ensure microphone is clear. Increase recording bitrate in settings. Record in a quieter environment.
Cannot save recordings.	Storage full.	Delete unnecessary files to free up space.
Device not recognized by computer.	Faulty USB cable, incorrect connection, driver issue.	Try a different USB cable or port. Restart both the device and computer.

5. Specifications

Feature	Detail
Brand	ZOOAOXO
Model Number	V300
Storage Capacity	64 GB
Digital Recording Time	Approximately 1612.8 minutes (at standard quality)
Recording Bitrate Options	512 kbps, 1536 kbps, 3072 kbps
Display Size	1 Inch
Connections	USB 2.0 Type A, 3.5mm Headphone Jack
Compatible Devices	MP3 Player functionality
Battery Type	Lithium-Polymer (1 included)
Microphone Form Factor	Integrated
Audio Formats Supported	MP3, WAV, WMA



Image: Two ZOOAOXO V300 recorders with a large "64GB" graphic, emphasizing the device's storage capacity.

6. Warranty and Support

Information regarding specific warranty terms and customer support contact details is not provided in the product specifications. Please refer to the packaging or the seller's website for warranty information and customer service contacts.

© 2023 ZOOAOXO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question