Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

OSCAL OSCAL Pad10 Tablet US

OSCAL Pad10 Android Tablet User Manual

Model: OSCAL Pad10 Tablet US
Brand: OSCAL

Introduction

This user manual provides comprehensive instructions for setting up, operating, and maintaining your OSCAL Pad10 Android Tablet. Please read this manual thoroughly before using your device to ensure optimal performance and longevity.
The OSCAL Pad10 is a versatile 10.1-inch Android tablet featuring an octa-core processor, 14GB RAM (8GB physical + 6GB virtual), 128GB internal storage expandable up to 1TB via TF card, and running on Android 12 with Doke OS_P V3.0. It is equipped with dual cameras (13MP rear, 8MP front), dual-band Wi-Fi, Bluetooth 5.0, and a 6580mAh battery for extended use.

What's in the Box

Upon opening your OSCAL Pad10 package, you should find the following items:

- 1 x OSCAL Pad10 Android Tablet
- 1 x USB-C Cable
- 1 x Power Adapter
- 1 x User Manual
- 1 x SIM Tray Ejector Pin



Image: The OSCAL Pad10 tablet and its accessories laid out, including the tablet itself, a USB-C charging cable, a power adapter, a user manual, and a SIM tray ejector tool.

Your browser does not support the video tag.

Video: An unboxing and overview of the OSCAL Pad10 tablet and its included accessories, demonstrating the contents of the retail package.

Product Overview and Key Features

The OSCAL Pad10 is engineered for performance and user experience. Below are its primary features:

Display and Design

The tablet features a 10.1-inch IPS FHD display with a resolution of 1920x1200 pixels, offering vibrant colors and wide viewing angles. It supports Google Widevine L1 for 1080p streaming quality on popular platforms. The device has a semi-flat-edged design with an upgraded matte finish, weighing 530g and measuring 8.9mm thin.



Image: The OSCAL Pad10 displaying a vibrant image, highlighting its 10.1-inch FHD screen with 1920x1200 pixels resolution and 400 nits brightness.

Performance and Storage

Powered by an octa-core processor, the Pad10 boasts 14GB of RAM (8GB physical + 6GB virtual) for smooth multitasking. It comes with 128GB of internal storage, expandable up to 1TB using a micro TF card (not included), providing ample space for all your files and applications.



Image: An internal view of the OSCAL Pad10 highlighting its octa-core processor (T606), 14GB RAM, 128GB ROM, and 1TB TF card expansion capability.

Your browser does not support the video tag.

Video: Demonstrates the performance capabilities of the OSCAL Pad10 through an AnTuTu benchmark test, showcasing its speed and efficiency.

Operating System and User Interface

The Pad10 runs on Android 12, offering a personalized and secure user experience. It features Doke OS_P V3.0, which enhances convenience and smoothness with features like Versatile Desktop for app grouping and Smart Floating Windows for quick access to controls.



Image: The OSCAL Pad10 displaying the Google Play Store interface, emphasizing its GMS certification and Android 12 operating system with DokeOS V3.0.

Your browser does not support the video tag.

Video: A detailed overview of the OSCAL PAD10's features, including its 14GB+128GB configuration and Android 12 operating system, showcasing its capabilities.

Camera System

Capture moments with the 13MP Sony IMX319 rear camera and an 8MP Samsung 5K4H7 front camera, suitable for photos, video calls, and sharing memories.



Image: Close-up of the OSCAL Pad10's camera module, detailing the 8MP front camera and 13MP rear camera, alongside example photos taken with the device.

Battery and Connectivity

The 6580mAh battery provides long-lasting power, with up to 2 days of battery life, 432 hours standby, 20 hours call time, 15 hours music playback, and 4 hours video playback. It supports 2.4G/5G dual-band Wi-Fi and Bluetooth 5.0 for reliable and fast connections.



Image: The OSCAL Pad10 highlighting its 6580mAh battery capacity, 5V/2A fast charging, and Type-C USB interface.

Additional Features

- **PC Mode:** Seamlessly syncs with wireless mice and keyboards for a desktop-like experience.
- **Smart-K Dual Box Speakers:** Deliver high-quality, loud stereo sound.
- **3.5mm Headphone Jack:** For private audio listening.
- **Parental Control:** Manage screen time and app access for children.

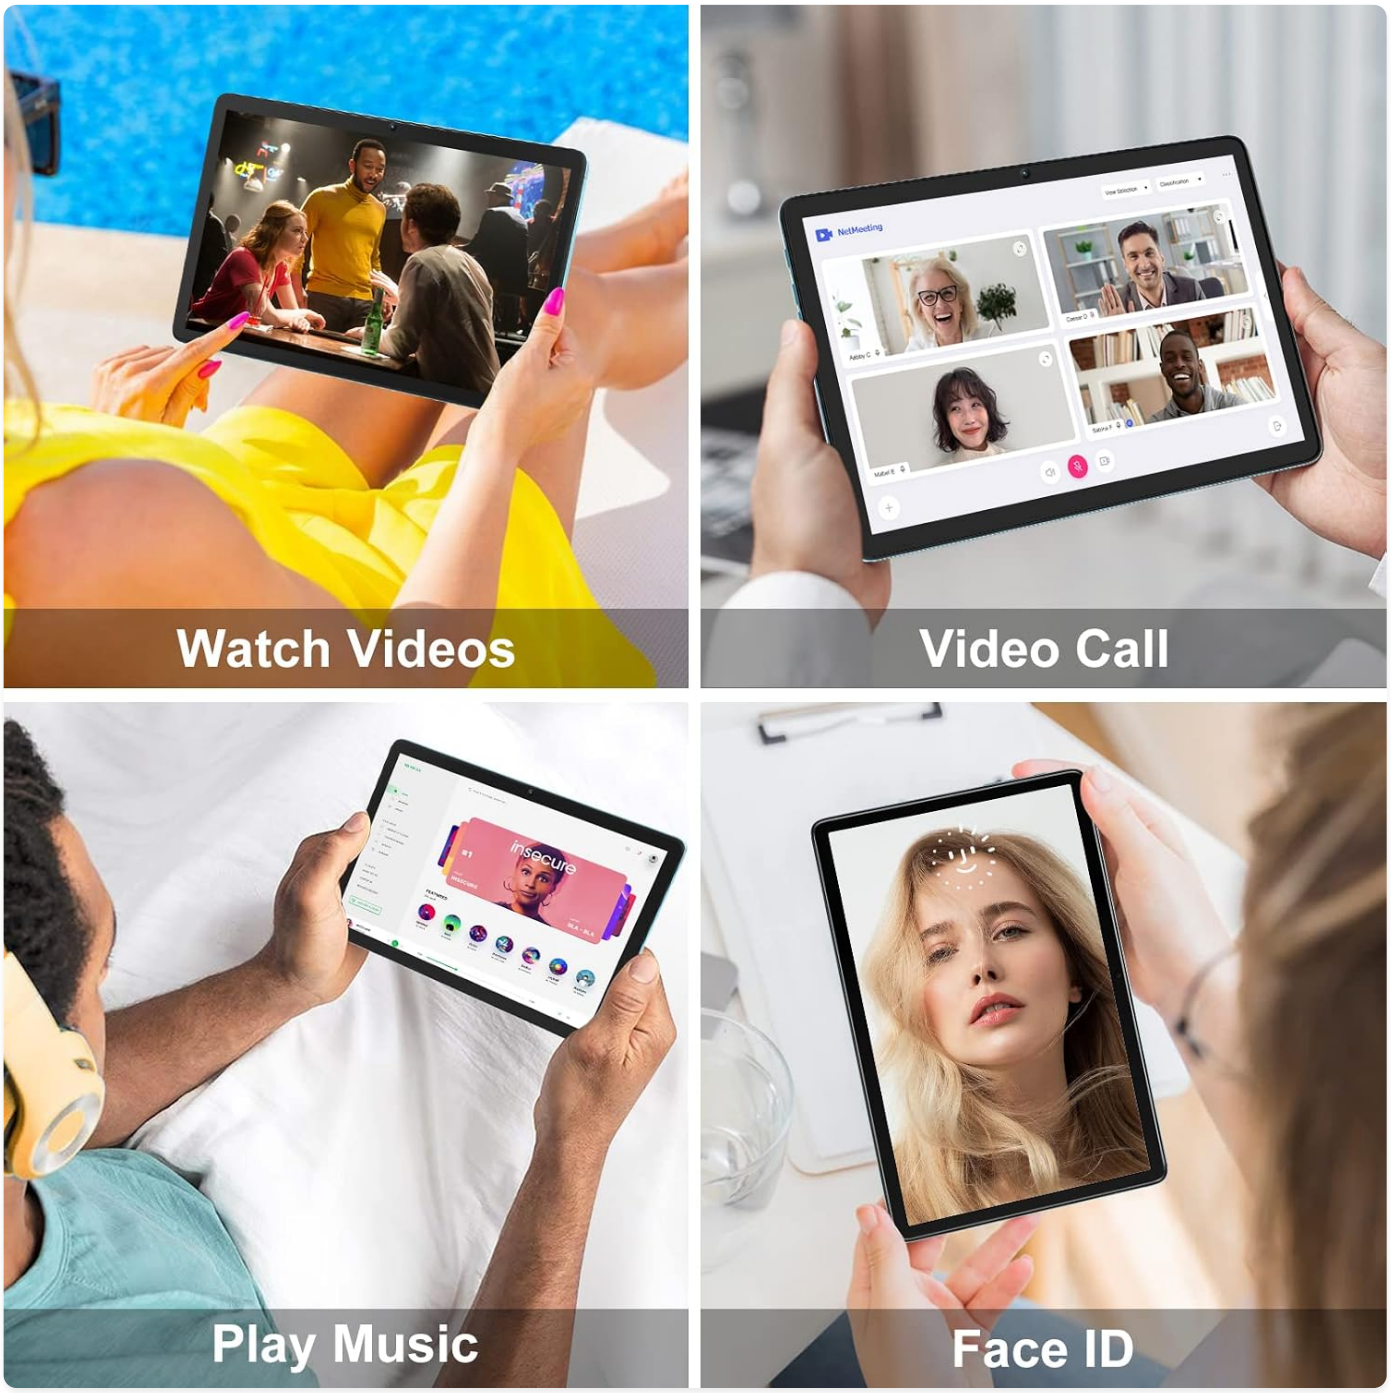


Image: A collage showing various uses of the OSCAL Pad10, including watching videos, video calls, playing music, and using Face ID.

Your browser does not support the video tag.

Video: Highlights the key features of the 2023 OSCAL PAD10, including its Android 12 OS, 14GB+128GB memory, and 10.1-inch display, demonstrating its overall functionality.

Your browser does not support the video tag.

Video: Showcases the OSCAL tablet's 2.4G/5G WiFi capabilities, emphasizing its suitability for children's use and family-friendly features.

Setup Guide

Initial Power On and Setup

1. **Charge the Tablet:** Before first use, ensure the tablet is fully charged using the provided USB-C cable and power adapter.
2. **Power On:** Press and hold the Power button (located on the side) until the OSCAL logo appears on the screen.

3. **Language and Region:** Follow the on-screen prompts to select your preferred language and region.
4. **Connect to Wi-Fi:** Select your Wi-Fi network from the list and enter the password to connect to the internet.
5. **Google Account Setup:** Sign in with your Google account or create a new one to access Google Play Store and other Google services.
6. **Data Transfer (Optional):** You may choose to transfer data from a previous device during this step.
7. **Security Setup:** Set up a screen lock (PIN, pattern, password, or Face ID) for security.

Inserting a TF Card

The OSCAL Pad10 supports storage expansion up to 1TB via a micro TF card. To insert the card:

1. Locate the SIM/TF card tray on the side of the tablet.
2. Insert the provided SIM ejector pin into the small hole next to the tray and press gently until the tray pops out.
3. Place the micro TF card into the designated slot on the tray, ensuring it is correctly oriented.
4. Carefully push the tray back into the tablet until it clicks into place.

Operating Instructions

Basic Navigation (Doke OS_P V3.0)

- **Home Screen:** Swipe left or right to navigate between home screens.
- **App Drawer:** Swipe up from the bottom of the screen to access all installed applications.
- **Notification Panel:** Swipe down from the top of the screen to view notifications.
- **Quick Settings:** Swipe down again from the notification panel to access quick settings toggles (Wi-Fi, Bluetooth, Brightness, etc.).
- **Smart Sidebar:** Swipe left or right and hold from the edge of the screen to use the smart sidebar for quick app access.
- **Control Panel:** Swipe down from the top right corner to access the control panel for system settings.

Using PC Mode

The PC Mode transforms your tablet into a more desktop-like environment, ideal for productivity tasks. You can activate it in two ways:

1. **Via Quick Settings:** Swipe down from the top of the screen to open the Quick Settings panel, then tap on the "PC Mode" icon.
2. **Automatic Activation:** Connect a compatible wireless keyboard to the tablet. The system will prompt you to enter PC Mode automatically.

In PC Mode, you can use multiple windows, a taskbar, and a pointer for navigation, similar to a traditional computer. This is particularly useful for editing documents, managing files, and multitasking.

Your browser does not support the video tag.

Video: Demonstrates how to activate and use PC Mode on the OSCAL Pad10, showcasing its desktop-like functionality with a connected keyboard.

Camera Usage

To take photos or videos:

1. Open the "Camera" application from your home screen or app drawer.
2. Select between photo, video, or other modes (if available).

3. Tap the shutter button to capture a photo or start/stop video recording.
4. Use the front or rear camera toggle to switch between them.

Parental Control

The tablet includes parental control features to manage your child's usage. These settings can typically be found in the system settings under "Digital Wellbeing & parental controls" or by installing Google Family Link.

- Set screen time limits for the device or specific apps.
- Control access to certain applications and websites.
- Monitor device activity.

Maintenance

Battery Care

- Use only the original charger and cable provided with the tablet.
- Avoid exposing the tablet to extreme temperatures, as this can degrade battery life.
- For optimal battery longevity, avoid frequently draining the battery completely or keeping it at 100% for extended periods.

Storage Management

- Regularly clear cache data from apps to free up space.
- Uninstall unused applications.
- Transfer large files (photos, videos) to an external TF card or cloud storage.
- Access storage settings via **Settings > Storage** to view usage and manage files.

Software Updates

Keep your tablet's software up to date to ensure optimal performance, security, and access to new features. You can check for updates by going to **Settings > System > System update**

Cleaning the Device

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- Avoid using harsh chemicals or abrasive materials.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.

Troubleshooting

Common Issues and Solutions

Problem	Possible Solution
Tablet won't turn on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If unresponsive, try holding the power button for 10-15 seconds.
Apps constantly crash or freeze	Clear the app's cache (Settings > Apps > [App Name] > Storage > Clear cache). Update the app to the latest version. If the issue persists, uninstall and reinstall the app. Ensure sufficient free storage space.

Problem	Possible Solution
Slow performance	Close unnecessary background apps. Clear cache and temporary files. Restart the tablet. Check for system updates. Consider a factory reset if performance issues persist after other steps.
Wi-Fi connection issues	Restart the tablet and your Wi-Fi router. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.
Battery drains quickly	Reduce screen brightness. Disable unused features like Bluetooth, GPS, or Wi-Fi when not needed. Close background apps. Check battery usage in settings to identify power-hungry apps.

Factory Reset

If you encounter persistent software issues or wish to erase all data from your tablet, you can perform a factory reset. **Warning: This will erase all data on your tablet, including apps, photos, and settings. Back up important data before proceeding.**

1. Go to **Settings > System > Reset options**.
2. Tap **Erase all data (factory reset)**.
3. Confirm your decision and enter your PIN/pattern/password if prompted.
4. The tablet will restart and begin the reset process.

Specifications

Feature	Detail
Model Name	OSCAL Pad10 Tablet US
Operating System	Android 12 (with Doke OS_P V3.0)
Screen Size	10.1 inches
Screen Resolution	1920 x 1200 pixels (FHD IPS)
Processor	Octa-core (1.6 GHz)
RAM	14GB (8GB physical + 6GB virtual)
Internal Storage	128GB
Expandable Storage	Up to 1TB (Micro TF Card)
Rear Camera	13MP Sony IMX319
Front Camera	8MP Samsung 5K4H7
Battery Capacity	6580 mAh
Connectivity	2.4G/5G Wi-Fi, Bluetooth 5.0
Dimensions (LxWxH)	10.23 x 7.08 x 0.35 inches
Item Weight	2.12 pounds (approx. 530g)

Warranty and Support

The OSCAL Pad10 comes with a **24-month limited warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use.
For any questions, technical support, or warranty claims, please contact OSCAL customer service. Refer to the contact information provided in the Quick Start Guide included in your product packaging or visit the official OSCAL website for support details.
Please retain your proof of purchase for warranty validation.

© 2024 OSCAL. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BLZ1BPH1

More documents and user manuals: **https://manuals.plus/**