Polaroid 9088

Polaroid P3 Portable Bluetooth Speaker User Manual

Model: 9088 | Brand: Polaroid

1. Introduction

The Polaroid P3 Portable Bluetooth Speaker is designed to deliver powerful sound with a retro-futuristic aesthetic. This manual provides essential information for setting up, operating, and maintaining your P3 speaker, ensuring optimal performance and longevity. Featuring Internet Radio access via the Polaroid Music App and dual stereo pairing capabilities, the P3 offers a versatile audio experience.



Front view of the Polaroid P3 Portable Bluetooth Speaker, showcasing its grey finish and dual speaker grilles.

2. What's in the Box

Please check the package contents to ensure all items are present:

- Polaroid P3 Player
- USB-C Charging Cable (1m)
- Quick Start Guide
- Safety & Compliance Leaflet

3. Setup

3.1 Initial Charging


Before first use, fully charge your Polaroid P3 speaker. Connect the supplied USB-C charging cable to the speaker's USB-C port and the other end to a compatible USB power adapter (not included). The charging time is approximately 6 hours for a full charge, providing up to 15 hours of playback.

3.2 Powering On/Off

To power on the speaker, press and hold the power button located on the top panel until the display illuminates. To power off, press and hold the power button again until the display turns off.

3.3 Polaroid Music App Installation

For full functionality, including access to Polaroid Radio and advanced controls, download the Polaroid Music App. It is available for both iOS and Android devices.

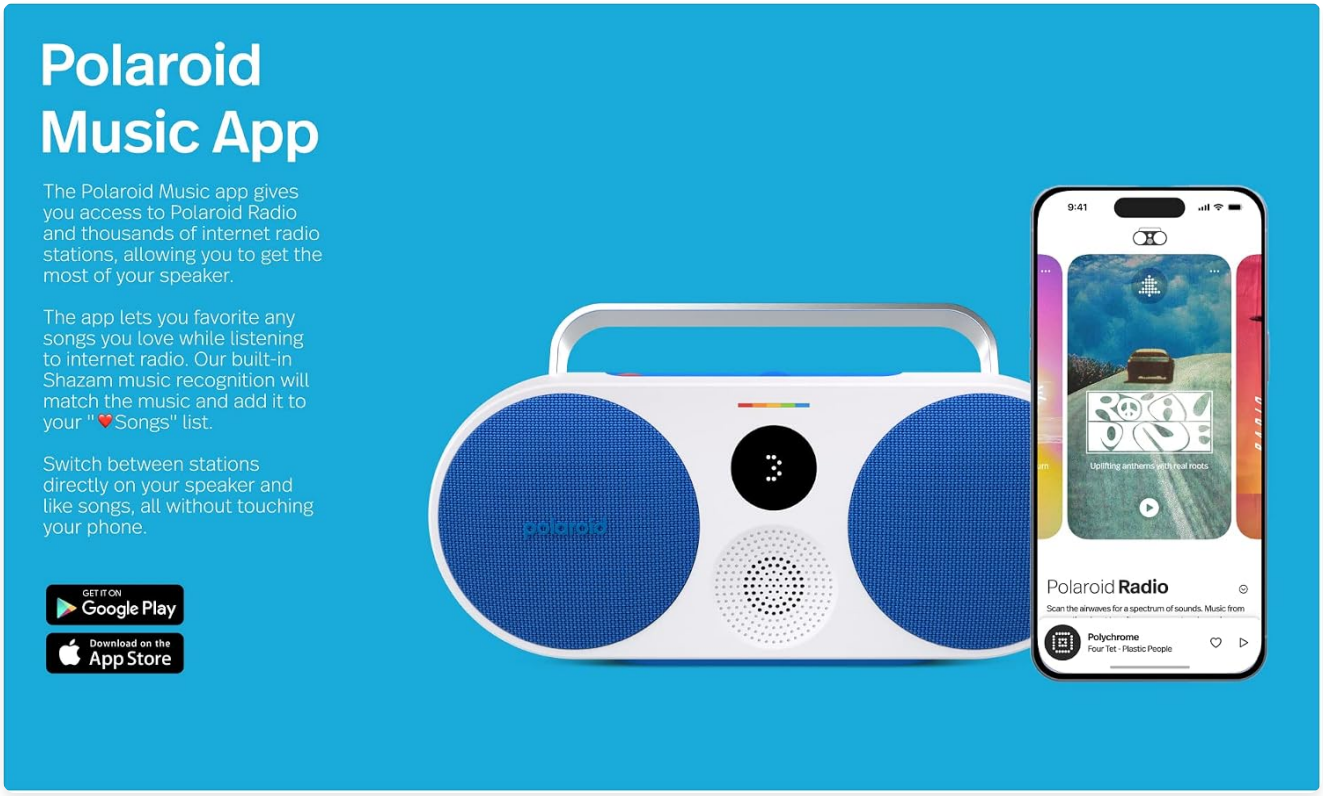

The Polaroid P3 speaker alongside a smartphone displaying the Polaroid Music App interface.

4. Operating Instructions

4.1 Bluetooth Pairing

1. Ensure the P3 speaker is powered on.
2. The speaker will automatically enter Bluetooth pairing mode if no device is connected. The display will show a pairing indicator.
3. On your device (smartphone, tablet), go to Bluetooth settings and select 'Polaroid P3' from the list of available devices.
4. Once connected, the speaker will confirm the connection, and the display indicator will change.

The P3 uses Bluetooth 5.1 for a stable connection up to 30 feet.

4.2 Using the Polaroid Music App and Internet Radio

The Polaroid Music App allows you to access Polaroid Radio, a curated internet radio service, and thousands of other internet radio stations. Use the analog dial on the speaker or the app to scroll through channels. The app also features Shazam music recognition to identify and save songs.

4.3 Stereo Pairing

Two Polaroid P3 speakers can be paired together to create an immersive stereo sound experience. Refer to the Quick Start Guide or the Polaroid Music App for detailed instructions on initiating stereo pairing.

4.4 Controls

The P3 speaker features intuitive physical controls on its top panel:

- **Power Button:** Press and hold to turn on/off.
- **Analog Dial:** Rotate to navigate through radio stations or tracks.
- **Play/Pause Button:** Controls media playback.
- **Skip Buttons:** For skipping tracks forward or backward.
- **Heart Button:** Save your favorite songs (requires Polaroid Music App).



Close-up view of the top panel controls, including the analog dial and various function buttons.

5. Maintenance

5.1 Cleaning

Wipe the speaker with a soft, dry, lint-free cloth. Do not use abrasive cleaners, waxes, or solvents. Avoid getting moisture into any openings.

5.2 Battery Care

To prolong battery life, avoid fully discharging the speaker frequently. If storing for an extended period, charge the battery to approximately 50% and recharge every few months.

5.3 Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.

6. Troubleshooting

6.1 No Power

- Ensure the speaker is fully charged. Connect it to a power source using the USB-C cable.
- Verify the power adapter is working correctly.

6.2 No Sound

- Check the volume level on both the speaker and your connected device.
- Ensure the speaker is properly paired via Bluetooth or connected via AUX.
- Try restarting both the speaker and the connected device.

6.3 Bluetooth Pairing Issues

- Make sure the speaker is in pairing mode.
- Move the speaker closer to your device.
- Forget the device from your phone's Bluetooth settings and try pairing again.
- Ensure no other devices are actively connected to the speaker.

7. Specifications

Feature	Detail
Model Name	Polaroid Music Player
Model Number	9088
Dimensions (D x W x H)	2.75"D x 11.8"W x 5.5"H
Item Weight	3.28 pounds (52.4 Ounces)
Battery Life	Up to 15 Hours
Charging Time	6 Hours
Connectivity Technology	Bluetooth 5.1, Auxiliary (3.5mm), USB-C
Bluetooth Range	30 Feet
Speaker Type	Coaxial
Special Features	Stereo Pairing, Portable, Internet Radio via App
Power Source	Battery Powered (1 Lithium Ion battery included)
Water Resistance Level	Not Water Resistant



Product dimensions of the Polaroid P3 speaker: 11.8 inches wide, 5.5 inches high, and 2.75 inches deep.

8. Warranty and Support

The Polaroid P3 Portable Bluetooth Speaker comes with a 1-year warranty. For detailed warranty information, technical support, or service inquiries, please refer to the Safety & Compliance Leaflet included in your package or visit the official Polaroid website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question