Ufree U-1779

Ufree Beard Trimmer for Men

Model: U-1779

Safety Information

For your safety, please read all instructions carefully before using the Ufree Beard Trimmer.

- Do not immerse the entire trimmer unit in water. The blades are designed for rinsing under water only.
- Keep the device away from children.
- Ensure the device is fully charged before first use to optimize battery life.

Package Contents

Your Ufree Beard Trimmer kit includes the following items:

- 1 x Ufree Beard Trimmer Unit (Model U-1779)
- 7 x Trimmer Heads: T-Blade Liner, Hair Clipper, Precision, Design, Nose, Foil Shaver, Body Trimmer
- 10 x Hair Combs (various sizes)
- 1 x Charging Base/Stand
- 1 x USB-C Charging Cable
- 1 x Cleaning Brush
- 1 x Lubricating Oil
- 1 x Comb
- 1 x Velvet Storage Bag



Image: All components of the Ufree Beard Trimmer kit, including the main unit, various trimmer heads, combs, charging stand, and cleaning accessories.

Setup

Charging the Trimmer

The Ufree Beard Trimmer features a built-in lithium battery. For optimal performance, fully charge the device before its first use. A full charge takes approximately 60 minutes and provides up to 150 minutes of working time, or about 2 weeks of trimming sessions.

- Connect the USB-C charging cable to the port at the bottom of the trimmer.
- Plug the other end of the USB-C cable into a compatible USB power adapter (not included).
- The LED display on the trimmer will show the battery percentage during charging.



Image: The Ufree Beard Trimmer connected to a USB-C charging cable, with the LED display showing battery level.

Attaching and Changing Trimmer Heads

The trimmer heads are designed for easy attachment and removal, allowing you to quickly switch between different grooming tasks.

- To attach a head: Align the desired trimmer head with the main unit and press firmly until it clicks into place.
- To remove a head: Gently push the head away from the unit until it detaches.
- The kit includes a convenient charging base/stand with dedicated slots for organizing all trimmer heads and combs.

Video: Demonstration of attaching and detaching various trimmer heads, showcasing the ease of use and the organized storage stand.

Operating Instructions

The Ufree Beard Trimmer is a versatile grooming tool suitable for various hair cutting tasks from head to body. Its powerful 6500RPM motor ensures a quiet and efficient experience.

General Operation

- Press and hold the power button to turn the trimmer ON/OFF.
- The LED display will show the current battery percentage.
- Select the appropriate trimmer head and comb for your desired grooming style.

Using Different Trimmer Heads



Image: Visual guide demonstrating the use of different trimmer heads for hair clipping, nose trimming, design trimming, body trimming, precision trimming, and T-blade lining.

- **T-Blade Liner Trimmer:** Ideal for achieving zero-gap cuts, sharp lines, and precise edging for beard and hairline.
- **Hair Clipper Head:** Use with the included hair combs (3mm, 6mm, 9mm, 12mm, 15mm) for various hair lengths.
- **Precision Trimmer Head:** For detailed styling and intricate patterns.
- **Nose/Ear Hair Trimmer Head:** Safely and effectively removes unwanted nose and ear hair.
- **Foil Shaver Head:** Provides a close, smooth shave for facial and body hair.
- **Body Trimmer Head:** Features an adjustable comb (3-6-9mm) for comfortable body grooming.

Video: A demonstration of the trimmer's performance for close shaving and hair cutting.

Maintenance

Cleaning the Blades

To ensure optimal performance and hygiene, clean the trimmer blades regularly.

- After each use, remove the trimmer head.
- Rinse the blades under running water. Do NOT immerse the entire trimmer unit.
- Use the included cleaning brush to remove any trapped hair from the blades and inside the head.
- Allow the blades to air dry completely before reattaching or storing.

Lubricating the Blades

Regular oiling helps maintain the sharpness and longevity of the blades.

- Apply a few drops of the included lubricating oil to the blades after cleaning, especially if you notice any resistance during use.
- Run the trimmer for a few seconds to distribute the oil evenly.

Troubleshooting

If you encounter any issues with your Ufree Beard Trimmer, please refer to the following common solutions:

- **Trimmer not turning on or operating weakly:** Check the LED display for battery percentage. If low, recharge the trimmer fully (approx. 1 hour).
- **Blades pulling hair or not cutting effectively:**Ensure the blades are clean and free of hair debris. Apply lubricating oil to the blades. If the issue persists, ensure the correct attachment is securely fastened.
- **Unusual noise during operation:** This may indicate a need for cleaning and oiling the blades. If the noise continues, contact customer support.

Video: A customer's demonstration of the trimmer not working despite showing a full battery. If this occurs, please contact Ufree customer support.

Specifications

Feature	Detail
Model Number	U-1779
Product Dimensions	1.77 x 1.57 x 6.29 inches
Item Weight	1.48 Pounds
Brand	Ufree
Color	Bronze
Hair Type	All
Motor Speed	Up to 6500RPM

Charging Time	Approx. 60 minutes
Working Time	Up to 150 minutes
Country of Origin	China

Warranty & Support

Ufree is committed to providing high-quality products and excellent customer service.

- **30-Day Money Back Guarantee:** If you are not satisfied with your purchase, you may return it within 30 days for a full refund.
- **1-Year Warranty:** Your Ufree Beard Trimmer is covered by a 1-year warranty against manufacturing defects.
- **24/7 Customer Support:** For any questions, concerns, or assistance, our customer service team is available 24 hours a day, 7 days a week.

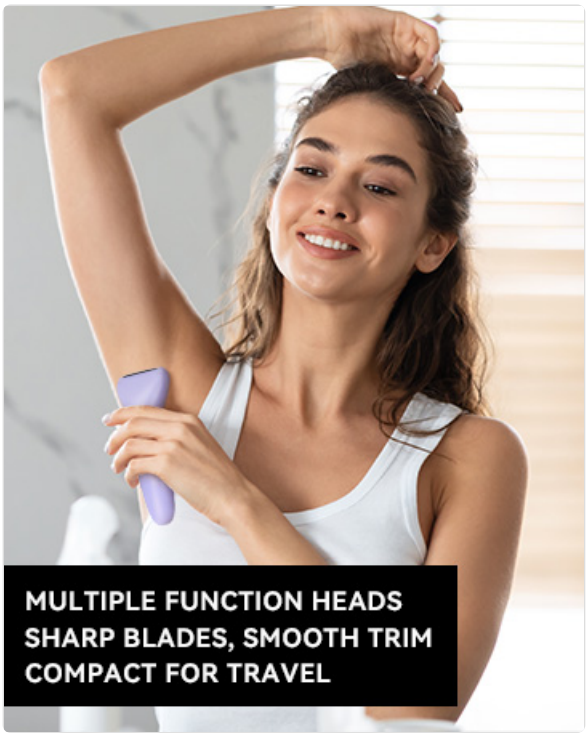


Image: Ufree's commitment to customer satisfaction, highlighting money-back guarantee, support, and warranty.

For more detailed information, please refer to the official User Manual (PDF).

Visit the Ufree Store for more products and information.