oneisall RK-034 G

oneisall Cordless Horse Clippers Model RK-034 G Instruction Manual

Model: RK-034 G

1. Introduction

Thank you for choosing the oneisall Cordless Horse Clippers. This manual provides essential information for the safe and effective use, maintenance, and care of your grooming device. Please read it thoroughly before first use and retain it for future reference.



Image 1.1: The oneisall Cordless Horse Clippers, Model RK-034 G, in gold finish, alongside a horse.

2. Safety Information

To ensure safe operation and prevent injury or damage, please adhere to the following safety guidelines:

- Keep the product away from water. Do not use it in wet conditions or near bathtubs, showers, basins, or other vessels containing water.

- This device is not intended for use on infants.
- Exercise caution around the cutting blades to prevent skin irritation or injury. The blades are sharp.
- Follow proper cleaning and maintenance procedures as outlined in this manual.
- Avoid using the device near an electrical outlet or other sources of electricity while grooming to prevent accidental contact or damage.
- Ensure the clipper is fully charged before use to maintain optimal performance and prevent snagging.
- Do not attempt to disassemble or repair the clipper yourself. Contact customer support for assistance.

3. Package Contents

Upon opening your oneisall Cordless Horse Clippers kit, you should find the following items:

- oneisall Cordless Horse Clippers (Model RK-034 G)
- 5 Guide Guards (1.5mm, 3mm, 6mm, 9mm, 12mm)
- Charging Cable (Type-C)
- Cleaning Brush
- Comb
- Scissors
- Clipper Oil



Image 3.1: Visual representation of the complete grooming kit, including clippers, guide guards, charging cable, cleaning brush, comb, scissors, and oil.

4. Product Specifications

Feature	Specification
Model Number	RK-034 G
Product Dimensions	7.87 x 5.91 x 1.57 inches

Feature	Specification
Item Weight	0.68 Kilograms (1.5 Pounds)
Battery Type	1 Lithium Ion battery (required)
Battery Capacity	2000mAh
Charging Time	Approximately 3 hours
Operating Time	Approximately 180 minutes (3 hours)
Power Source	Battery Powered (Cordless and Corded use)
Speed Settings	2 Speeds
Noise Level	Below 55 dB
Blade Material	Stainless Steel
Color	Gold



Image 4.1: Detailed dimensions and model number of the clipper.



Image 4.2: Illustration of the clipper's long battery life and 2000mAh capacity.

5. Setup

5.1 Charging the Clippers

1. Before first use, fully charge the clippers. Connect the Type-C charging cable to the clipper's charging port and plug the other end into a suitable USB power adapter (not included).
2. The charging indicator light will illuminate during charging. Once fully charged (approximately 3 hours), the indicator may change color or turn off, depending on the model.
3. A full charge provides approximately 180 minutes of operating time.

5.2 Attaching Guide Guards

1. Ensure the clipper is turned off before attaching or detaching guide guards.
2. Select the desired guide guard (1.5mm, 3mm, 6mm, 9mm, or 12mm) based on the desired hair length.
3. Align the guide guard with the clipper blade and push it firmly until it clicks into place.
4. To remove, gently pull the guide guard away from the blade.

6. Operating Instructions

6.1 Preparing for Grooming

- Ensure the horse's coat is clean, dry, and free of tangles or mats. Brush the coat thoroughly before clipping.
- Apply a few drops of clipper oil to the blades before each use to ensure smooth operation and prolong blade life.

6.2 Powering On and Speed Selection

1. Press the power button to turn on the clippers.
2. The clippers feature two speed settings. Press the power button again to switch between speeds. Select a suitable

power level based on the thickness of the horse's coat.

6.3 Grooming Technique

- Hold the clippers firmly and move them against the direction of hair growth for an even cut.
- Use smooth, overlapping strokes. Avoid pressing too hard, which can cause irritation or uneven cutting.
- For matted or very thick hair, use the higher speed setting. The powerful motor is designed to cut through dense coats without snagging.
- The low noise level (below 55 dB) helps keep horses calm during grooming.

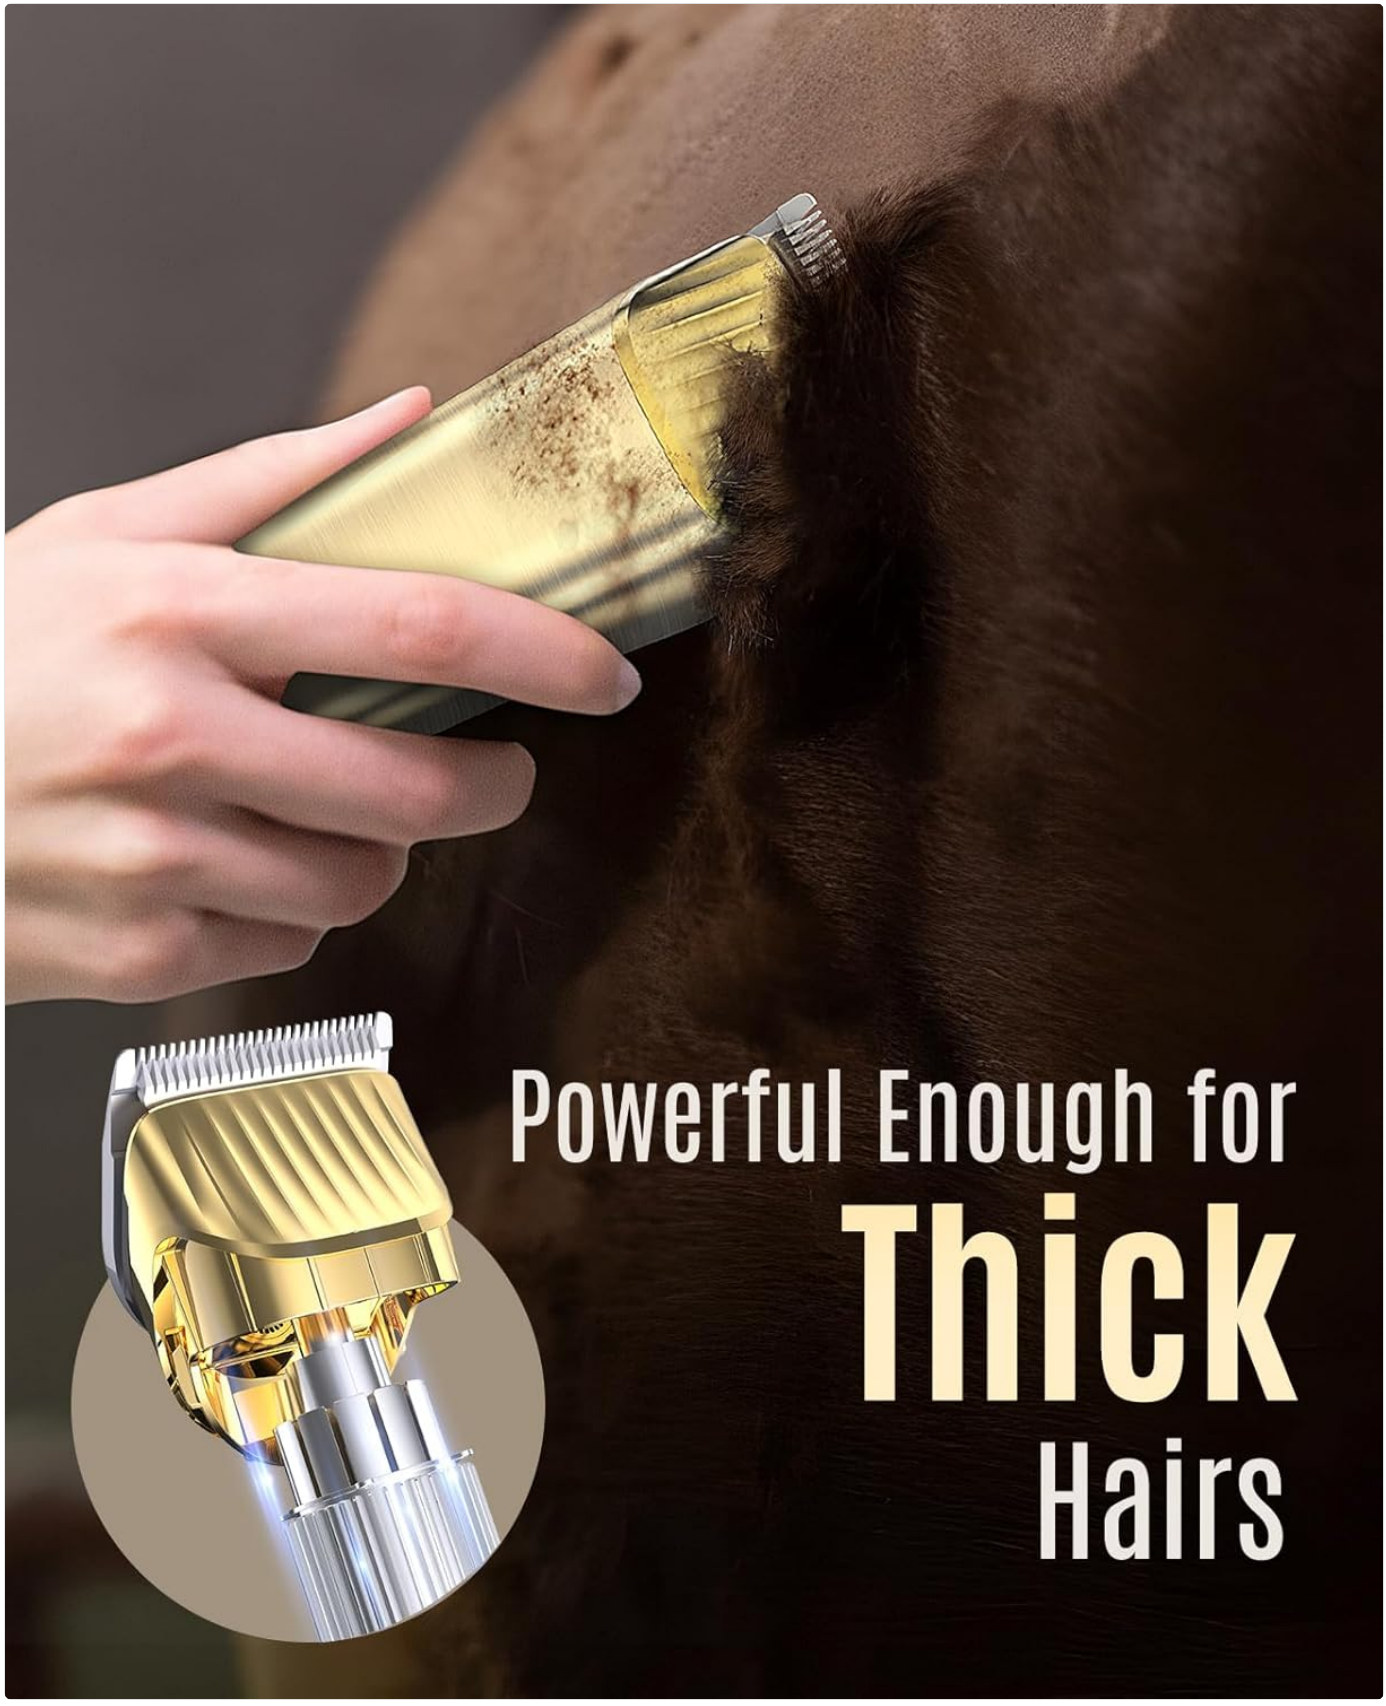


Image 6.1: The clipper demonstrating its ability to cut through thick horse hair effectively.



Image 6.2: Graphic illustrating the low noise level of the clippers, designed to prevent startling animals.



Image 6.3: Examples of different horse clipping styles achievable with the clippers.

7. Maintenance

7.1 Cleaning the Blades

1. After each use, turn off the clippers and detach the blade.
2. Use the provided cleaning brush to remove any trapped hair from the blades and the clipper head.
3. The detachable metal blade is washable. Rinse the blade under running water to thoroughly clean it. Ensure the blade is completely dry before reattaching or storing.
4. Apply a few drops of clipper oil to the blades after cleaning and drying to lubricate and protect them.



Image 7.1: Steps for detaching and washing the metal blade for easy cleaning.

7.2 General Care and Storage

- Store the clippers and accessories in a dry, cool place, away from direct sunlight and moisture.
- Keep the charging port clean and free of debris.
- Regularly check the charging cable for any signs of damage. If damaged, discontinue use and replace it.

8. Troubleshooting

Problem	Possible Cause	Solution
Clippers not turning on	Low battery; Faulty power button	Charge the clippers fully; Contact customer support if charging does not resolve the issue.
Clippers pulling or snagging hair	Blades are dull; Hair is matted/tangled; Insufficient lubrication; Low battery	Clean and oil blades; Brush hair thoroughly before clipping; Recharge clippers; Consider replacing blades if dull.
Reduced cutting performance	Hair buildup in blades; Blades are dull; Low battery	Clean blades thoroughly; Oil blades; Recharge clippers; Replace blades if necessary.
Clippers getting hot	Extended use; Insufficient lubrication; Hair buildup	Allow clippers to cool down; Clean and oil blades; Ensure proper ventilation.
Charging indicator not working	Faulty charging cable/adapter; Clipper malfunction	Try a different Type-C cable and USB adapter; Contact customer support.

9. Warranty and Support

oneisall offers a 2-year warranty for this product. For warranty claims, technical support, or any inquiries, please contact oneisall customer service. You may also consider purchasing extended protection plans for additional coverage.

- **2-Year Protection Plan:** Available for purchase.
- **3-Year Protection Plan:** Available for purchase.
- **Customer Service:** Refer to the oneisall official website or your purchase platform for contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question