Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

CJOY 42-1113

CJOY 107cm White Ceiling Fan with Light User Manual

Model: 42-1113

1. Introduction

Thank you for choosing the CJOY 107cm White Ceiling Fan with Light. This product combines the functionality of a ceiling fan and an LED light, designed for comfort and energy efficiency. It features a DC reversible motor, 6 speed settings, 3 color temperature memory, dimmable light, and a sleep mode, all controllable via a multi-function remote. Please read this manual thoroughly before installation and use to ensure proper operation and safety.

2. Safety Information

- Always turn off the power at the main circuit breaker before installation, cleaning, or maintenance.
- Ensure all electrical connections comply with local codes and ordinances, as well as national electrical codes. If you are unfamiliar with electrical wiring, consult a qualified electrician.
- The fan must be mounted with a minimum of 2.3 meters (7.5 feet) clearance from the floor to the fan blades.
- Ensure the mounting structure can support the weight of the fan (approximately 4.9 kg).
- Do not bend the blade holders during installation or cleaning.
- Do not insert objects into the path of the fan blades while the fan is operating.
- This product is designed for indoor use. While it is rated for humid environments, avoid direct exposure to rain.

3. Package Contents

Verify that all components are present and undamaged before proceeding with installation.

- LED Light Module
- Fan Blades (3 pieces)
- Remote Control
- Receiver
- Lampshade
- Mounting Screws and Hardware
- Downrod

- Instruction Manual



Figure 3.1: Included Components

4. Setup (Installation)

Most of the ceiling fan's assembly is pre-done, making the remaining installation steps straightforward. For optimal performance and safety, follow these guidelines:

1. **Power Disconnection:** Before starting, ensure the power supply to the installation area is completely turned off at the circuit breaker.
2. **Mounting Bracket:** Securely attach the mounting bracket to the ceiling joist or a suitable electrical junction box capable of supporting the fan's weight.
3. **Wiring:** Connect the electrical wires according to the provided wiring diagram. Ensure all connections are tight and properly insulated.
4. **Fan Assembly:** Attach the fan motor assembly to the mounting bracket.
5. **Blade Installation:** When installing the fan blades, it is recommended to loosely attach all three blades first. Once all blades are in position, tighten all screws evenly to ensure proper balance and prevent vibrations.
6. **Lampshade and LED:** Install the LED light module and then secure the lampshade.
7. **Remote Receiver:** Ensure the remote control receiver is correctly wired and placed within the canopy.

While installation is generally designed to be completed within 30 minutes, some users may find certain steps challenging. If you encounter difficulties, consider consulting a professional electrician or referring to online video tutorials for similar ceiling fan installations.

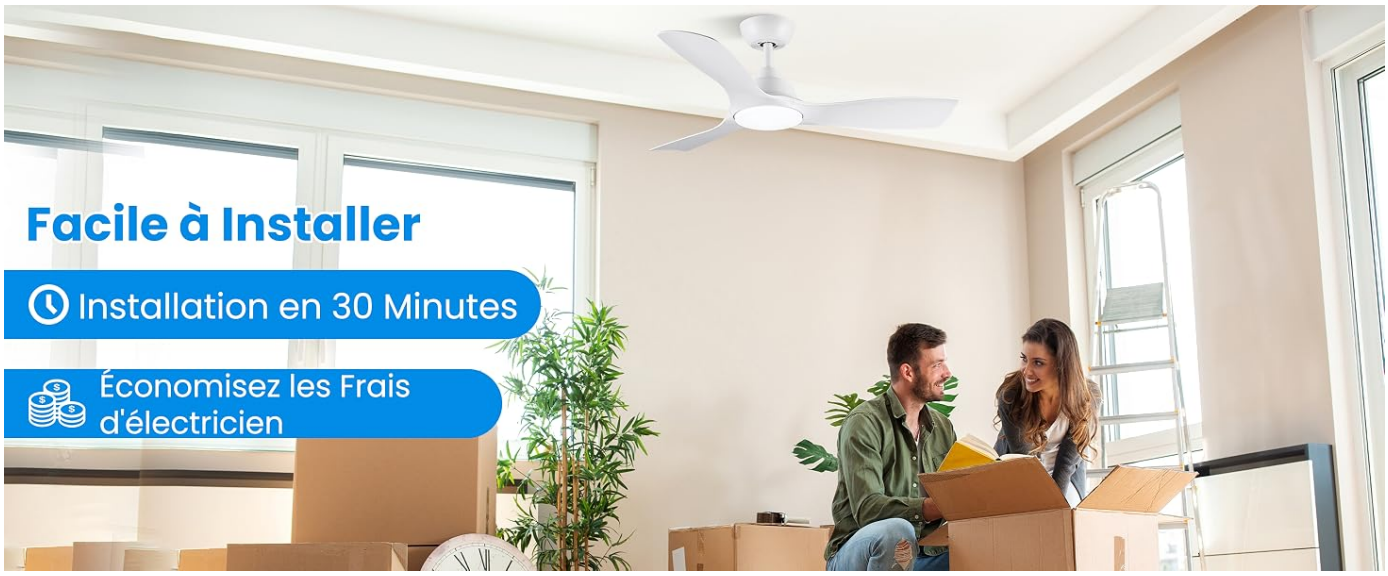


Figure 4.1: Easy Installation Overview

5. Operating Instructions

The CJOY ceiling fan is operated using the included multi-function remote control. Ensure batteries are installed correctly in the remote.

5.1 Fan Operation

- **Power On/Off:** Press the central button (often depicted as a fan icon) to turn the fan on or off.
- **Speed Control:** Use buttons labeled "1" through "6" to select one of the six available fan speeds. Speed 1 is the lowest, and Speed 6 is the highest.
- **Sleep Mode:** Press the moon icon button to activate Sleep Mode. In this mode, the fan cycles automatically through speeds 1, 2, and 3 every 20 seconds, simulating a natural breeze for comfortable sleep.



Figure 5.1: CJOY Ceiling Fan with Remote Control



Figure 5.2: Fan Speed and Timer Functions

5.2 Light Operation

- **Light On/Off:** Use the "LIGHT ON" and "LIGHT OFF" buttons to control the light.
- **Color Temperature Adjustment:** Press "WW" for Warm White (3000K), "NW" for Natural White (4200K), and "DW" for Cool White (6500K).
- **Continuous Color Adjustment:** Long-press "WW" to continuously adjust the color temperature from Cool White (6500K) to Warm White (3000K). Long-press "DW" to adjust from Warm White (3000K) to Cool White (6500K).
- **Brightness Adjustment (Dimmable):** Use the "+" and "-" buttons to adjust the light brightness from 10% to 100%. The light output is a minimum of 200lm and a maximum of 2900lm.

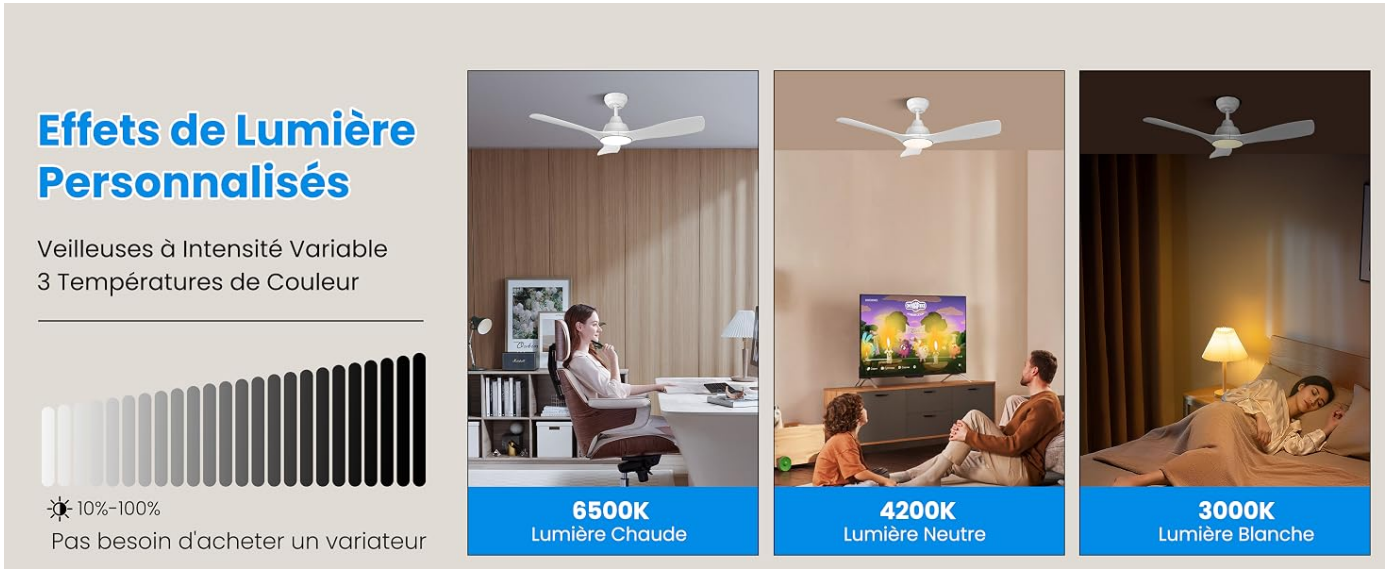


Figure 5.3: Customizable Light Effects

5.3 Timer Function

The fan includes a timer function to automatically turn off after a set period:

- Press "1H" for 1 hour, "3H" for 3 hours, or "6H" for 6 hours.
- Once the timer is set, the fan will automatically turn off at the end of the selected duration.
- **Important Note:** After setting the timer, avoid pressing any other buttons on the remote, as this may invalidate the timer setting.



Figure 5.4: Timer Function for Night Use

5.4 Reversible DC Motor (Seasonal Use)

The fan features a reversible DC motor, allowing for year-round use:

- **Summer Mode (Counter-clockwise rotation):** The fan blades push air downwards, creating a cooling effect and accelerating indoor airflow.
- **Winter Mode (Clockwise rotation):** The fan blades draw warm air upwards from the ceiling, distributing it evenly throughout the room to help circulate heat.
- To switch modes, press the reverse arrow button on the remote control.



Figure 5.5: Reversible Motor for Seasonal Comfort

5.5 Memory Function

The fan's light settings include a memory function:

- To save a light setting (color temperature and brightness), select your desired setting and keep the light on for more than 3 seconds.
- Then, turn off the light and ensure it remains off for at least 10 seconds.
- The next time you turn on the light, it will recall your last saved setting.
- **Note:** If the light is turned back on less than 10 seconds after being turned off, the color temperature may change.



Figure 5.6: Automatic Memory Function

5.6 Remote Control and Wall Switch

The fan is primarily controlled by the multi-function remote. A wall switch (not included) can be used to turn the light and fan

on/off, but it will not allow for intensity or speed adjustments. The remote control comes with a wall-mountable holder for convenient storage.



Figure 5.7: Control Modes (Remote vs. Wall Switch)

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your ceiling fan.

- **Cleaning:** To clean the fan, wipe the blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the finish. Ensure the power is off before cleaning.
- **Blade Balance:** If the fan wobbles, check that all blade screws are securely tightened. An unbalanced fan can cause noise and reduce efficiency.
- **LED Light Module:** The LED light module is replaceable. If the light stops working, consult the warranty information or contact customer support for a replacement module.



Figure 6.1: Replaceable LED Light Kit

7. Troubleshooting

If you experience issues with your CJOY ceiling fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power supply; Loose wiring; Remote control battery dead.	Check circuit breaker; Verify all wire connections; Replace remote control batteries.
Light does not work	Loose wiring; LED module failure; Remote control battery dead.	Check wiring connections; Contact support for LED module replacement; Replace remote control batteries.
Fan wobbles or makes excessive noise	Loose blade screws; Unbalanced blades; Improper mounting.	Ensure all blade screws are tightened evenly; Check mounting bracket for secure installation; Re-balance blades if necessary.
Remote control not responding	Dead batteries; Receiver issue; Obstruction.	Replace remote batteries; Ensure no obstructions between remote and fan; Contact support if issue persists.
Timer function not working	Other buttons pressed after setting timer.	Ensure no other buttons are pressed on the remote after activating the timer. Reset the timer if needed.

If the problem persists after attempting these solutions, please contact CJOY customer support.

8. Specifications

Feature	Detail
Brand	CJOY
Model Number	42-1113
Color	White
Dimensions (L x W x H)	107 x 107 x 32 cm (42 x 42 x 12.6 inches)
Weight	4.9 Kilograms
Motor Type	Brushless DC Motor (Energy-saving)
Number of Speeds	6
Noise Level	Below 35 dB (Ultra-silent)
Airflow	Up to 4500 CFM
Power Consumption	28 Watts (Max)
Voltage	220 Volts (50Hz)
Light Type	Integrated LED (Dimmable)
Color Temperature	3000K (Warm White), 4200K (Natural White), 6500K (Cool White)

Feature	Detail
Lumen Output	180-2900 LM
Control Method	Remote Control
Material	Acrylonitrile Butadiene Styrene (ABS), Metal Blades
Certifications	CE Compliant

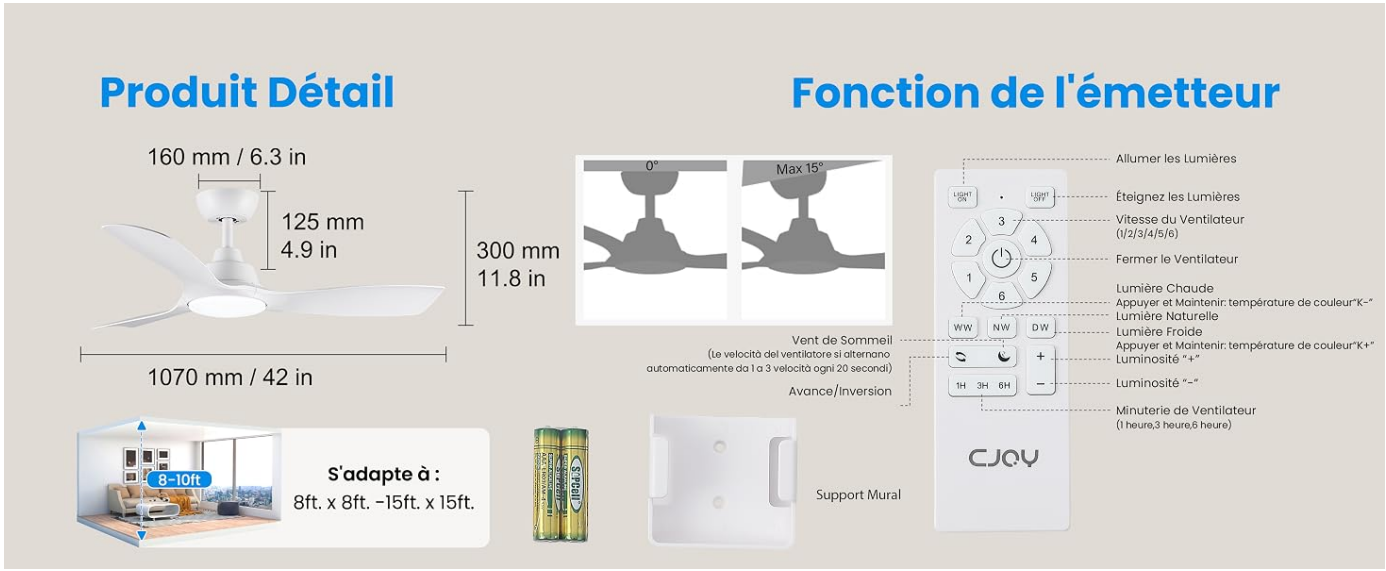


Figure 8.1: Product Dimensions and Key Specifications

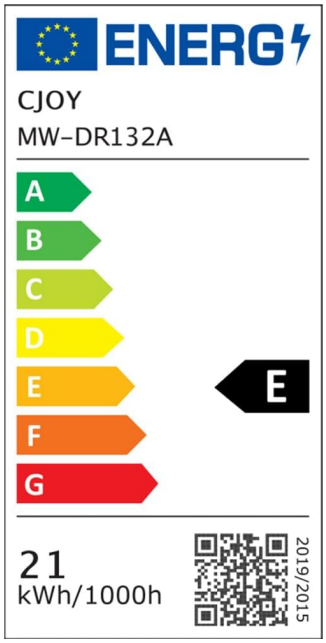


Figure 8.2: Energy Label

Figure 8.3: Product Information Sheet. For more details, visit the EPREL database.

9. Warranty & Support

CJOY is committed to customer satisfaction and provides comprehensive support for its products.

- **Warranty:** This product comes with a 24-month (2-year) worry-free warranty from the date of purchase.
- **Technical Support:** We offer 24-hour technical assistance. Should you encounter any issues during use or installation, please do not hesitate to contact us.



Figure 9.1: Warranty and Support Information

© 2026 CJOY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BN67DL8Q

More documents and user manuals: **https://manuals.plus/**