Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

MOFII SMK-666395AG

MOFII Wireless Keyboard and Mouse Set 666 User Manual

Model: SMK-666395AG

Introduction

This manual provides instructions for the proper setup, operation, and maintenance of your MOFII Wireless Keyboard and Mouse Set 666. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.
The MOFII Wireless Keyboard and Mouse Set 666 offers a reliable 2.4GHz wireless connection, ergonomic design, and compatibility with Windows operating systems, making it suitable for laptop users.

Package Contents

Verify that all items are present in the package:

- MOFII Wireless Keyboard
- MOFII Wireless Mouse (Optical, Right-Handed)
- 2.4GHz USB Receiver
- User Manual (this document)



Image: The MOFII Wireless Keyboard and Mouse Set 666, showing the full-size keyboard and the compact mouse in beige and peach tones.

Setup Instructions

1. **Insert Batteries:**
   Locate the battery compartments on the underside of both the keyboard and the mouse. Insert the required

batteries. Ensure correct polarity (+/-).

Note: The product specifications indicate "Rechargeable Batteries" and "Batteries Required: No". This suggests either built-in rechargeable batteries or included non-rechargeable batteries. If built-in, ensure they are charged via the provided cable (if any). If included, simply insert them.

2. **Connect USB Receiver:**
   Plug the 2.4GHz USB receiver into an available USB port on your computer or laptop. Your operating system (Windows) should automatically detect and install the necessary drivers.

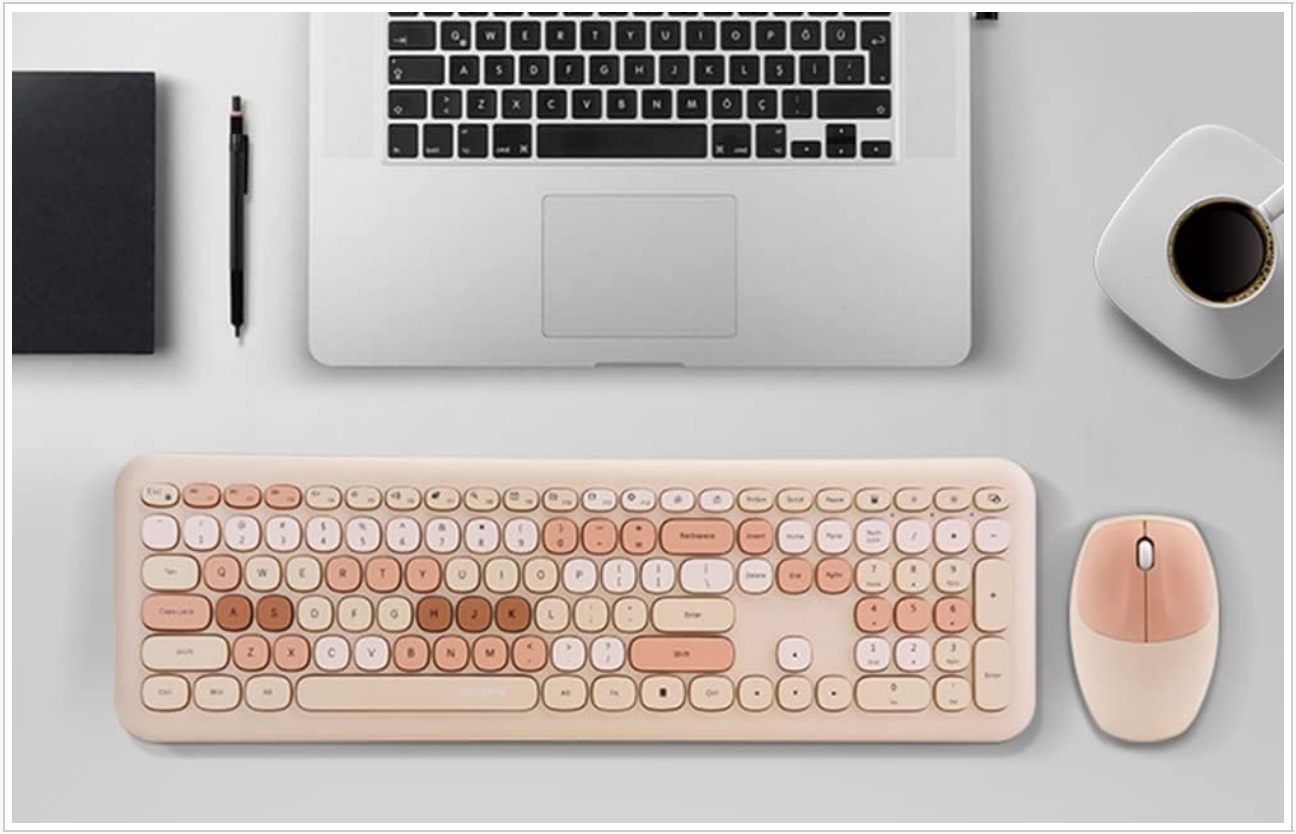


Image: The MOFII Wireless Keyboard and Mouse Set 666 positioned on a desk next to a laptop, illustrating a typical setup.

3. **Power On:**
   Turn on the keyboard and mouse using their respective power switches, usually located on the underside. The devices should connect automatically to the receiver.
4. **Test Functionality:**
   Open a text editor or browser to test the keyboard input and mouse movement/clicks. If the devices do not respond, refer to the Troubleshooting section.

Operating Instructions

Keyboard Usage

- **Standard Typing:** Use the QWERTY layout for standard text input.
- **Function Keys:** The top row of keys (F1-F12) may have secondary functions (e.g., media control, volume, brightness) accessible by pressing the **Fn** key simultaneously. Refer to the keycap legends for specific functions.
- **Indicator Lights:** Check for Caps Lock, Num Lock, and Scroll Lock indicator lights, typically located above the numeric keypad.

Mouse Usage

- **Movement:** The optical sensor provides precise tracking on most surfaces.
- **Buttons:** Standard left-click, right-click, and scroll wheel functionality.

- **Ergonomics:** The mouse is designed for right-hand use, promoting a comfortable grip during extended periods.

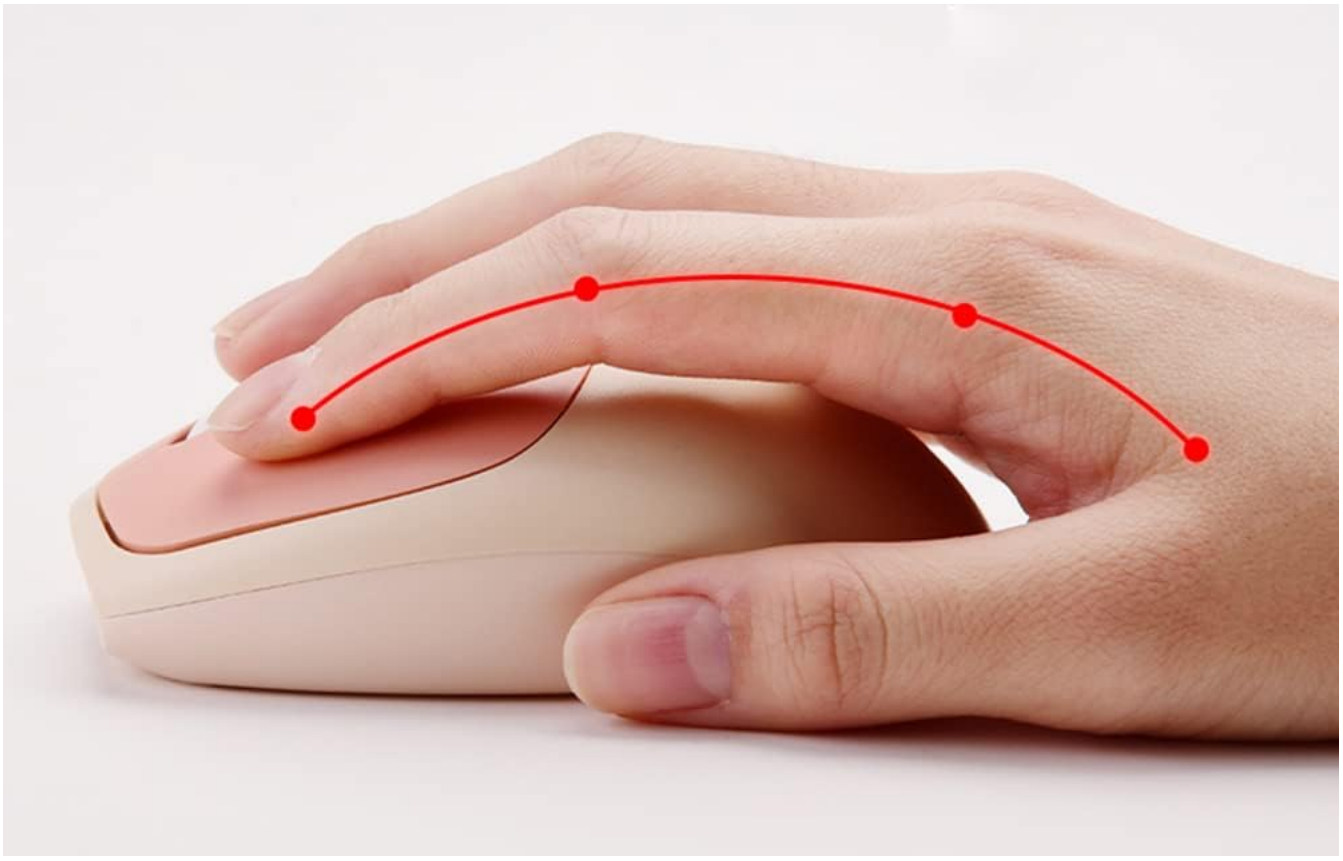


Image: A hand resting comfortably on the MOFII wireless mouse, highlighting its ergonomic design for right-handed users.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the keyboard and mouse. For stubborn dirt, a slightly damp cloth with mild soap can be used, ensuring no liquid enters the devices.
- **Battery Replacement/Charging:**
  - If using replaceable batteries, replace them when performance degrades.
  - If the devices have built-in rechargeable batteries, connect them to a USB power source using the appropriate cable (not specified if included, assume standard micro-USB or USB-C if applicable).
- **Storage:** When not in use for extended periods, turn off the devices to conserve battery life. Store in a cool, dry place.

Troubleshooting

Problem	Solution

Problem	Solution
Keyboard/Mouse not responding	• Ensure the devices are powered on. • Check battery levels and replace/recharge if necessary. • Verify the USB receiver is securely plugged into a working USB port. • Try plugging the USB receiver into a different USB port. • Restart your computer. • Ensure the devices are within the effective range of the receiver (typically up to 10 meters).
Lag or intermittent connection	• Move the devices closer to the USB receiver. • Remove any large metal objects or other wireless devices that may cause interference. • Ensure batteries are not low.
Mouse cursor erratic or not moving smoothly	• Clean the optical sensor on the underside of the mouse. • Use the mouse on a clean, non-reflective surface or a mouse pad.

Specifications

Brand	MOFII
Model	SMK-666395AG
Connectivity	2.4GHz Wireless (via USB Receiver)
Compatible OS	Windows
Compatible Devices	Laptop
Keyboard Layout	QWERTY
Mouse Tracking	Optical
Mouse Hand Orientation	Right
Power Source	Rechargeable Batteries (internal or included)
Special Features	Portable, Ergonomic Design
Dimensions (Package)	45.1 x 14.5 x 7.3 cm
Weight (Package)	890 g

Warranty and Support

MOFII products are designed for quality and reliability. For warranty information and technical support, please refer to the warranty card included with your product or visit the official MOFII website. Keep your purchase receipt as proof of

purchase for warranty claims.
For further assistance, you may contact MOFII customer service through their official channels.

© 2025 MOFII. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BN91Y3YX

More documents and user manuals: **https://manuals.plus/**