Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

KITCHMIX EP-SV0011-2

KITCHMIX 2-Slice Retro Stainless Steel Toaster

MODEL: EP-SV0011-2

User Instruction Manual

1. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

2. Product Overview

The KITCHMIX 2-Slice Retro Stainless Steel Toaster is designed for efficient and convenient toasting. It features extra-wide slots, multiple browning settings, and specialized functions for various bread types.

Key Features:

- **1.5-inch Extra-Wide Slots:** Accommodates thick-sliced bread, bagels, and more.
- **6 Browning Settings:** Adjustable browning levels from light (70 seconds) to dark (220 seconds) to suit individual preferences.
- **High-Lift Lever:** Allows for easy removal of smaller items without touching hot surfaces.
- **Removable Crumb Tray:** Facilitates easy cleaning and keeps countertops tidy.
- **Cord Wrap Storage:** Integrated storage for the power cord to maintain a neat counter space.
- **Intelligent Safety Protection:** Includes anti-overheat and anti-leakage protection for enhanced safety during operation.
- **Special Functions:** Dedicated buttons for Cancel, Bagel, and Defrost.
- **Retro Design:** Stylish stainless steel construction with a vintage aesthetic.

Components:

1. Toasting Slots
2. High-Lift Lever
3. Cancel Button
4. Bagel Button
5. Defrost Button
6. Browning Control Dial (6 settings)
7. Removable Crumb Tray (located at the bottom)



Image: KITCHMIX 2-Slice Toaster with 1.5 inch extra wide slots, toasting two slices of bread.



Image: Close-up of KITCHMIX 2-Slice Toaster showing Cancel, Bagel, and Defrost buttons.

3. Setup

1. **Unpacking:** Carefully remove the toaster from its packaging. Remove all packing materials, including any inserts from the toasting slots.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure adequate ventilation around the toaster.
3. **First Use:** Before first use, operate the toaster without bread on the highest browning setting (Level 6) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal and will dissipate. Allow the toaster to cool completely.
4. **Power Connection:** Plug the power cord into a standard 110V AC electrical outlet.

4. Operating Instructions

Basic Toasting:

1. **Insert Bread:** Place up to two slices of bread into the toasting slots.
2. **Select Browning Level:** Turn the browning control dial to your desired setting (1-6). Level 1 is the lightest (approx. 70 seconds), and Level 6 is the darkest (approx. 220 seconds).
3. **Start Toasting:** Press the high-lift lever down until it locks into place. The toaster will begin toasting.
4. **Automatic Pop-Up:** Once the selected browning cycle is complete, the toast will automatically pop up. Use the high-lift lever to raise the toast further for easy retrieval if needed.

Special Functions:

- **Cancel Function:** To stop the toasting cycle at any time, press the 'CANCEL' button. The toast will immediately pop up.
- **Bagel Function:** For toasting bagels, insert the bagel halves into the slots with the cut side facing inwards. Press the 'BAGEL' button after pressing down the high-lift lever. This function toasts the cut side while gently warming the outer side.
- **Defrost Function:** To toast frozen bread, insert the bread into the slots. Press the 'DEFROST' button after pressing down the high-lift lever. This function will extend the toasting time to properly defrost and toast the bread.



Image: Step-by-step guide for using the KITCHMIX 2-Slice Toaster.



Image: KITCHMIX 2-Slice Toaster with examples of 6 browning settings.

5. Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Clean Crumb Tray:** Pull out the removable crumb tray located at the bottom of the toaster. Discard crumbs and wipe the tray clean with a damp cloth. Dry thoroughly before reinserting.
3. **Clean Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the surface.
4. **Do Not Immerse:** Never immerse the toaster in water or any other liquid.
5. **Storage:** When not in use, the power cord can be wrapped around the cord storage area at the bottom of the toaster for neat storage.



Image: KITCHMIX 2-Slice Toaster with its slide-out crumb tray.

6. Troubleshooting

- **Toaster does not turn on:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the circuit breaker has tripped.
- **Toast is too light/dark:** Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast.
- **Toast is unevenly browned:** Ensure bread slices are centered in the slots. Some bread types may brown differently.
- **Smoke is coming from the toaster:** Immediately press the 'CANCEL' button and unplug the toaster. Remove any lodged food particles after the toaster has cooled. Clean the crumb tray.
- **Lever does not stay down:** Ensure the toaster is plugged into a live electrical outlet. The lever will not lock down if the toaster is not receiving power.

7. Specifications

Feature	Specification
Brand	KITCHMIX
Model Number	EP-SV0011-2
Color	Baby pink
Material	Stainless Steel
Product Dimensions (D x W x H)	4.8"D x 2.94"W x 2.87"H
Wattage	850 watts
Voltage	110V
Slot Count	2
Number of Settings	6
Special Features	High Lift Lever, Removable Crumb Tray, Bagel/Defrost/Cancel Functions

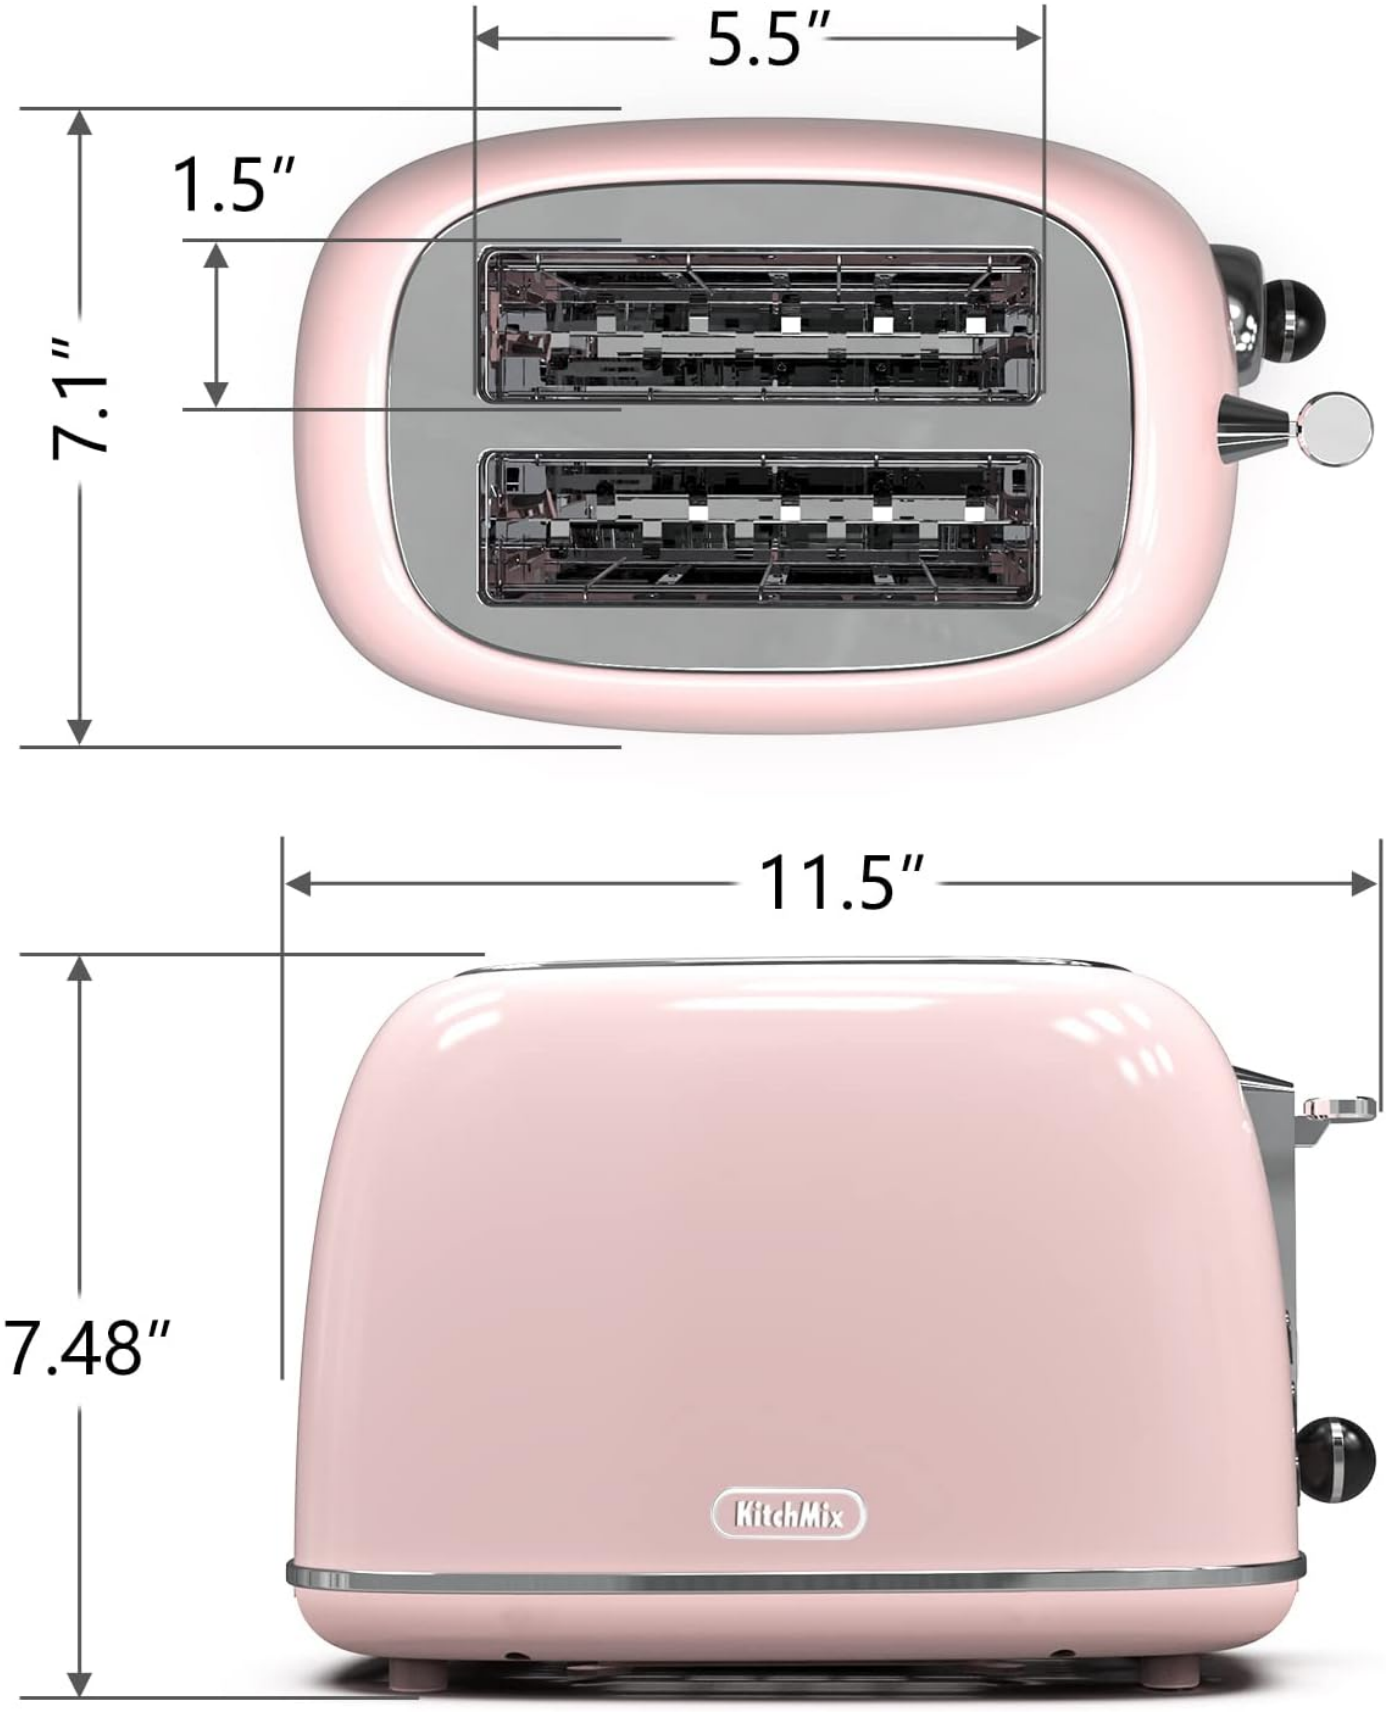


Image: Dimensions of the KITCHMIX 2-Slice Toaster.

8. Warranty and Support

This KITCHMIX toaster comes with a standard manufacturer's warranty. For specific warranty details, please refer to the warranty card included in the product packaging or contact KITCHMIX customer support.

For technical assistance, troubleshooting, or to inquire about replacement parts, please visit the official KITCHMIX website or contact their customer service department. Contact information can typically be found on the product packaging or on

the brand's official website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BNL4PHXW

More documents and user manuals: **https://manuals.plus/**