Starfrit 024616-001-0000

Starfrit 7-in-1 Indoor Air Fryer Grill User Manual

Model: 024616-001-0000

Introduction

Thank you for choosing the Starfrit 7-in-1 Indoor Air Fryer Grill. This versatile appliance combines the functionality of an air fryer and an indoor grill, allowing for healthier cooking with minimal oil. It features 7 preset cooking modes and advanced Air Vortex technology to ensure evenly cooked, crispy results. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance.



Image: The Starfrit 7-in-1 Indoor Air Fryer Grill shown with grilled chicken and a side of fries, demonstrating its dual functionality.

Important Safety Information

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Always ensure the appliance is unplugged from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep children and pets away from the appliance during operation. The exterior surfaces may become hot.
- Ensure adequate ventilation around the appliance during use. Do not place it against a wall or other appliances.
- Do not use accessories or attachments not recommended by the manufacturer.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for purposes other than its intended use.

Product Overview and Components

Familiarize yourself with the various parts of your Starfrit 7-in-1 Indoor Air Fryer Grill.



Image: An exploded view diagram showing the main components of the Starfrit Air Fryer Grill, including the heat airflow vent, removable non-stick grease pan, air fry cooking basket, heavy-duty cast aluminum grill plate, and the LED display screen with touch controls.

- **Main Unit:** Houses the heating element and control panel.
- **Lid:** Features the heat airflow vent and handle.
- **Control Panel:** Digital display with touch controls for time, temperature, and preset modes.
- **Removable Non-Stick Grease Pan:** Collects excess grease and liquids during cooking.
- **Air Fry Cooking Basket:** Used for air frying, roasting, and baking.
- **Heavy-Duty Cast Aluminum Grill Plate:** Used for grilling proteins and vegetables.



Image: A close-up view of the included accessories: the air fry basket and the heavy-duty cast aluminum grill plate, alongside examples of food cooked using each accessory.

Setup

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the appliance.
2. **Initial Cleaning:** Before first use, wash the air fry basket, grill plate, and grease pan in warm, soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the appliance on a stable, heat-resistant, non-metallic surface. Ensure there is at least 6 inches (15 cm) of clearance on all sides and above the appliance for proper ventilation.
4. **Assembly:** Insert the removable non-stick grease pan into the main unit. Then, place either the air fry basket or the grill plate into the grease pan, depending on your cooking method.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. The digital display will illuminate.

Operating Instructions

The Starfrit 7-in-1 Indoor Air Fryer Grill offers 7 versatile cooking modes. Use the digital display and touch controls to select your desired function, time, and temperature.

Preset Cooking Modes

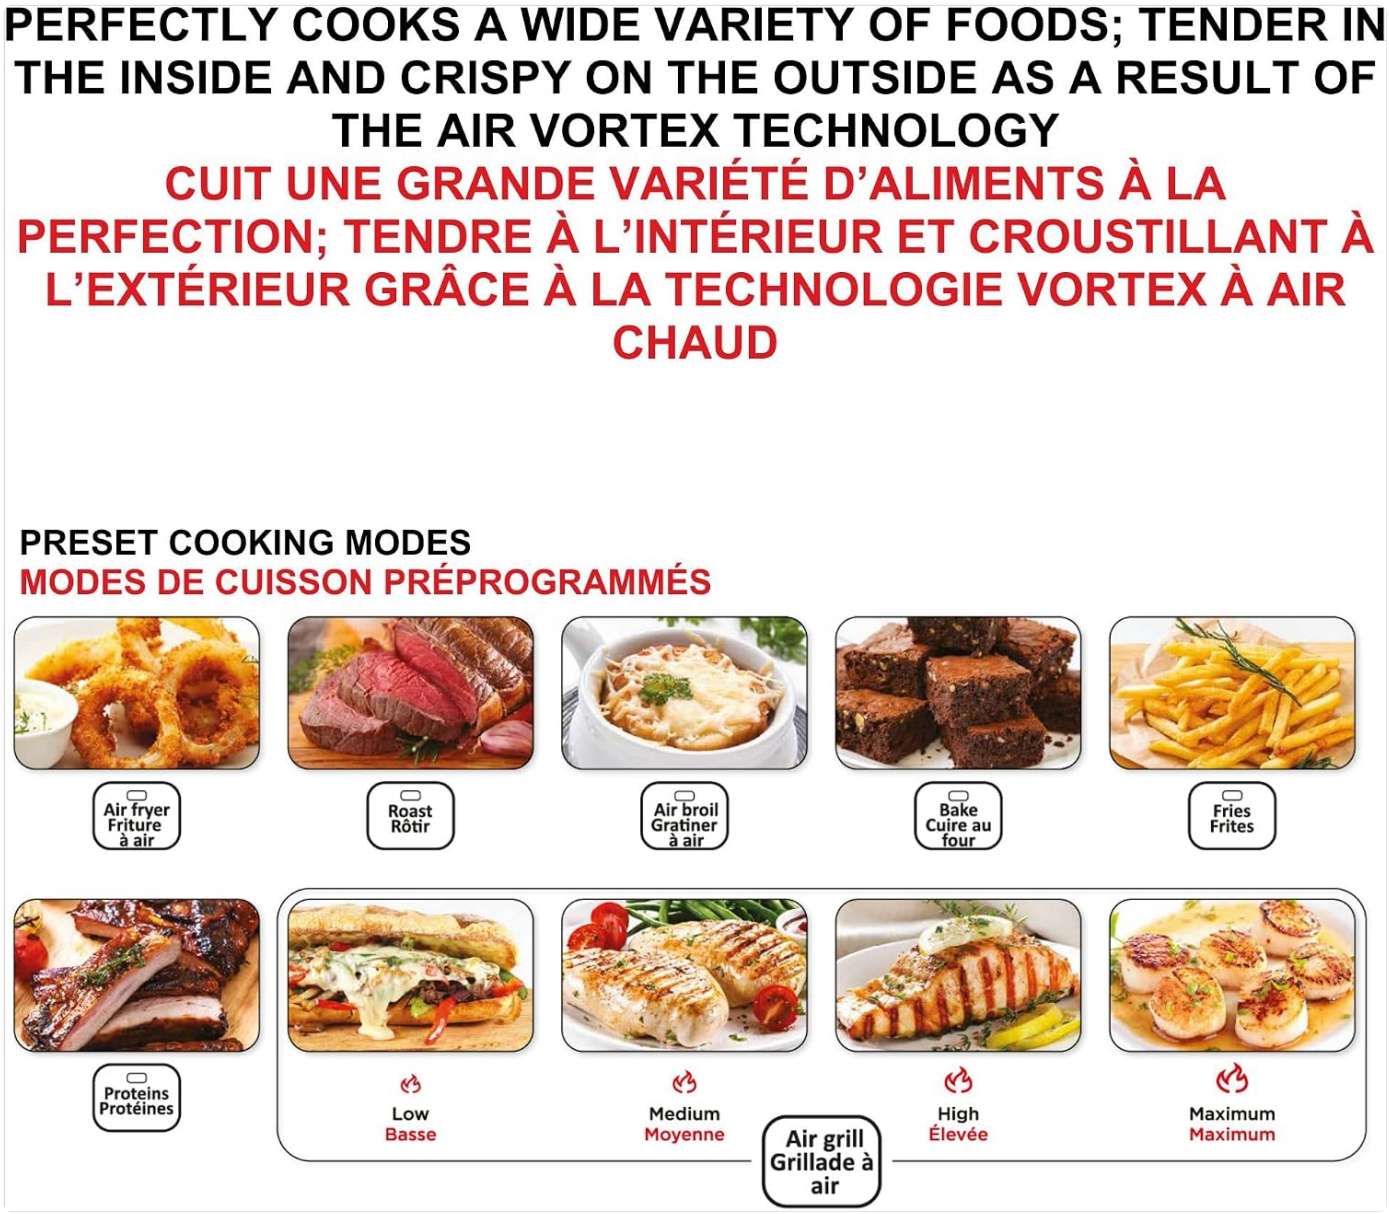


Image: A visual representation of the 7 preset cooking modes available on the Starfrit Air Fryer Grill, including Air Fry, Roast, Air Broil, Bake, Fries, Proteins, and various Air Grill settings (Low, Medium, High, Maximum).

- **Air Fry:** Ideal for achieving crispy textures with little to no oil. Use with the air fry basket.
- **Roast:** Perfect for roasting meats and vegetables. Can be used with either accessory.
- **Air Broil:** For browning and crisping the top layer of food.
- **Bake:** Suitable for baking cakes, pastries, and other baked goods.
- **Fries:** Optimized setting for cooking various types of fries. Use with the air fry basket.
- **Proteins:** Specific setting for cooking different protein sources.
- **Air Grill Settings (Low, Medium, High, Maximum):** For grilling meats, poultry, fish, and vegetables. Use with the grill plate.

General Operation Steps

1. **Prepare Food:** Place your food in the appropriate cooking accessory (air fry basket or grill plate). Do not overfill.
2. **Select Mode:** Press the desired preset cooking mode button on the control panel.

3. **Adjust Time/Temperature:** Use the '+' and '-' buttons to adjust the cooking time and temperature as needed. The appliance can reach temperatures up to 515°F (268°C).
4. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
5. **Monitor Progress:** The digital display will show the remaining cooking time and current temperature.
6. **Shake/Flip (Optional):** For even cooking, especially with air frying, you may pause the cooking cycle to shake or flip the food.
7. **Completion:** The appliance will beep when the cooking cycle is complete. Carefully remove the food using heat-resistant utensils.



Image: The Starfrit Air Fryer Grill with the lid open, showcasing the air fry basket filled with golden-brown fries, illustrating the air frying capability.



Image: The Starfrit Air Fryer Grill with the lid open, showing two steaks cooking on the grill plate, highlighting its indoor grilling function.

Maintenance and Cleaning

Proper cleaning and maintenance will extend the life of your appliance.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Wash Removable Parts:** The air fry basket, grill plate, and grease pan are not dishwasher safe. Wash them by hand with warm, soapy water and a non-abrasive sponge. For stubborn residue, soak the parts before cleaning.
3. **Clean Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads.
4. **Clean Heating Element:** Gently wipe the heating element and interior of the lid with a damp cloth to remove any food residue.
5. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing the appliance.
6. **Storage:** Store the appliance in a cool, dry place.

Troubleshooting

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooking evenly.	Overcrowding the basket/plate; incorrect temperature/time; food not shaken/flipped.	Cook in smaller batches. Adjust temperature and time settings. Shake or flip food halfway through cooking.
White smoke coming from appliance.	Grease residue from previous use; high-fat food.	Clean the grease pan and accessories thoroughly after each use. For high-fat foods, drain excess fat during cooking.
Food is not crispy.	Too much moisture; not enough oil (for air frying); overcrowding.	Pat food dry before cooking. Lightly toss with oil for air frying. Do not overcrowd the basket.

Specifications

Feature	Detail
Model Name	7-in-1 Indoor Air Fryer Grill
Model Number	024616-001-0000
Capacity	6 Liters (6.3 Quarts)
Power	1660 Watts
Voltage	120 Volts (AC)
Temperature Range	Up to 515°F (268°C)
Control Method	Touch Digital Display
Dimensions (D x W x H)	14.96" x 18.5" x 11.26"
Item Weight	14.93 Pounds
Material	Stainless Steel, Plastic (Outer); Aluminum, Stainless Steel (Inner)
Dishwasher Safe Parts	No
Special Feature	Advanced Air Vortex Technology



Image: A diagram illustrating the physical dimensions of the Starfrit 7-in-1 Indoor Air Fryer Grill, showing its height, width, and depth measurements.

Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official Starfrit website. Keep your proof of purchase for warranty claims.

Manufacturer: Starfrit

UPC: 069858246169

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question