FirFurd P421

FirFurd P421 CD Shelf Instruction Manual

Model: P421

1. Introduction

Thank you for choosing the FirFurd P421 CD Shelf. This versatile storage unit is designed to enhance your living space, offering 27 compartments for organizing CDs, DVDs, books, and decorative items. Its height-adjustable shelves and open design make it a practical and elegant addition to any room. This manual provides essential information for safe assembly, proper use, and maintenance to ensure the longevity of your product.

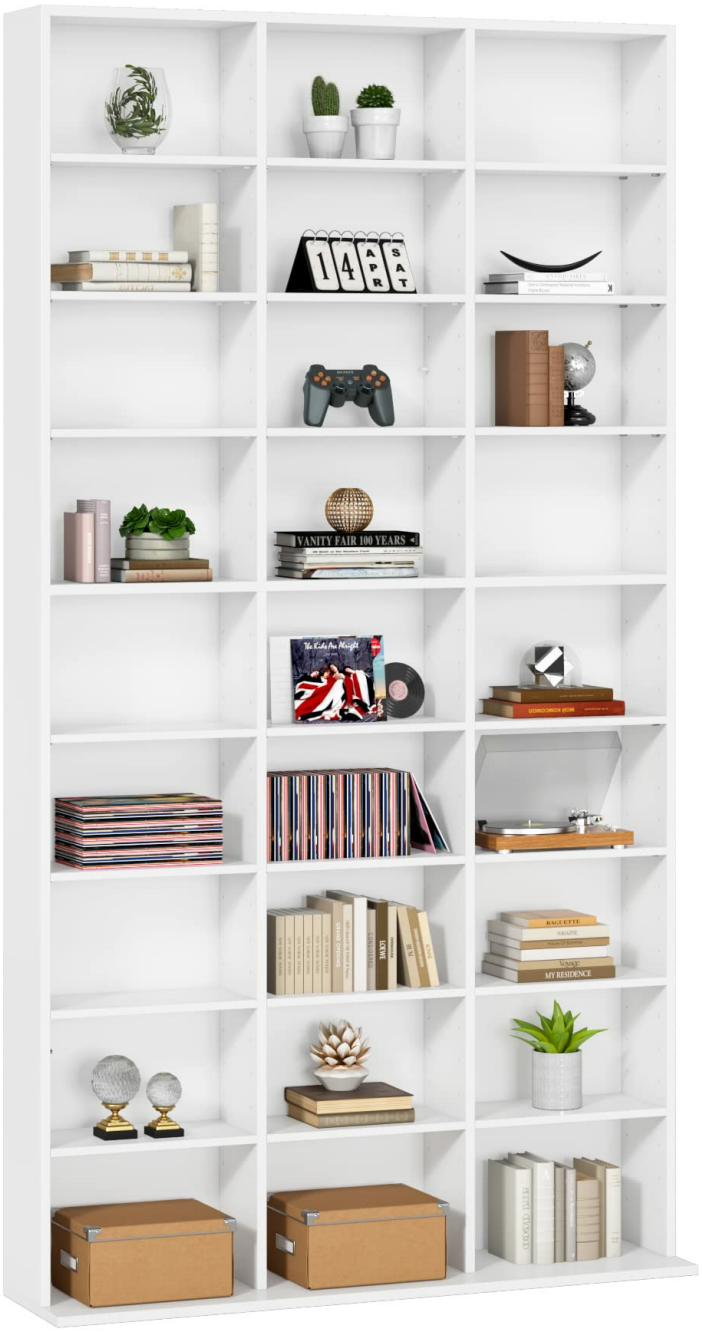


Image 1: The FirFurd P421 CD Shelf integrated into a modern living room.

2. Safety Information

- **Two-Person Assembly:** For safety and ease, assembly of this product is recommended with two people.
- **Anti-Tip Device:** Always secure the shelf to the wall using the provided anti-tip device to prevent accidental tipping, especially in households with children or pets.
- **Weight Distribution:** Distribute weight evenly across the shelves. Avoid placing heavy items exclusively on upper shelves.
- **Stable Surface:** Place the shelf on a flat, stable, and level surface to ensure stability.
- **Avoid Overloading:** Do not exceed the weight capacity of individual shelves or the entire unit.

3. Package Contents

Your FirFurd P421 CD Shelf will be delivered in two separate packages. Please ensure both packages have arrived before beginning assembly. Carefully unpack all components and verify against the included parts list. All parts are numbered for easy

identification during assembly.

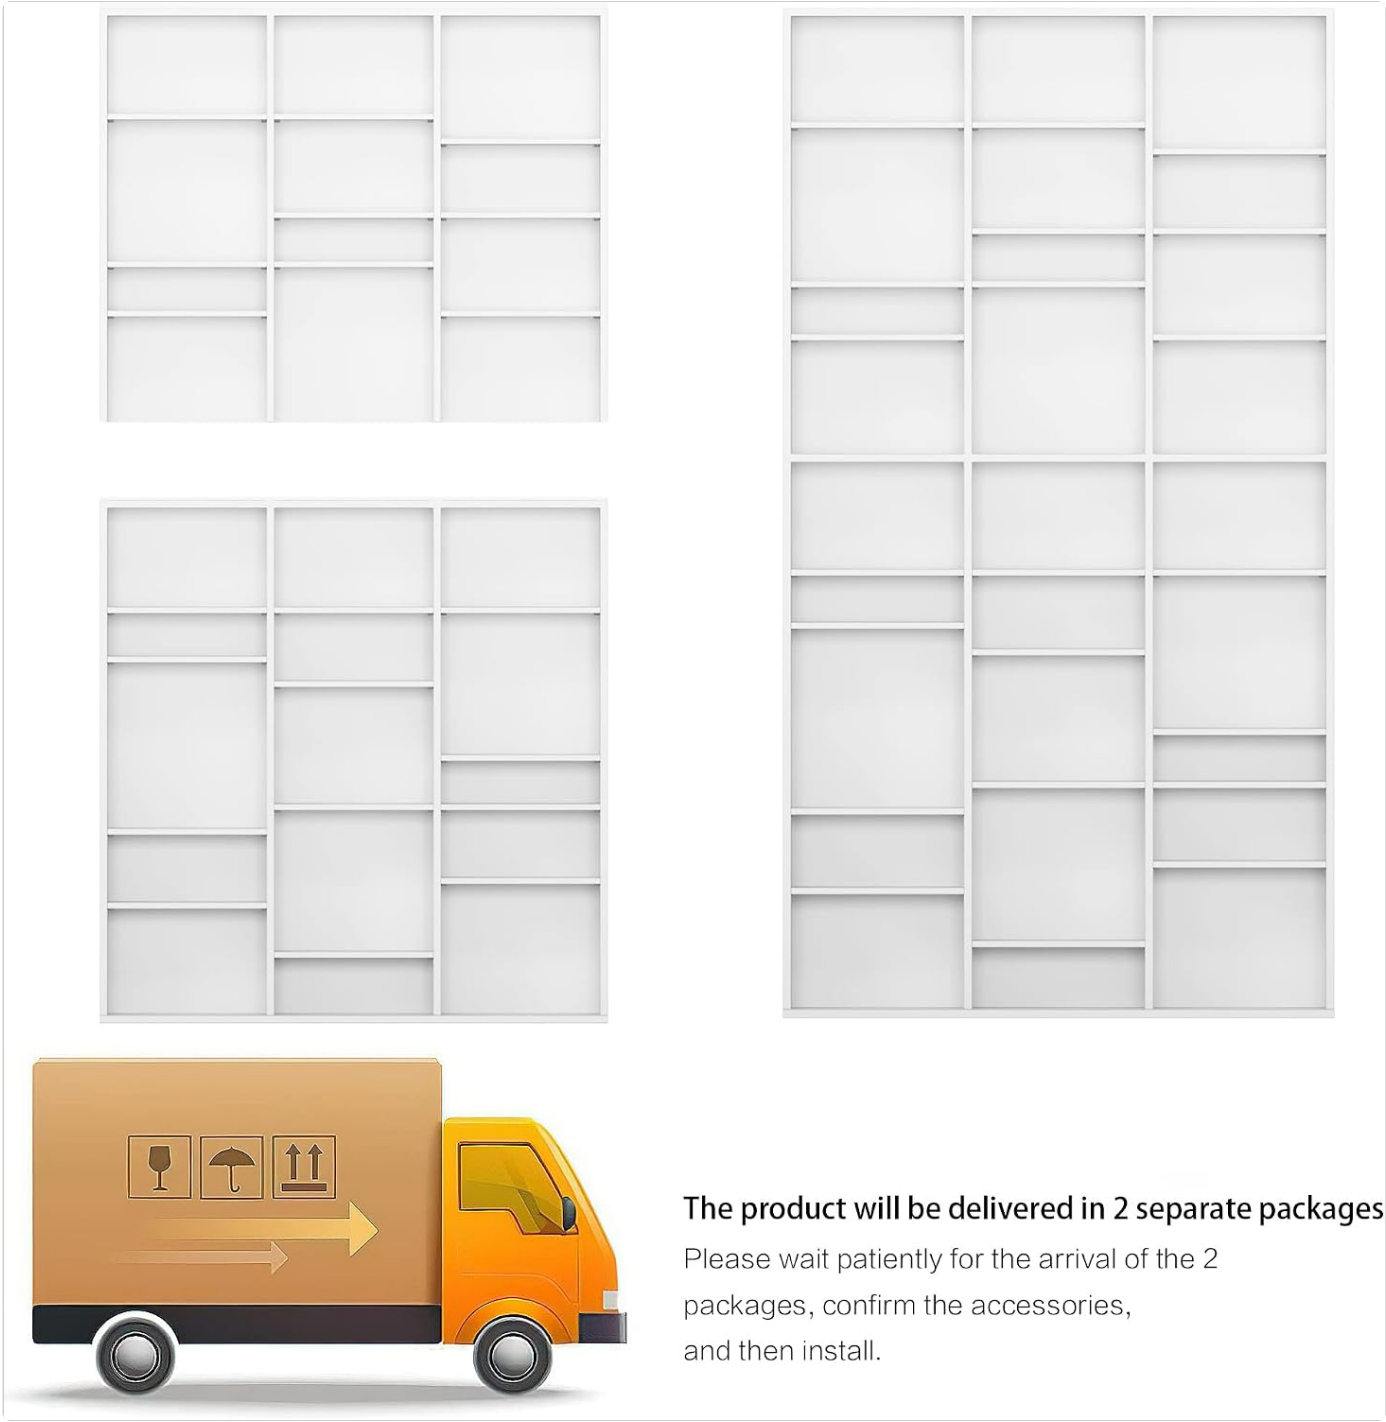


Image 2: The product is delivered in two separate packages. Confirm all accessories before installation.

4. Setup (Assembly Instructions)

Follow the step-by-step instructions provided in the separate assembly guide included with your product. Ensure you have all necessary tools (typically a screwdriver) before starting. All components are clearly numbered to simplify the process.

1. **Preparation:** Lay out all numbered parts on a clean, soft surface to prevent scratches. Identify all hardware.
2. **Frame Assembly:** Connect the main vertical and horizontal panels according to the numbered diagrams in the assembly guide.
3. **Shelf Installation:** Insert the adjustable shelves into the pre-drilled holes at your desired height. There are 21 adjustable shelves out of 27 total.
4. **Baseplate:** Ensure the larger baseplate is correctly installed for enhanced stability.

5. **Wall Anchoring:** Crucially, attach the anti-tip device to the top rear of the shelf and secure it firmly to a wall stud or using appropriate wall anchors. This step is vital for safety.

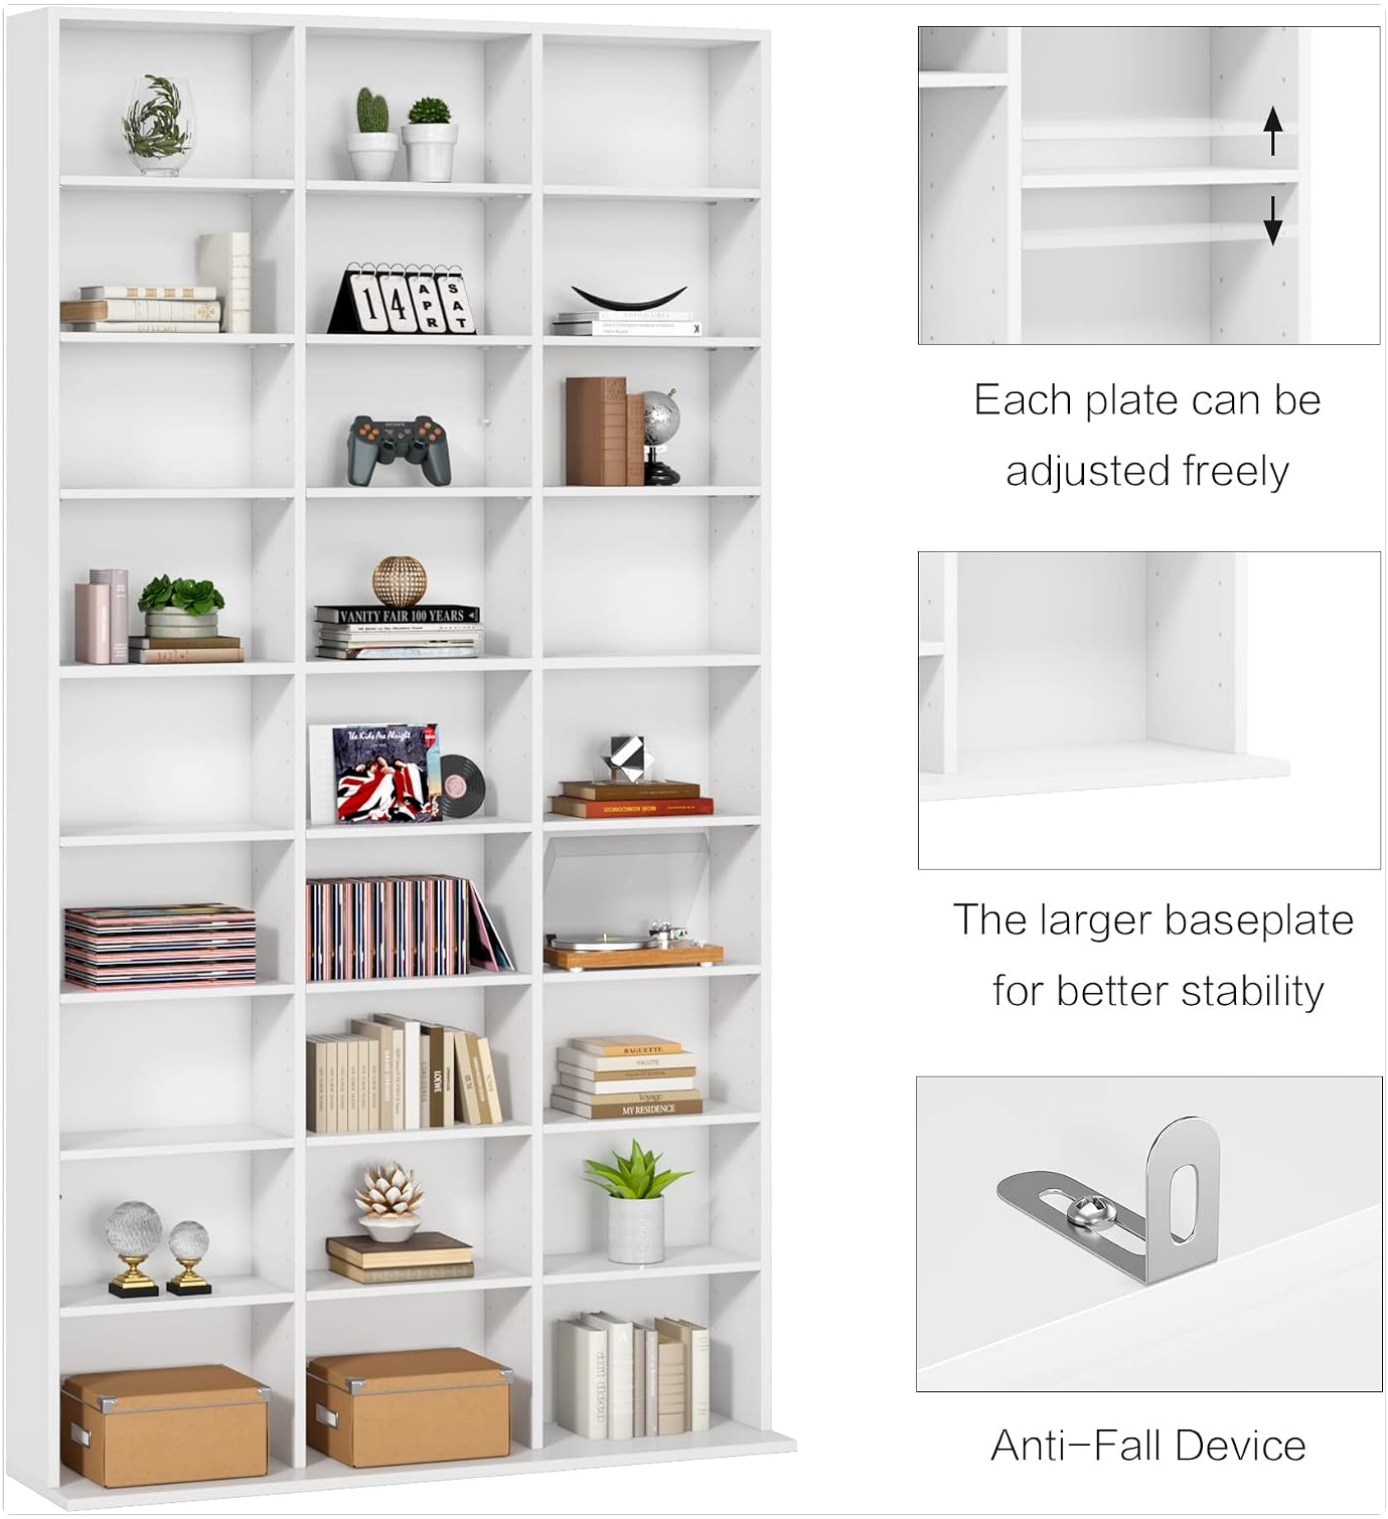


Image 3: Details of adjustable shelves, stable baseplate, and anti-fall device.

5. Operating (Usage)

The FirFurd P421 CD Shelf is designed for versatile storage and display. Its open design allows for easy access and visibility of your items.

- **Adjustable Shelves:** Easily reposition the 21 adjustable shelves to accommodate items of various heights, such as CDs, DVDs, books, or decorative objects. Simply remove the shelf pins, adjust the shelf to the desired height, and reinsert the pins securely.
- **Multi-functional Use:** This unit can serve as a CD/DVD rack, bookshelf, document organizer, display cabinet, or even a

room divider.

- **Space Optimization:** The tall, narrow design maximizes vertical space, making it ideal for smaller rooms or for adding significant storage without occupying much floor area.



Image 4: The shelf used as a display and storage unit in a living room.



Image 5: The shelf used in an office environment for organization.

6. Maintenance

Proper care will help maintain the appearance and structural integrity of your FirFurd CD Shelf.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Dusting:** Regularly dust with a dry, soft cloth to prevent buildup.
- **Liquid Spills:** Immediately wipe up any liquid spills to prevent staining or damage to the wood material.
- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure to prevent fading or discoloration.
- **Hardware Check:** Periodically check all screws and fittings to ensure they remain tight. Tighten if necessary.

7. Troubleshooting

Problem	Possible Cause	Solution
Shelf is wobbly/unstable	Uneven floor; loose connections; not anchored to wall.	Ensure placement on a level surface. Tighten all screws. Securely attach the anti-tip device to the wall.
Missing parts or damaged components	Shipping error; oversight during unpacking.	Review the parts list. Contact customer support with your purchase details for assistance.
Shelves do not fit correctly	Incorrect orientation; pins not fully inserted.	Refer to the assembly guide for correct orientation. Ensure shelf pins are fully seated in the pre-drilled holes.

8. Specifications

Brand: FirFurd

Model Number: P421

Color: White

Material: Wood

Product Dimensions (L x W x H): 102.5 x 23.5 x 190 cm (40.4 x 9.25 x 74.8 inches)

Item Weight: 31.4 Kilograms

Number of Shelves: 27 (21 of which are height-adjustable)

Special Feature: Height Adjustable

Mounting Type: Floor Mount

Room Type: Office, Living Room

Style: Modern

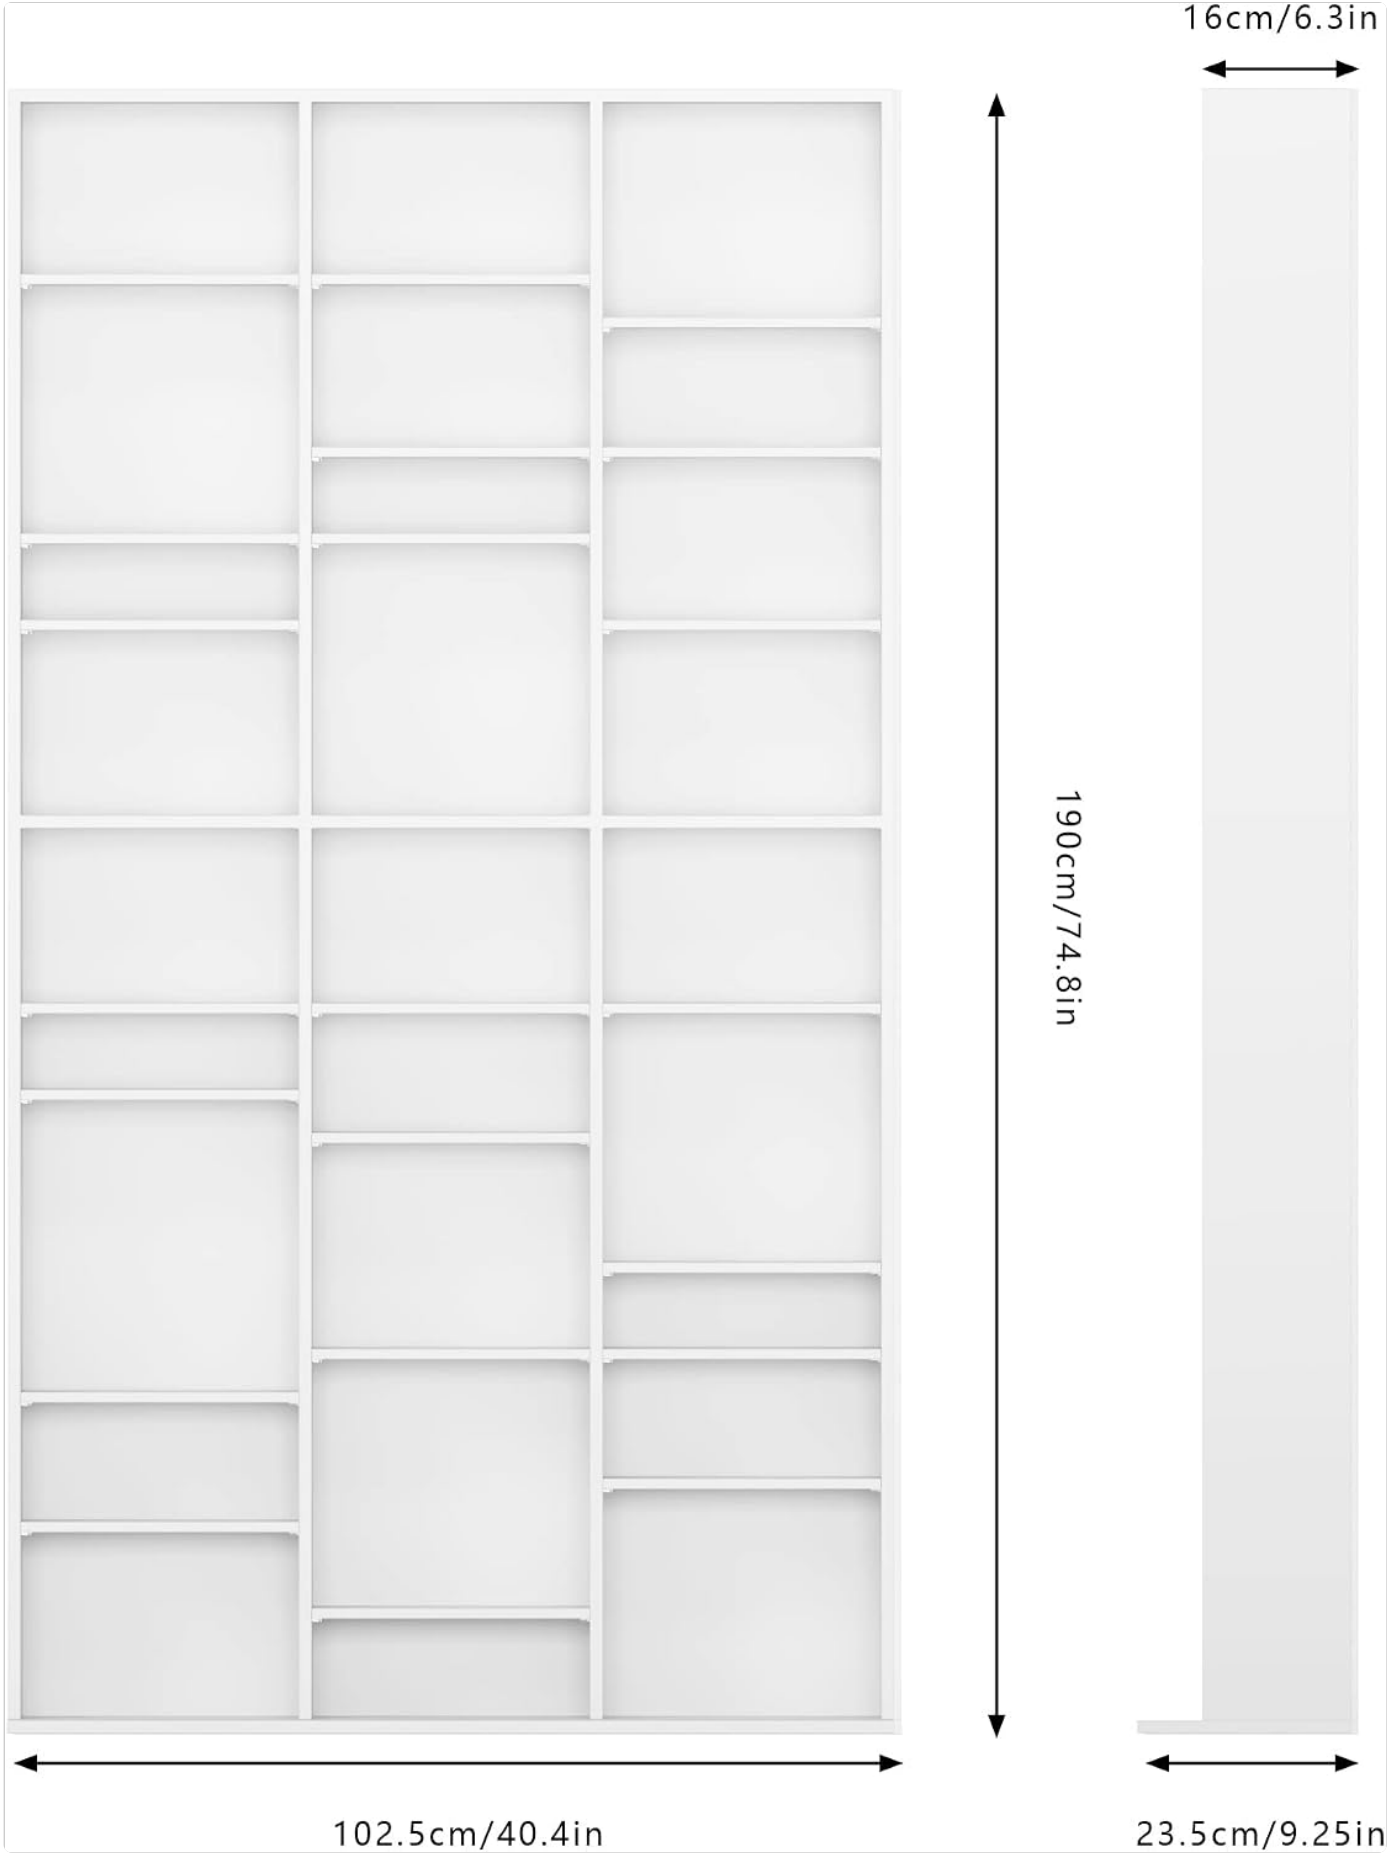


Image 6: Product dimensions overview.

9. Warranty and Support

For warranty information or if you encounter any issues not covered in this manual, please refer to your purchase documentation

or contact the seller directly. FirFurd is committed to providing quality products and customer satisfaction. Please have your model number (P421) and purchase date ready when contacting support.

© 2026 FirFurd. All rights reserved.