Luqeeg Luqeeg6dx2rqn47s-13

Luqeeg Portable MP3 Music Player User Manual

Model: Luqeeg6dx2rqn47s-13

1. Introduction

Thank you for choosing the Luqeeg Portable MP3 Music Player. This device is designed to provide a high-quality audio experience with its lossless sound capabilities and versatile functions. Its compact and durable design makes it an ideal companion for music enthusiasts on the go.

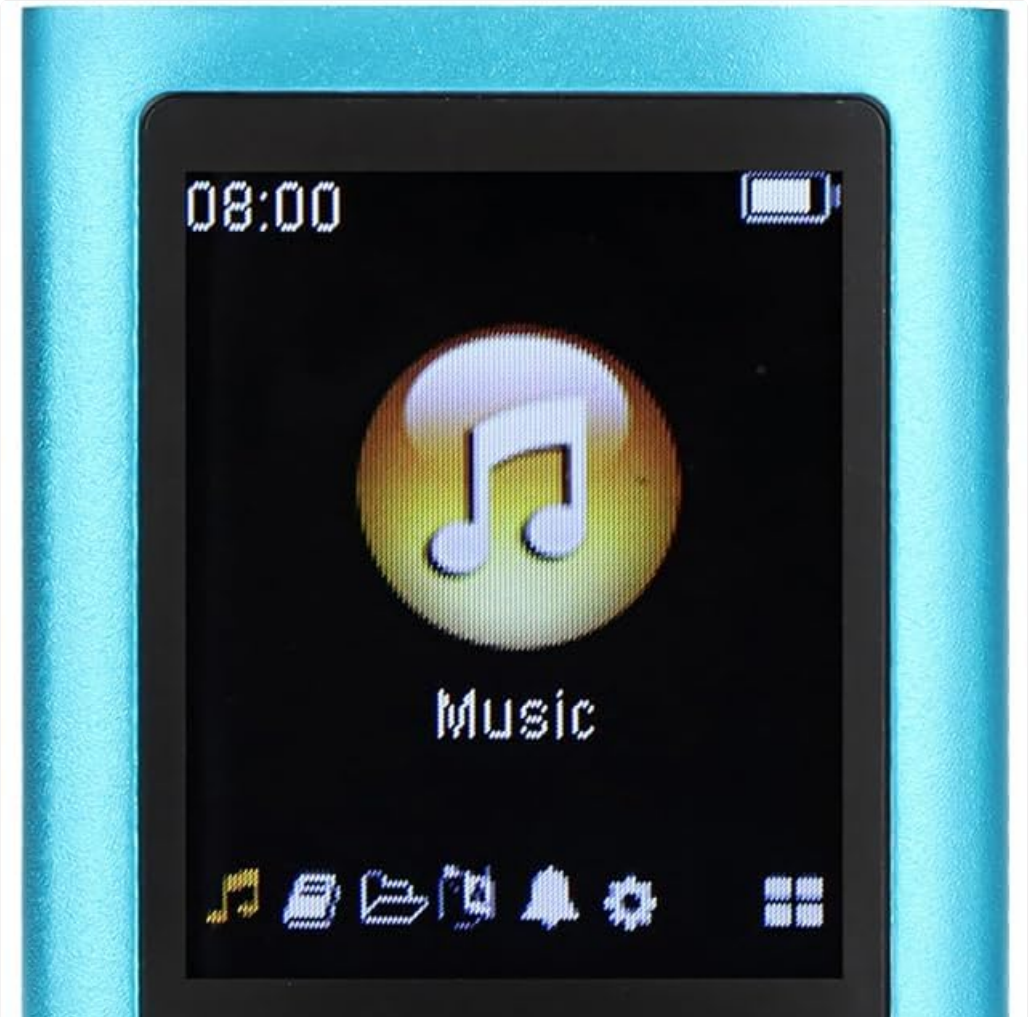




Figure 1: Luqeeg Portable MP3 Music Player (Blue)

2. Safety Information

To ensure safe operation and prevent damage to the device or personal injury, please adhere to the following warnings:

- Do not attempt to disassemble, modify, or repair the product yourself. This can lead to personal injury or equipment damage.
- Keep the device away from water and excessive moisture.
- Avoid exposing the device to extreme temperatures (hot or cold).
- Do not drop or subject the device to strong impacts.



Figure 2: Important Safety Warning

3. Package Contents

Upon opening your package, please ensure all items listed below are present:

- 1 x Luqeeg Portable MP3 Music Player
- 1 x Earphone
- 1 x Charging Cable (USB)

Video 1: Unboxing and Overview of the MP3 Player and its accessories.

4. Product Overview: Controls and Ports

Familiarize yourself with the device's layout:



Figure 3: MP3 Player Controls and Ports

- **Earphone Port:** Connect your earphones for audio output.
- **USB Port:** Used for charging and data transfer.
- **TF Card Slot:** Insert a Micro SD card for expanded storage (up to 64GB, card not included).
- **ON/OFF Switch:** Power the device on or off.
- **MENU Button:** Access the main menu or go back.
- **Play/Pause Button:** Start or pause playback.
- **Previous/Backward Button:** Navigate to the previous track or rewind.
- **Next/Forward Button:** Navigate to the next track or fast forward.
- **VOL (Volume) Buttons:** Adjust the audio volume.

5. Setup

5.1 Charging the Device

Before first use, fully charge your MP3 player. Connect the provided USB charging cable to the device's USB port and the other end to a USB power adapter (not included) or a computer's USB port. A full charge takes approximately 2 hours and provides up to 8 continuous hours of playback.



Figure 4: Long-Lasting Battery Life

5.2 Inserting a Micro SD Card

The MP3 player supports up to 64GB of external memory via a Micro SD card (not included). Locate the TF Card slot on the device and gently insert the Micro SD card until it clicks into place. Ensure the card is inserted in the correct orientation.



Figure 5: Memory Expansion and Design Features

5.3 Connecting to a Computer for File Transfer

To transfer music, videos, photos, or text files to your MP3 player, connect it to your computer using the provided USB cable. The device will appear as a removable disk drive. You can then drag and drop files directly into the player's storage or the inserted Micro SD card.

6. Operation

The Luqeeg MP3 player offers a variety of functions for your entertainment:



Figure 6: Multi-function MP3 Player

6.1 Music Playback

Navigate to the 'Music' icon on the main menu and press the Play/Pause button to enter. Browse your music library by artist, album, or song. The player supports MP3, WMA, FLAC, and APE formats for lossless sound quality. Use the Previous/Next buttons to skip tracks and the VOL buttons to adjust volume. The player supports features like song selection, playlist creation, random play, and playback modes.

6.2 Video Playback

Select the 'Video' icon to access video files. The player supports AMV video format. Ensure your video files are converted to the compatible format for smooth playback.

6.3 Photo Browsing

Access the 'Photos' section to view your stored images. Use the navigation buttons to scroll through your photo collection.

6.4 Text Reading

The 'TXT' function allows you to read text files directly on the device's screen. This is useful for e-books or notes.

6.5 Sound Recordings

Utilize the built-in microphone for sound recordings. Access the 'Recordings' menu to start, pause, and save your audio recordings.

6.6 FM Radio

Tune into your favorite FM radio stations. Connect your earphones as they act as the antenna for optimal reception.

7. Maintenance

To prolong the life of your MP3 player:

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Avoid completely draining the battery frequently. Charge it regularly to maintain battery health.

8. Troubleshooting

If you encounter issues with your MP3 player, please refer to the following common solutions:

Problem	Possible Solution
Device does not turn on.	Ensure the ON/OFF switch is in the 'ON' position. Charge the device for at least 30 minutes. If the issue persists, try a different charging cable or USB port.
Cannot transfer files to the device.	Ensure the device is properly connected to the computer via USB. Check if the device appears as a removable disk. Try a different USB port or cable. Ensure there is sufficient storage space on the device or Micro SD card.
No sound from earphones.	Check if earphones are fully plugged into the earphone port. Increase the volume using the VOL buttons. Test with a different pair of earphones to rule out faulty earphones.
Music files are not playing.	Verify that the music files are in a supported format (MP3, WMA, FLAC, APE). Ensure the files are not corrupted. Re-transfer the files if necessary.
Shuffle mode plays the same sequence.	This can sometimes occur with certain shuffle algorithms. Try restarting the device or re-selecting shuffle mode. Ensure your music library is diverse.

9. Specifications



Figure 7: Product Parameters

Feature	Detail
Brand	Luqeeg
Model Name	Luqeeg6dx2rqn47s-13
Color	Blue
Screen Size	1.8 Inches
Memory Storage Capacity	64 GB (via Micro SD card, not included)
Connectivity Technology	USB
Supported Audio Formats	MP3, WMA, FLAC, APE
Supported Video Formats	AMV
Battery Life	Up to 8 continuous hours (fully charged)

Feature	Detail
Charging Time	Approximately 2 hours
Product Material	Aluminum alloy
Item Weight	2.39 ounces
Product Dimensions	3.55 x 1.58 x 0.39 inches

10. Warranty and Support

Specific warranty details are not provided in this manual. For warranty information, technical support, or any inquiries regarding your Luqeeg MP3 Music Player, please contact Luqeeg customer service or visit the official Luqeeg store online. Keep your purchase receipt as proof of purchase for any warranty claims. Thank you for choosing Luqeeg.