Luqeeg Luqeeg6dx2rqn47s-14

Luqeeg MP3 Player User Manual

Model: Luqeeg6dx2rqn47s-14

Introduction

This manual provides detailed instructions for the operation and maintenance of your Luqeeg MP3 Player. Please read this manual thoroughly before using the device to ensure proper functionality and longevity.
The Luqeeg MP3 Player is a portable digital music player designed for high-quality audio playback. It features a durable aluminum alloy casing, a 1.8-inch LCD screen, and supports various audio formats for a versatile listening experience.

What's in the Box

- 1 x Luqeeg MP3 Player
- 1 x Charging Cable
- 1 x Headphones

Key Features

- **Lossless Sound Quality:** Supports MP3, WMA, FLAC, APE, AAC, OGG, and ACELP audio formats for superior sound.
- **Long Battery Life:** Up to 8 hours of continuous playback on a full charge (approx. 2 hours charging time).
- **Large Storage Capacity:** Supports up to 64GB TF memory card expansion (card not included).
- **Durable Design:** Constructed from high-quality aluminum alloy for durability and corrosion resistance.
- **User-Friendly Interface:** Easy navigation with playlist support, shuffle playback, and sleep shutdown function.
- **Multi-functionality:** Beyond music, enjoy video playback, photo browsing, text reading, sound recordings, and FM radio.



Image: The MP3 player's screen displaying icons for various functions including music playback, video playback, photo browsing, text reading, sound recordings, and FM radio.

Setup Guide

1. Initial Charging

Before first use, fully charge your MP3 player. Connect the provided charging cable to the player's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging progress. A full charge typically takes about 2 hours.



Image: The MP3 player being charged, highlighting its long-lasting battery life of up to 8 hours.

2. Inserting a Memory Card (Optional)

The MP3 player supports TF (Micro SD) memory cards up to 64GB for expanded storage. Locate the memory card slot on the side of the device. Gently insert the TF card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.

Note: A memory card is not included with the player. For optimal performance, the original MYMAHDI memory card is recommended.



Image: The MP3 player shown with a Micro SD card, illustrating its capability for 64GB TF memory card expansion.

3. Connecting Headphones

Plug the included headphones into the 3.5mm audio jack on the player. Ensure the plug is fully inserted for proper sound output.

Operating Instructions

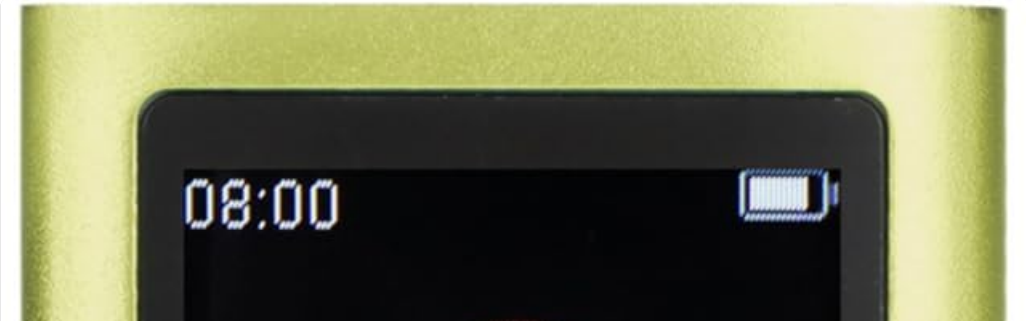




Image: Front view of the Luqeeg MP3 Player, showing the 1.8-inch LCD screen and the circular control pad with MENU, VOL, and navigation buttons.

Power On/Off

- To power on, press and hold the **MENU** button until the screen lights up.
- To power off, press and hold the **MENU** button until the screen turns off.

Navigation

- Use the **Left/Right arrow** buttons to navigate through menu options or tracks.
- Press the **MENU** button to select an option or enter a sub-menu.
- Press the **VOL** button to adjust the volume.

Music Playback

1. From the main menu, select "Music".
2. Navigate to your desired song or playlist.
3. Press **MENU** to start playback.
4. Use the **Left/Right arrow** buttons to skip tracks.
5. Press **VOL** to adjust the volume.
6. The player supports shuffle playback and sleep shutdown functions, which can be configured in the settings menu.

File Transfer

To transfer music or other files to your MP3 player, connect it to your computer using the provided USB cable. The player will appear as a removable disk drive. You can then drag and drop files directly into the player's storage or the inserted TF card.



Image: The MP3 player displaying its audio and video playback capabilities, listing supported audio formats (MP3, WMA, FLAC, APE) and video format (AMV).

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the player's surface. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Avoid Drops:** While durable, avoid dropping the player to prevent internal damage.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Player does not turn on.	Low battery.	Charge the player for at least 30 minutes.
Short battery life.	Battery not fully charged or aging battery.	Ensure full charge (approx. 2 hours). If issue persists, battery may be degrading.
No sound from headphones.	Headphones not properly connected or faulty. Volume too low.	Ensure headphones are fully inserted. Test with another pair of headphones. Increase volume.
Cannot transfer files.	Incorrect USB connection. Player not recognized by computer.	Ensure USB cable is securely connected. Try a different USB port or cable. Restart computer and player.
Screen is scratched upon arrival.	Manufacturing defect or shipping damage.	Contact customer support for replacement or refund.

Specifications



Image: A graphic detailing the product parameters including product size, package size, product weight, material (Aluminum alloy), and packing list (MP3 x 1, Charging cable x 1, Earphone x 1).

Feature	Detail
Model Name	Luqeeg6dx2rqn47s-14
Material	Aluminum Alloy
Display	1.8-inch LCD Screen
Connectivity Technology	USB, AUX
Storage Capacity	Supports up to 64 GB (TF card not included)
Compatible Devices	Personal Computer
Supported Audio Formats	MP3, WMA, FLAC, APE, AAC, OGG, ACELP

Feature	Detail
Battery Type	Built-in Lithium Battery (200 mAh)
Battery Life	Up to 8 hours (approx.)
Charging Time	Approx. 2 hours
Product Dimensions	Approx. 3.55 x 1.58 x 0.39 inches
Product Weight	Approx. 1.27 ounces
Color	Green

Warranty and Support

For any issues or inquiries regarding your Luqeeg MP3 Player, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific warranty terms and contact information.
The product is manufactured by Luqeeg. For support, you may visit theLuqeeg Store on Amazon.
Please retain your proof of purchase for warranty claims.

© 2024 Luqeeg. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question