Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Azwok RMT-TX100D

Azwok RMT-TX100D Replacement Remote Control User Manual

For Sony Bravia LCD TVs

Introduction

This manual provides instructions for the Azwok RMT-TX100D replacement remote control. This remote is designed to function as a direct replacement for various Sony TV models, including those originally using RMT-TX100A, RMT-TX100B, RMT-TX200U, RMT-TX102U, RMT-TX100C, RMT-TX100U, and RMT-TX100P remote controls. No programming is required for operation; simply install batteries.



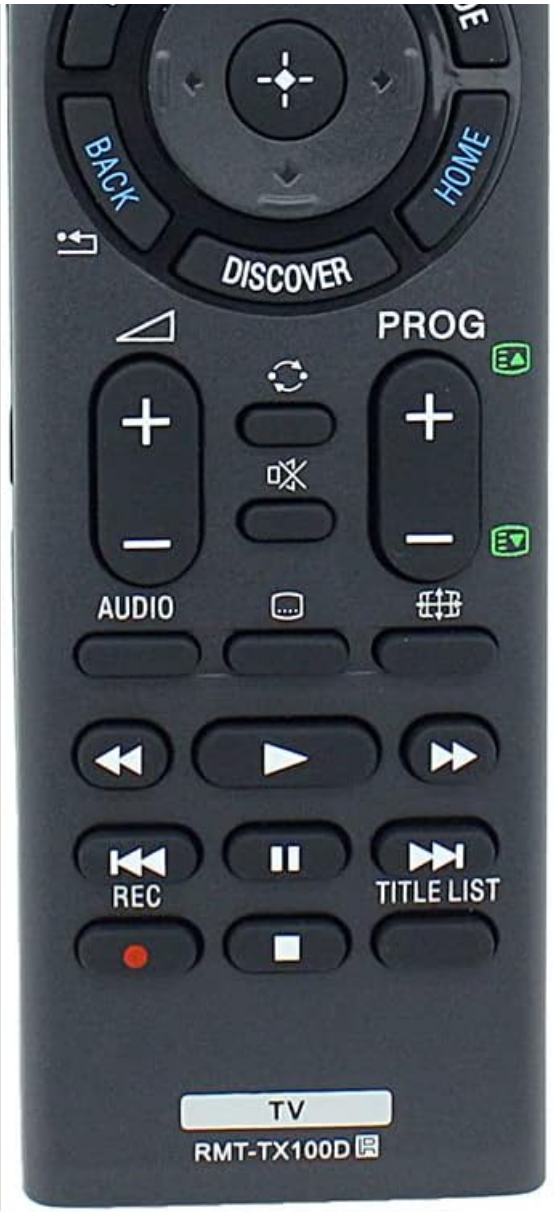


Image: Front view of the Azwok RMT-TX100D replacement remote control, showing all buttons and layout.

Setup: Battery Installation

To begin using your remote control, you must install two AAA batteries. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use without any additional programming.





Image: The back of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.

Operation

The Azwok RMT-TX100D remote control operates using infrared technology. Ensure a clear line of sight between the remote control and your television's infrared receiver for optimal performance.

Basic Functions:

- **Power Button (●)**: Located at the top right, turns the TV on or off.
- **Number Buttons (0-9)**: For direct channel selection.
- **Volume Up/Down (+/-)**: Adjusts the audio level.
- **Channel Up/Down (PROG +/-)**: Changes TV channels sequentially.
- **Mute Button ( )**: Silences the TV audio.
- **Directional Pad (Up, Down, Left, Right, Enter)**: Navigates menus and confirms selections.
- **HOME Button**: Accesses the TV's home menu.
- **BACK Button**: Returns to the previous screen or menu.
- **NETFLIX Button**: Provides direct access to the Netflix application.
- **ACTION MENU Button**: Opens context-sensitive menus.
- **GUIDE Button**: Displays the electronic program guide.
- **DISCOVER Button**: Accesses content discovery features.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward)**: Controls media playback.

Compatibility

This replacement remote control is compatible with a wide range of Sony Bravia LCD TV models. Known compatible models include, but are not limited to:

- KD-43X8301C, KD-43X8305C, KD-43X8307C, KD-43X8308C, KD-43X8309C
- KD-49X8301C, KD-49X8305C, KD-49X8307C, KD-49X8308C, KD-49X8309C
- KD-55X8501C, KD-55X8505C, KD-55X8507C, KD-55X8508C, KD-55X8509C, KD-55X9005C, KD-55X9305C
- KD-65X8501C, KD-65X8505C, KD-65X8507C, KD-65X8508C, KD-65X8509C, KD-65X9005C, KD-65X9305C
- KD-75X8501C, KD-75X8505C, KD-75X9405C
- KDL-43W755C, KDL-43W756C, KDL-43W805C, KDL-43W807C, KDL-43W808C, KDL-43W809C
- KDL-50W755C, KDL-50W756C, KDL-50W805C, KDL-50W807C, KDL-50W808C, KDL-50W809C
- KDL-55W755C, KDL-55W756C, KDL-55W805C, KDL-55W807C, KDL-55W808C, KDL-55W809C
- KDL-65W855C, KDL-65W857C, KDL-65W858C, KDL-65W859C
- KDL-75W855C
- FW-55X8570C
- KD-43X830xC, KD-49X8300C, KD-43X8300C, KD-43X8500C
- KD-55X850xC, KD-55X8500C, KD-55X9000C, KD-55X9300C
- KD-65X8500C, KD-65X9000C, KD-65X9300C
- KD-75X8500C, KD-75X9100C, KD-75X9400C
- KDL-43W800C, KDL-55W800C, KDL-50W800C, KDL-43W800C, KDL-55W800D, KDL-50W800D, KDL-43W800D

If your specific TV model is not listed, or if your original remote control differs significantly in appearance, please contact customer support for assistance in confirming compatibility.

Troubleshooting

Problem	Possible Cause	Solution
Remote control is not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote control malfunction.	Replace batteries with new AAA batteries, ensuring correct polarity. Remove any objects blocking the line of sight to the TV's IR receiver. Ensure you are pointing the remote directly at the TV. If issues persist, contact customer support.
Specific buttons are not working.	Button stuck or damaged. Compatibility issue with a specific TV function.	Check if the button is physically stuck. Verify your TV model is fully compatible with all remote functions. Contact customer support for further assistance.

Specifications

- **Model:** RMT-TX100D (AU-RMT-TX100D-SN008)
- **Brand:** Azwok
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 7.87 x 1.77 x 0.79 inches (approximately 20 x 4.5 x 2 cm)
- **Item Weight:** 2.93 ounces (approximately 83 grams)
- **Special Feature:** No Programming Required
- **Compatible Devices:** Sony Televisions

Warranty and Support

This Azwok RMT-TX100D replacement remote control comes with a 12-month warranty from the date of purchase. This warranty covers manufacturing defects and ensures the remote functions as described.

If you encounter any issues with your remote control, or if you require assistance with compatibility, please contact our customer support. We are available to help you resolve problems and ensure your satisfaction.

For support inquiries, please refer to the contact information provided with your purchase or visit the Azwok official support channels.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BPR41SH1

More documents and user manuals: **https://manuals.plus/**