Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Azwok RM-R51K/BGE-KV001

Azwok R51K/BGE Remote Control User Manual

Replacement Remote Control for Kelvinator Air Conditioners

1. Introduction

This manual provides instructions for the Azwok R51K/BGE replacement remote control, designed for use with various Kelvinator air conditioner models. This remote offers the primary functions of your original remote control without requiring any programming.

1.1 Compatible Models

The Azwok R51K/BGE remote control is compatible with the following Kelvinator air conditioner models:

- R51K/BGCE
- R51E
- R51CE
- R51MCE
- R51DE
- R51MBGE
- R51I4BGE
- R51I4BGCE
- UL-R51ME
- R51I11BGE
- R51L4BGE
- R51CBGE
- R51CE
- R51ME
- R51MCE (B)

If your specific model is not listed, or if you are unsure about compatibility, please contact customer support for assistance.

2. Setup

2.1 Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.


Once batteries are installed, the remote control is ready for immediate use; no programming is required.



Figure 1: Battery compartment with two AAA battery slots.

3. Operating Instructions

This section details the functions of the buttons on your Azwok R51K/BGE remote control.

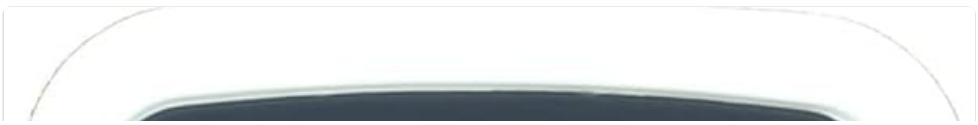


SET TEMPERATURE(°C)
AUTO
COOL
DRY
HEAT
FAN
HIGH
MED
LOW
▼ TEMP ▲
MODE
ON/OFF
FAN SPEED
SWING
SLEEP
TIMER ON
RESET
LOCK
TIMER OFF
AIR DIRECTION
LED DISPLAY
TURBO



Figure 2: Front view of the remote control.

3.1 Button Functions

- **ON/OFF (Red Button):** Powers the air conditioner on or off.
- **MODE:** Cycles through operating modes: AUTO, COOL, DRY, HEAT.
- **TEMP ▼ / ▲:** Adjusts the set temperature downwards (▼) or upwards (▲).
- **FAN SPEED:** Cycles through fan speed settings: HIGH, MED, LOW.
- **SWING:** Activates or deactivates the automatic louver swing function.
- **SLEEP:** Activates the sleep mode for energy-efficient operation during sleep.
- **TIMER ON:** Sets a timer for the air conditioner to turn on automatically.
- **TIMER OFF:** Sets a timer for the air conditioner to turn off automatically.
- **RESET:** Resets certain settings or functions.
- **LOCK:** Locks the remote control buttons to prevent accidental changes.
- **LED DISPLAY:** Toggles the LED display on the air conditioner unit.
- **TURBO:** Activates maximum cooling or heating for rapid temperature change.
- **AIR DIRECTION:** Adjusts the direction of the airflow.

3.2 Operating Modes

- **AUTO:** The unit automatically selects the operating mode (Cool, Dry, Heat) based on the room temperature.
- **COOL:** Provides cooling to lower the room temperature.
- **DRY:** Reduces humidity in the room.
- **HEAT:** Provides heating to raise the room temperature.

4. Maintenance

To ensure the longevity and proper functioning of your remote control, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's range decreases or if the display becomes dim. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Avoid Exposure:** Keep the remote control away from direct sunlight, high temperatures, and moisture.

5. Troubleshooting

If you experience issues with your remote control, refer to the following common troubleshooting steps:

- **Remote Not Responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new AAA batteries.
  - Ensure there are no obstructions between the remote control and the air conditioner unit's receiver.
  - Make sure you are within the effective operating range of the air conditioner.

- **Air Conditioner Not Responding to Specific Buttons:**
  - Verify that the remote control's display shows the desired function.
  - Ensure the air conditioner unit is powered on and not in a locked state.

If the problem persists after trying these steps, please contact customer support.

6. Specifications

Model Number	RM-R51K/BGE-KV001
Product Dimensions	5.24 x 1.97 x 0.59 inches
Item Weight	1.76 ounces
Batteries Required	2 AAA batteries (not included)
Connectivity Technology	Infrared
Special Feature	No Programming Required

7. Warranty and Support

7.1 Warranty Information

This Azwok R51K/BGE remote control comes with a 12-month replacement warranty from the date of purchase. This warranty covers manufacturing defects and ensures that the remote control functions as intended for compatible models.

7.2 Customer Support

For any questions regarding compatibility, operation, or warranty claims, please contact Azwok customer support. Our team is available to assist you in choosing the correct remote and resolving any issues you may encounter.

© 2023 Azwok. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BQRS1B3T

More documents and user manuals: **https://manuals.plus/**