**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



## Proscenic 850T Mini

# Proscenic 850T Robot Vacuum and Mop Combo User Manual

Brand: Proscenic

Model: 850T Mini

## INTRODUCTION

Welcome to the user manual for your Proscenic 850T Robot Vacuum and Mop Combo. This device is designed to simplify your home cleaning routine by offering both vacuuming and mopping functionalities. With intelligent navigation, powerful suction, and versatile control options, the 850T ensures a thorough and efficient clean for various floor types.




The Proscenic 850T Robot Vacuum and Mop Combo, showcasing its sleek design, remote control, and mobile app interface.

## What's in the Box

Before you begin, please ensure all components are present in the packaging:

- Robot Vacuum
- Charging Dock
- Roller Brush
- User Manual (this document and PDF version)
- Mop Cloth (x2)
- Side Brush (x2)
- 2-in-1 Dust Box & Water Tank
- HEPA Filter (x2)
- Adapter
- Cleaning Brush

- Remote Control
- Magnetic Tape (Boundary Strip)



A visual representation of all items included with your Proscenic 850T.

## Setup

### 1. Unboxing and Initial Placement

Carefully remove all components from the packaging. Place the charging dock against a wall in an open area, ensuring there are no obstacles within 1 meter (3 feet) to the sides and 2 meters (6 feet) in front. Connect the adapter to the charging dock and plug it into a power outlet.

Your browser does not support the video tag.

Watch this video for a detailed unboxing and initial setup guide for the Proscenic 850T Robot Vacuum.

### 2. Charging the Robot

Place the robot vacuum onto the charging dock, ensuring the charging contacts align. The indicator lights on the robot will illuminate to show it is charging. For first-time use, fully charge the robot (approximately 5 hours) before operation.

### 3. App Connection (Optional but Recommended)

Download the "ProscenicHome" app from your mobile app store. Follow the in-app instructions to connect your robot vacuum to your 2.4GHz Wi-Fi network. The app allows for advanced control, scheduling, and monitoring of cleaning tasks.

## Operating Instructions

### Starting and Stopping Cleaning

Press the power button on the robot or use the remote control/app to start or pause a cleaning cycle. The robot will automatically return to its charging dock when the battery is low or cleaning is complete.

Your browser does not support the video tag.

An overview of the Proscenic 850T Robot Vacuum and Mop, demonstrating its key features and operation.

### Cleaning Modes

The 850T offers diverse cleaning modes to suit your needs:

- **Auto Clean:** The robot intelligently plans its route to cover the entire area.

- **Spot Clean:** Focuses on a specific dirty area, cleaning in a spiral pattern.
- **Edge Clean:** Cleans along walls and furniture edges.
- **Mop Mode:** Utilizes the water tank and mop pad for wet cleaning.



The robot vacuum executing its intelligent S-wave cleaning route.



The robot vacuum performing a focused spot clean.




The robot vacuum cleaning along room edges.

## Suction Power and Mopping

The 850T features 3000Pa powerful suction with three adjustable power gears (Max/Standard/Quiet). It automatically boosts suction on carpets. For mopping, the 2-in-1 dustbin and water tank allow simultaneous vacuuming and mopping. Adjust water flow levels via the app.




Demonstration of the 3000Pa powerful suction of the Proscenic 850T.




The robot vacuum actively mopping a hard floor surface.

## Intelligent Navigation and Obstacle Avoidance

Equipped with IPNAS 2.0 Gyro Navigation, the robot follows a logical S-wave cleaning path, ensuring no area is missed. Highly sensitive sensors prevent collisions with furniture and falls from stairs.




The robot vacuum's intelligent navigation system ensures comprehensive coverage.




The ultra-slim design allows the robot to clean under furniture.

## Control Methods and Boundary Strips

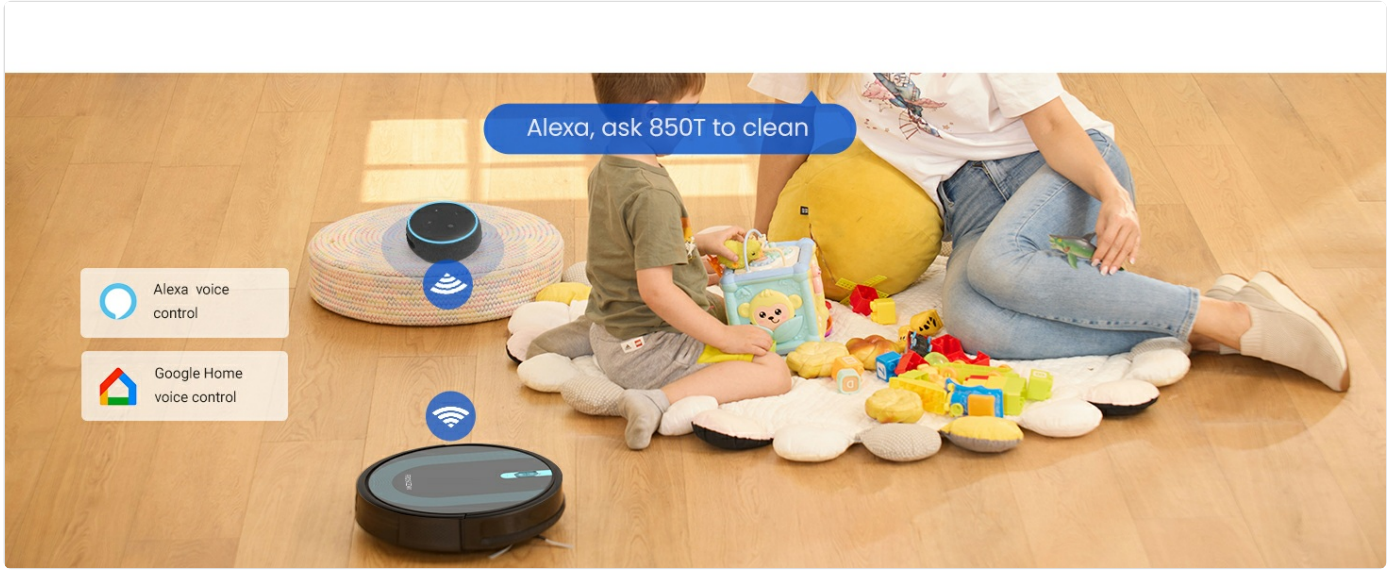
Control your 850T via the Proscenic app, Siri, Google Home, Alexa voice commands, or the included remote control. Use magnetic boundary strips to set up "No-Go" areas, preventing the robot from entering specific zones.



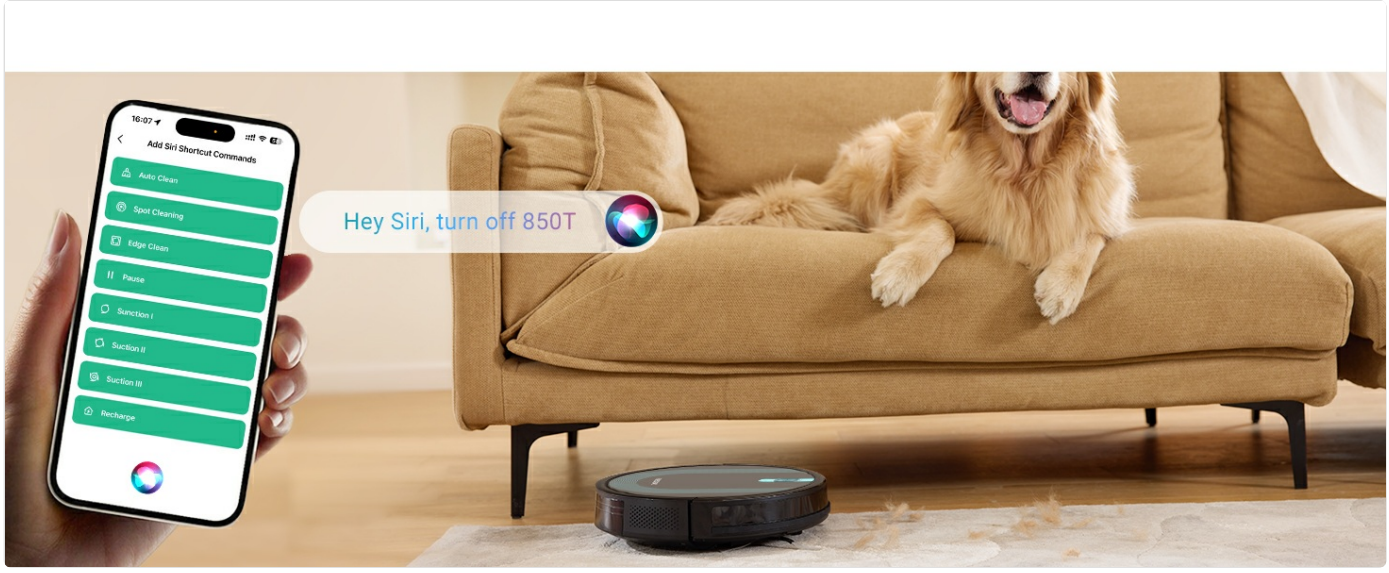

Multiple control options for your convenience, including smart home integration.



Activating the robot vacuum using Alexa voice commands.




Controlling the robot vacuum with Siri commands.




Monitoring and controlling the robot via the mobile app's cleaning map.

## Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your robot vacuum.

### 1. Emptying the Dustbin

After each cleaning cycle, press the release button to remove the 2-in-1 dustbin/water tank. Open the dustbin cover and empty the collected debris into a trash can.



Emptying the robot vacuum's dustbin after a cleaning cycle.

### 2. Cleaning the Dustbin and Mop Pad

The dustbin and mop pad can be rinsed with water. Ensure they are completely dry before re-installing them into the robot. Do not wash the HEPA filter with water; tap it gently to remove dust.



Cleaning the dustbin and mop pad under running water for hygiene.

### 3. Cleaning Brushes and Sensors

Regularly check and clean the main roller brush and side brushes for tangled hair or debris. Wipe the sensors (cliff sensors, anti-collision sensors) with a clean, dry cloth to ensure proper navigation.

## Troubleshooting

If you encounter issues with your Proscenic 850T, refer to the following common solutions:

- **Robot not charging:** Ensure the charging dock is powered on and the robot's charging contacts are clean and properly aligned with the dock.
- **Robot gets stuck frequently:** Clear obstacles from the cleaning path. Ensure the slim design allows it to pass under

furniture. Clean cliff sensors.

- **Reduced suction power:** Empty the dustbin, clean or replace the HEPA filter, and check the main brush for blockages.
- **Mopping is ineffective:** Ensure the water tank is filled, the mop pad is clean, and the water flow level is set appropriately in the app.
- **App connectivity issues:** Ensure your Wi-Fi is 2.4GHz. Restart your router and the robot. Re-pair the device in the app if necessary.
- **Robot makes unusual noises:** Check the main brush and side brushes for tangled hair or foreign objects.

For more detailed troubleshooting, please consult the full User Manual PDF linked in the Warranty and Support section.

## Specifications

| Feature | Detail |
|---|---|
| Brand | Proscenic |
| Model Name | Robot Vacuum |
| Special Feature | Cordless |
| Color | Black |
| Product Dimensions | 5.35"L x 6.76"W x 7.5"H |
| Included Components | Battery |
| Filter Type | Foam |
| Battery Life | 5 Hours |
| Voltage | 15 Volts |
| Capacity (Dustbin) | 250 Milliliters |
| Power Source | Battery Powered |
| Batteries Included | Yes (2 Lithium Ion) |
| Control Method | App |
| Lithium Battery Voltage | 14.4 Volts (DC) |
| Compatible Devices | Smartphones, Siri, Google Home, Alexa |
| Form Factor | Robotic |
| Item Weight | 8.14 pounds |
| Manufacturer | Proscenic |
| Item Model Number | 850T Mini |
| Date First Available | December 23, 2022 |

## Important Safety Information

Please read all safety instructions before using your Proscenic 850T. Failure to follow these instructions may result in electric

shock, fire, or serious injury.

- Do not operate the robot in wet environments or near water.
- Keep loose clothing, hair, and body parts away from openings and moving parts.
- Do not pick up large or sharp objects, liquids, or burning/smoking materials.
- Ensure the charging dock is placed on a level surface and is not a tripping hazard.
- Supervise children and pets when the robot is operating.
- Only use the original charging dock and power adapter provided by Proscenic.
- Do not use the robot in areas with exposed electrical wires.

## Warranty and Support

For detailed warranty information and customer support, please refer to the official Proscenic website or the comprehensive User Manual PDF.
You can download the full User Manual PDF here.

© 2024 Proscenic. All rights reserved.


### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

**Open the live page**

**https://manuals.plus/asin/B0BQXF174K**

More documents and user manuals: **https://manuals.plus/**