ONN ONC32HB18C03

ONN 32-Inch Class LED 720p HDTV User Manual

Model: ONC32HB18C03

Introduction

This manual provides essential information for the setup, operation, and maintenance of your ONN 32-Inch Class LED 720p HDTV, model ONC32HB18C03. Please read this manual thoroughly before using your television to ensure proper functionality and safety.
This product is a renewed item and comes with a free wall mount. Please note that stands are not included with this renewed unit.

Product Features

- **High Definition Resolution:** Enjoy clear and vibrant images with 720p high-definition display, enhanced by a powerful full array LED backlight.
- **Versatile Connectivity:** Equipped with 1 HDMI input for high-speed digital video and audio, a VGA input for PC connection, and USB for media playback.
- **Integrated USB Media Player:** Play video, audio, and picture files directly from a USB storage device.
- **Wall Mount Included:** This renewed unit includes a wall mount for flexible placement and space-saving installation.

Setup Guide

Unpacking and Inspection

Carefully remove the television and all accessories from the packaging. Inspect the unit for any signs of damage. If any damage is found, do not proceed with setup and contact your seller.

Wall Mounting Installation

This television is designed for wall mounting and includes a compatible wall mount. Follow the instructions provided with the wall mount for secure installation. Ensure the wall can support the weight of the television and mount. It is recommended to consult a professional for wall mount installation.



Image: The ONN 32-inch LED TV shown alongside the included wall mount bracket. This illustrates the primary setup configuration for this renewed model.

Connecting Peripherals

Connect your external devices such as cable boxes, Blu-ray players, gaming consoles, or computers to the appropriate ports on the television.

- **HDMI:** For high-definition audio and video. Use an HDMI cable to connect your device to the HDMI port on the TV.
- **VGA:** For connecting a computer. Use a VGA cable for video and a separate audio cable for sound.
- **USB:** For media playback. Insert a USB drive into the USB port.



Image: A side-angle view of the ONN 32-inch TV, highlighting the various input ports available for connecting external devices.

Power Connection

Once all connections are made, plug the power cord into the TV's power input, then plug the other end into a standard electrical outlet.

Operating Instructions

First-Time Setup

Upon first power-on, the TV will guide you through an initial setup process, including language selection, channel scanning (if connecting an antenna), and network setup (if applicable for internet services like YouTube/Browser).

Basic Functions

- **Power On/Off:** Use the power button on the remote control or on the TV itself.
- **Input Source Selection:** Press the "Input" or "Source" button on the remote to switch between connected devices (HDMI, VGA, USB, TV).
- **Volume Control:** Use the Volume Up/Down buttons on the remote.
- **Channel Navigation:** Use the Channel Up/Down buttons for broadcast channels.

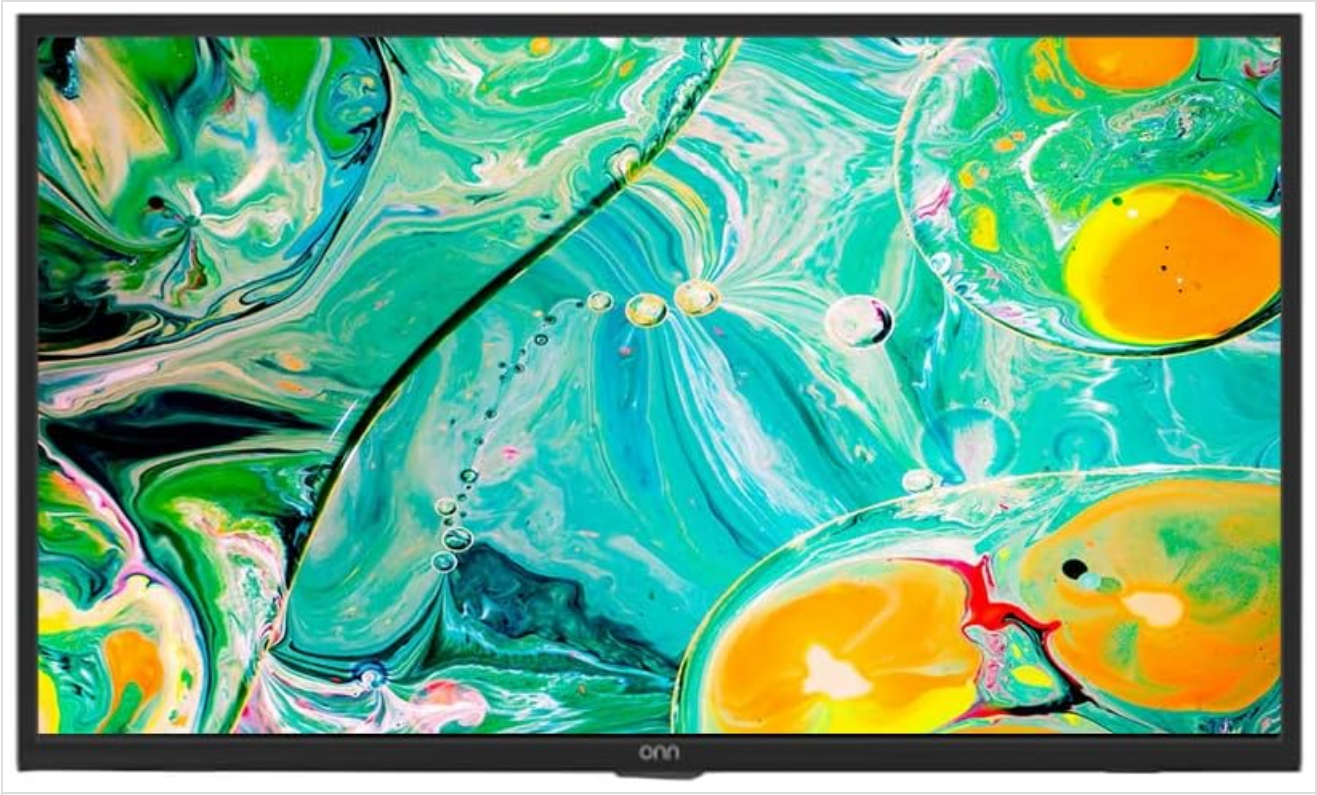


Image: A direct front view of the ONN 32-inch LED TV, showcasing its display with a colorful image, demonstrating its visual clarity.

Media Playback via USB

Insert a USB flash drive containing compatible media files (video, audio, images) into the USB port. Navigate to the USB input source using the remote. The TV's media player interface will appear, allowing you to browse and play your files.

Maintenance

Cleaning the Screen

Gently wipe the screen with a soft, dry, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner. Never spray liquid directly onto the screen.

Cleaning the Cabinet

Wipe the TV cabinet with a soft, dry cloth. Avoid using abrasive cleaners or solvents.

Ventilation

Ensure proper ventilation around the TV. Do not block ventilation openings. Overheating can damage the unit.

Troubleshooting

Problem	Possible Cause / Solution
No Power	Check if the power cord is securely plugged into the TV and the electrical outlet. Try a different outlet.
No Picture / No Sound	Ensure the correct input source is selected. Check all cable connections (HDMI, VGA, etc.).
Remote Control Not Working	Check the batteries and replace if necessary. Ensure there are no obstructions between the remote and the TV's IR sensor.

Problem	Possible Cause / Solution
Poor Picture Quality	Check antenna or cable connections. Adjust picture settings (brightness, contrast, color) in the TV menu.
USB Media Not Playing	Ensure the USB drive is formatted correctly (FAT32 recommended) and the media files are in supported formats.

Specifications

Model: ONC32HB18C03

Screen Size: 32 Inches

Display Technology: LCD, LED

Resolution: 720p

Aspect Ratio: 16:9

Connectivity: 1 HDMI, 1 USB, 1 VGA, Component, Composite

Product Dimensions (D x W x H): 8.7" x 28.75" x 19.5" (with wall mount, as stands are not included)

Item Weight: 7.71 pounds

Special Feature: Flat Panel Display

Supported Internet Services: YouTube, Browser (Note: Functionality may vary based on renewed product condition and specific firmware.)



Image: An angled view of the ONN 32-inch LED TV, showcasing its slim profile and overall design.

Warranty and Support

As this is a renewed product, warranty coverage is typically provided by the seller or the Amazon Renewed program. Please refer to your purchase documentation or contact the seller directly for specific warranty terms and support inquiries.
For general product information or troubleshooting not covered in this manual, you may visit the official ONN support website or contact their customer service if applicable for renewed products.

© 2024 ONN. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Where is the serial number located on the ONN ONC32HB18C03 32-Inch LED HDTV?

While the provided manual for the ONN ONC32HB18C03 does not explicitly state the serial number's location, it is standard for ONN televisions to have this information in the following places:Rear Panel Sticker: Look for...

Read full answer

How can I exit the 'No device photo' screen on my ONN ONC32HB18C03 32-inch TV if I do not have the remote control?

The "No device photo" message usually appears when the TV is set to the USB or Media Player input source but no compatible files are detected. To exit this screen without a remote control,...

Read full answer